

HARVEST TEC MODEL 489 GULLWING LIGHT KIT FOR JOHN DEERE 9 SERIES PREMIUM ROUND BALERS

INSTALLATION INSTRUCTIONS

STEP 1: Mount the light bracket to the front Gullwing door support just below the Gas shock mounting brace. The wire side of the light bracket should be facing toward the door pivot point with the flange as close to the gas shock mounting brace as possible.



STEP 2: Mark the hole locations with the light bracket as a guide and use a 7/32" bit to drill pilot holes. Use the 1/4-20 x 3/4 thread cutting bolts to secure.

STEP 3: Once the bracket is attached to the support tube route the wiring harness along the support tube to the pivot point where it meets the cast bracket. Secure the wiring harness to the support tube with zip ties supplied in the parts bag.

STEP 4: Route the wiring harness over and behind the cast bracket and attach it to the tail light harness. Follow the tail light harness to the rear of the baler.

STEP 5: Remove the bolt that secures the bracket covering the light connections and remove the bracket.

STEP 6: Locate the wire connector that plugs into the back side of the red tail light. Using the splice connectors in the kit, attach the green or red wire from the light kit to the white wire (1519) on the baler connector. Then repeat the process to attach the black wire from the light kit to the black wire (050) on the baler connector.




STEP 7: Repeat steps 1-6 to install the light kit on the other/opposite gullwing door.

Wiring Instructions for the John Deere 9 Series Premium Baler

Light/Baler
Green or Red/White 1519
Black/Black 050

STEP 8: To test and operate the lights, turn on the baler's tail lights and flashers, and then turn the gullwing light kit switches on.

<u>Ref#</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	Light bracket	001-4882	2
2	Light	006-4882	2
3	Wiring harness	006-4883GW	2
4	Toggle Switch	006-2189	2
5	Cable ties-8"		20
6	Screws (1/4 x 3/4 self-tapper)		4
7	Splice connectors		4
8	Light grommet	006-4884	4

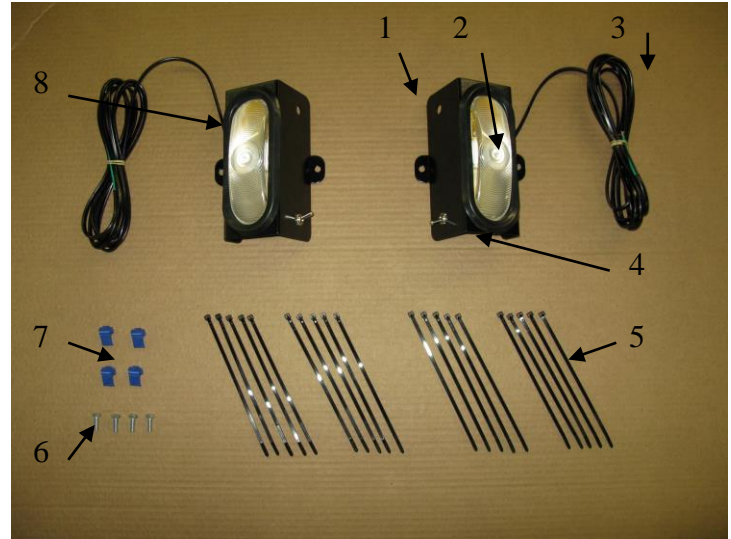

WARRANTY AND LIABILITY AGREEMENT

Harvest Tec, Inc. will repair or replace components that are found to be defective within 12 months from the date of purchase. Under no circumstances does this warranty cover any components which in the opinion of Harvest Tec, Inc. have been subjected to negligent use, misuse, alteration, accident, or if repairs have been made with parts other than those manufactured and obtainable from Harvest Tec, Inc.

Our obligation under this warranty is limited to repairing or replacing free of charge to the original purchase any part that in our judgment shows evidence of defective or improper workmanship, provided the part is returned to Harvest Tec, Inc. within 30 days of the failure. Parts must be returned through the selling dealer and distributor, transportation charges prepaid. It will be the purchaser's responsibility to provide proof of such purchase.

This warranty shall not be interpreted to render Harvest Tec, Inc. liable for injury or damages of any kind, direct, consequential, or contingent, to persons or property. Furthermore, this warranty does not extend to loss of crop, losses caused by delays or any expense prospective profits or for any other reason. Harvest Tec, Inc. shall not be liable for any recovery greater in amount than the cost or repair of defects in workmanship.

There are no warranties, either expressed or implied, of merchantability or fitness for particular purpose intended or fitness for any other reason.

This warranty cannot guarantee that existing conditions beyond the control of Harvest Tec, Inc. will not affect our ability to obtain materials or manufacture necessary replacement parts.

Harvest Tec, Inc. reserves the right to make design changes, improve design, or change specifications, at any time without any contingent obligation to purchasers of machines and parts previously sold.