


Parts Breakdown for Control Boxes and Wiring Harnesses

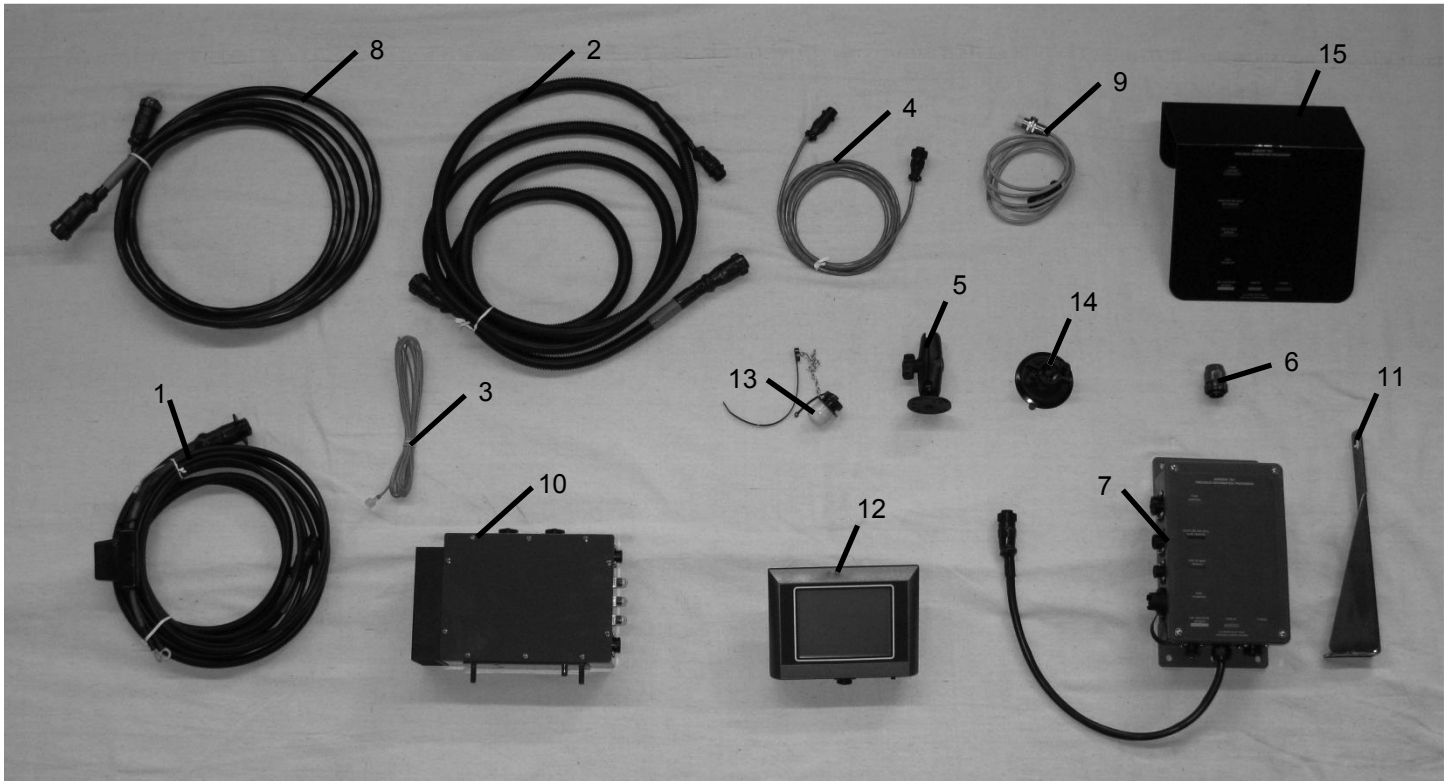

<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Power and comm. tractor	006-5650TM	1
2	Power and comm. baler	006-5650LSM	1
3	Keyed power lead	006-5650K	1
4	End of bale extension	004-7400BBEXT	1
5	Ram mount	001-2012H	1
6	Terminating resistor	006-5650Z	1
7	Precision information processor	006-5671LS2	1
8	Pump controller harness	006-5650F3M	1
9	End of bale sensor	006-7400	1
10	Pump controller	006-5672	1
11	End of bale sensor bracket	001-4648	1
12	Display	006-5670	1
13	Dust plug kit	006-5651PLUGS	1
14	Suction cup mount	001-2012SCM	1
15	PIP shield	001-5650X	1