

8. Power cable and main wiring harnesses installation

1. Locate the power harness
2. Connect the power harness (006-4640A) to the battery (12 volt) using the red wire with fuse to the positive side and the black wire to the negative
 - a. **The power harness must be connected to the battery!** The unit will draw more amps than convenience outlets can handle. Any modifications of the power harness will void systems warranty. **CONTACT HARVEST TEC BEFORE MODIFICATIONS.**
 - b. **This unit will not function on positive ground tractors.**
 - c. **If the unit loses power while operating it will not keep track of accumulated pounds of product used.**
3. The power harness (006-4640A) will run from the tractor battery to the hitch. The power harness (006-4660R) will connect to the tractor power harness (006-4640A) at the hitch. Run the Communication harness (006-4660N) from the cab to the hitch. This wire will connect to the Communication harness (006-4660S). These wires will run together to the Baler Mounted Processor (006-4671RB).
4. Connect Flow Meter (006-4725A) to the Baler Mounted Processor.
5. Connect Pump Harness (006-4660Z) to the Baler Mounted Processor.
6. If you have the optional Hay Indicator, connect it to the Baler Mounted Processor.
7. Attach moisture cable (006-4640G) to Baler Mounted Processor.
8. Install Baler Mounted Processor in pump plate using 5/16" lock, nut and flat washers.



NOTE: The plugs on the Baler Mounted Processor must face down. Failure to mount correctly will void systems warranty.

System wiring diagram

