

6. POWER CABLE AND MAIN WIRING HARNESS INSTALLATION

1. Locate the power harness.
2. Connect the power harness (006-4640A) to the battery (12 volt) using the red wire with fuse to the positive side and the black wire to the negative.



A) The power harness must be connected to the battery! The unit will draw more amps than convenience outlets can handle. Any modifications of the power harness will void systems warranty. **CONTACT HARVEST TEC IF MODIFICATION IS REQUIRED!**

B) This unit will not function on positive ground tractors.

C) If the unit loses power while operating it will not keep track of accumulated pounds of product used.

3. The power harness (006-4640A) will run from the tractor battery to the hitch. The power harness (006-4660K) will connect to the tractor power harness (006-4640A) at the hitch. Run the Communication harness (006-4660N) from the cab to the hitch. This wire will connect to the Communication harness (006-4660L). These wires will run together to the Baler Mounted Processor (006-4671SS).
4. Connect Flow Meter (006-4725A) to the Baler Mounted Processor.
5. Connect Pump Harness (006-4660Z) the Baler Mounted Processor.
6. If you have the optional Hay Indicator connect it to the Baler Mounted Processor.
7. Attach moisture cable (006-4640D) to Baler Mounted Processor.
8. Connect bale rate sensors cable (006-7202) to the Baler Mounted Processor.
9. Install Baler Mounted Processor in pump plate using 5/16" lock, nut and flat washers.

SYSTEM WIRING DIAGRAM

