

Baler Harness/Wiring Diagram with Baler Interface

- A. The **Baler Power/Communication Harness** (006-6650LS) will attach to the open port of the **Tractor Harness** (006-6650TM) and run back to the **Dual Channel Processor** (DCP-006-6671LS). Connect the large plug of the Baler Power/Communication Harness (006-6650LS) to the bottom (shorter side) of the DCP. Attach the **Baler Interface Harness** (006-6650VA) in between the short whip cable hardwired to the DCP and the main Power/Communication Harness (006-6650LS). Make sure Active Terminator removed from the top of the baler processor is attached to Baler Interface Harness (006-6650VA).
- B. Install green terminator (006-5650Z) to the port labeled **Modular Port** on the Pump Controller (006-5672).
- C. Attach moisture and bale rate harness (006-7303HL) and also end of bale harness (006-7400BBEXT) to the DCP (006-6671LS).
- D. Attach the Pump Control Harness (006-5650F3M) between the Pump Controller (006-5672) and the DCP (006-6671LS).
- E. Connect Keyed Power Extension harness (006-5650K) to a keyed power source.
 - a. When using Bluetooth Receiver (030-6672A) or optional Touch Screen Display (030-5670A). Connect either option to Communication Harness (006-6650TM) in place of the TSD Terminator (shown below) and connect the keyed power wire to a keyed power source on tractor.
- F. Note: the Optional Port and the Data Transfer Port are not used in this application.

