


GENERAL REFERENCE GUIDE

DESCRIPTION OF BUTTONS

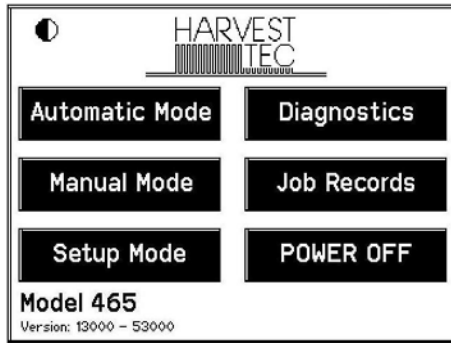

AUTOMATIC MODE This mode allows you to use all of the applicators features such as adjusting preservative application on the go and counting total pounds of product used.

MANUAL MODE Allows operator to manually turn pumps on and off. This mode also has moisture content displayed. Use this mode to prime pumps.

SETUP MODE This mode allows the operator to adjust bale rate and application rate settings and view or change tip selection. Changing to Metric units is also done in this mode.

DIAGNOSTICS Allows operator to automatically check performance and output of pumps as well as set the date and time and monitor system voltage.

JOB RECORDS Keeps track of up to 63 jobs with total product used, average moisture content, tons baled, highest moisture reading and date of baling.

POWER OFF This key turns the unit off. Press anywhere on the right side of the screen to turn the unit on.

HIGH AND LOW OUTPUT TIPS: OUTPUT RANGES IN POUNDS PER HOUR

MODEL NUMBER	462		463		465	
TIP SELECTION	LOW	HIGH	LOW	HIGH	LOW	HIGH
LOWER LIMIT	16	32	32	80	44	80
UPPER LIMIT	360	440	440	632	400	632

Divide the above numbers by your pounds per ton to determine your upper and lower tons per hour.

DIAGNOSTIC MODE

With tractor running and RPM's in operating range, use diagnostic mode to check all pump outputs. If readings are other than **OK**, refer to the diagnostic mode in the manual.

IMPORTANT DAILY CHECKS

Check the tips, clean off any debris.

Check torque of mounting hardware.

Run the DIAGNOSTIC MODE shown above daily.

For a complete listing of checks refer to the owners manual.

PRIMING THE PUMPS

WHEN PRIMING PUMPS FOLLOW ALL DIRECTIONS ON CHEMICAL LABEL FOR SAFETY EQUIPMENT TO BE USED!

Loosen or remove the tips and turn the pump on in manual mode. Reinstall tips when product starts to flow. Repeat for all other tips.

If the pumps fail to maintain there prime, the intake check valve (before pumps) will need to be replaced. If the pumps fail to prime using the above steps, the pump may need to be rebuilt.

FOR ALL OTHER TROUBLE SHOOTING SEE THE SECTION IN THE OWNERS MANUAL "TROUBLE SHOOTING".

FOR A COMPLETE LISTING OF ALL OPERATION AND INSTALLATION INSTRUCTIONS PLEASE SEE THE OWNERS MANUAL.

CHECK PRODUCT USED AGAINST BALES MADE OFTEN. ONLY THE OPERATOR OF THE APPLICATOR CAN ASSURE THAT THE CORRECT AMOUNT OF PRODUCT IS BEING APPLIED.

THIS CARD AND YOUR OWNERS MANUAL CAN ALSO BE FOUND AT WWW.HARVESTTEC.COM