

OWNER'S MANUAL

Model 462 **25 Gallon Automatic Preservative Applicator**



*Equipment and Products
for Quality Hay.™*

P.O. Box 63 • 2821 Harvey Street • Hudson, WI 54016
800-635-7468 • www.harvesttec.com

HARVEST TEC 462 TABLE OF CONTENTS

	<u>PAGE</u>
TOOLS NEEDED	3
INSTALLATION KIT REFERENCE CHART	3
INSTALLATION OF APPLICATOR	4-11
1. INSTALLATION OF PUMP PLATE BRACKET: CONVENTIONAL SQUARE	4
2. INSTALLATION OF PUMP PLATE: CONVENTIONAL AND THREE TIE	5
3. PLACEMENT OF SPRAY NOZZLE ASSEMBLY	6
4. INSTALLATION OF PLUMBING	7
5. INSTALLATION OF STAR WHEELS AND BALE RATE SENSORS	8-9
CONVENTIONAL SQUARE	8
THREE TIE	9
6. POWER CABLE AND MAIN WIRE HARNESS INSTALLATION	10
SYSTEM WIRING DIAGRAM	10
INSTALLATION OF CONTROLS	11
7. DESCRIPTION OF BUTTONS	12
8. FIRST TIME AND ANNUAL START UP INSTRUCTIONS	13
CHECKING AND PRIMING PUMPS	13
9. SETTING UP SYSTEM FOR INITIAL USE	14
APPLICATION RATE	14
BALING RATE	15
OPERATING INSTRUCTIONS	16-19
AUTOMATIC MODE	16
MANUAL MODE	17
JOB RECORDS	18
DIAGNOSTICS	19
COMMON QUESTIONS ABOUT THE 462	20
MAINTENANCE	21
WINTER STORAGE	21
TROUBLE SHOOTING CHECKS	22-23
BACKUP FUSE	23
WIRING DIAGRAMS	24-25
PARTS BREAKDOWN FOR 462	26-29
PUMP PLATE	26
STAR WHEEL AND HOSES	27
CONTROL BOX AND WIRING HARNESSES	28
4400AB UNIVERSAL CONVENTIONAL SQUARE BALERS	29
NOTES	30
TEMPLATE	31
WARRANTY STATEMENT	Back Page

INTRODUCTION

Congratulations on purchasing a Harvest Tec Model 462 applicator. This applicator is designed to apply Harvest Tec buffered propionic acid. The use of other products can cause application problems and damage to system components. The model 462 base kit includes the following parts: Pumps, Hose, Baler Mounted Processor, Touch screen display, Star wheels, and Miscellaneous Hardware. The applicator can be installed on most conventional balers with the proper installation kit. Before installing the unit on the baler, make sure you have the proper installation kit. (See the chart below.) If you are unsure about your installation kit contact your local dealership for specifications. For your convenience we have included a parts break down for the model 462 applicator. If something goes wrong, bring this manual into the dealership so they can order the correct parts for you. Ordering the correct part number is very important. It will save you time, money, and your crop.

INSTALLATION KIT REFERENCE CHART

<u>BALER MAKE</u>	<u>BALER MODEL</u>	<u>INSTALLATION KIT</u>
ALL MAKES	ALL MODELS	030-4400AB

TOOLS NEEDED

- Standard wrench set
- Standard socket set
- Standard screw driver or 5/16" nut driver
- Side cutter
- Hose cutter
- Crescent wrench
- Hammer
- Metal drilling and cutting tools
- Center punch

INSTALLATION OF APPLICATOR

1. INSTALLATION OF PUMP PLATE BRACKET AND PUMP PLATE FOR CONVENTIONAL SQUARE BALERS



Figure 1

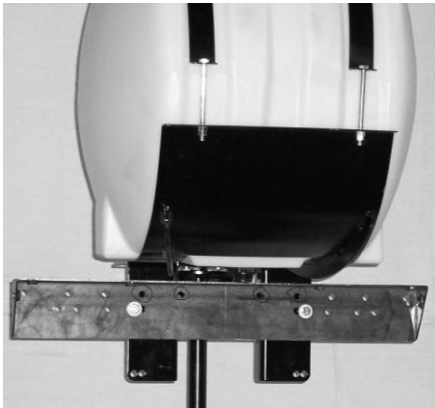


Figure 2



Figure 3

A. ALL BALERS

Locate the U-shaped bracket (001-4647). Remove the pump from the saddle and bolt the bracket on the saddle using the same bolts holes that were used by the pump. Bolt the bracket to the bottom of the saddle (Figure 1). Connect the pump plate mounting bracket (001-4646C), shown in Figure 2, using two 3/8 x 1 1/4 bolts, nuts, locks, and flat washers to the U shaped bracket (001-4647). Install the rest of the pump plate as shown in Figure 3. Attach the pump plate holder (001-4646D) to pump plate mounting bracket (001-4646C) using four 3/8 x 3/4 flange head bolts. **The Baler Mounted Processor and pump heads must be pointing down. Failure to mount the pump plate assembly in this specified direction will void all warranty of the Baler Mounted Processor and pumps.**



Figure 4



Figure 5

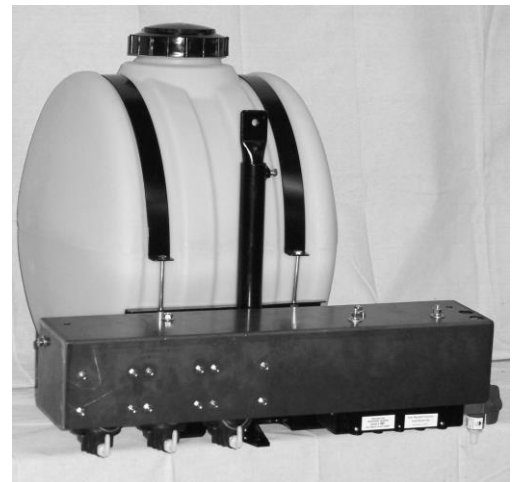


Figure 6

B. ALTERNATE LOCATION FOR GROUND CLEARANCE

Locate the U-shaped bracket (001-4647). Remove the pump from the saddle and bolt the bracket on the saddle using the same bolts holes that were used by the pump. Bolt the bracket inside of the saddle (Figure 4). Connect the pump plate mounting bracket (001-4646C), shown in Figure 5, using two 3/8 x 1 1/4 bolts, nuts, locks, and flat washers to the U shaped bracket (001-4647). Install the rest of the pump plate as shown in Figure 6. Attach the pump plate holder (001-4646D) to pump plate mounting bracket (001-4646C) using four 3/8 x 3/4 flange head bolts. **The Baler Mounted Processor and pump heads must be pointing down. Failure to mount the pump plate assembly in this specified direction will void all warranty of the Baler Mounted Processor and pumps.**

FOR ALL BALERS THREE TIE AND CASE/HESSTON INLINE BALERS

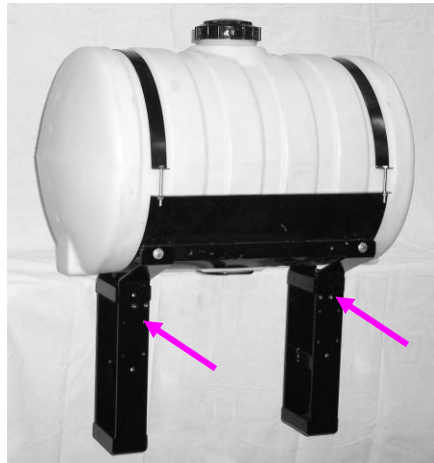


Figure 1

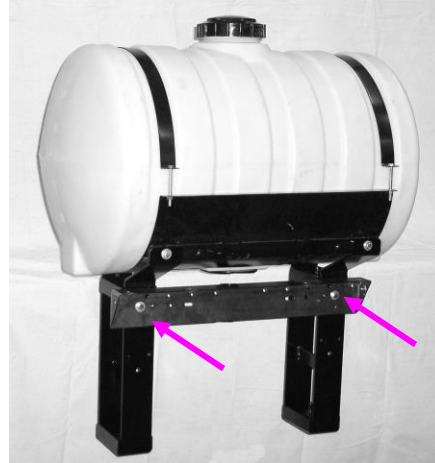


Figure 2



Figure 3

1. Locate the two mounting holes as shown in Figure 1.
2. Connect the pump plate mounting bracket (001-4646C), shown in Figure 2, using two 3/8 x 1 1/4 bolts, nuts, locks, and flat washers to the saddle.
3. Attach the pump plate holder (001-4646D) to pump plate mounting bracket (001-4647) using four 3/8 x 3/4 flange head bolts. Figure 3.

The Baler Mounted Processor and pump heads must be pointing down. Failure to mount the pump plate assembly in this specified direction will void all warranty of the Baler Mounted Processor and pumps.

3. PLACEMENT OF SPRAY NOZZLE ASSEMBLY

4400AB FOR ALL BALERS WITHOUT A SHIELD

Conventional baler with gathering forks.


1. Mount the left hand nozzle strap (it has an elbow fitting and a silver tip) so that it is approximately 80% across the width of the pick-up head. Example: if the head is 60" wide, locate the nozzle 48" from the right side of the head (60"x80".)
2. Mount the right hand nozzle strap (it has a tee fitting and a silver tip) so that it is approximately centered on the pickup head.
3. Place the two auxiliary nozzle straps in between the first two straps.
4. Bend the nozzle bar in so that the tip is pointed in toward the bottom of the gathering chamber and about 16" above the sheet metal base of the chamber. Twist the nozzle so the tip is tilted 45 degrees from horizontal.
5. Attach hoses to nozzle straps.

Clear hose to silver tips.

Green hose to green tip.

Blue hose to blue tip.

Secure with hose clamps.

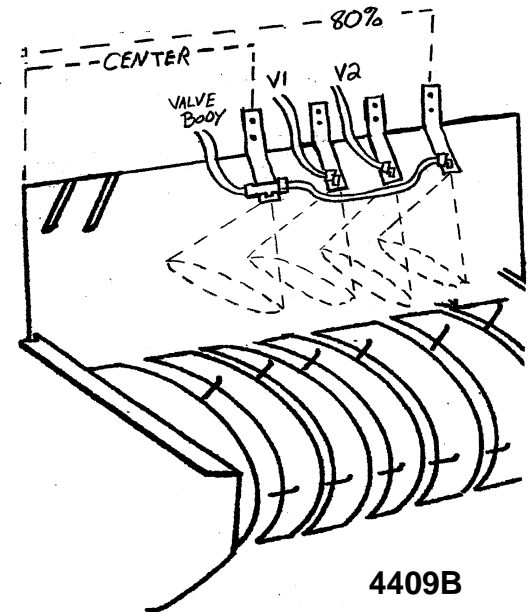

4400AB FOR ALL BALERS WITH A SHIELD

You will need to use the existing shield and add elbows, stainless steel nozzle bodies, and the appropriate tips to complete the shield.

4. INSTALLATION OF PLUMBING

A. Intake

Use the 003-EL3412 on the bottom of the tank to route 1/2" line (002-9001) to the 003-A1212 fitting on the ball valve already attached to the pump plate. Attach hose clamps (003-9003) on both of the fittings.

B. Discharge for Conventional Square Balers

The three-1/4" hose assembly will be used to attach the pumps to the spray shield. The pump order is from closest to the filter bowl 1,2 and 3. Pump 1 will attach to the main nozzles that have two tips – attach clear hose to silver tips. Pumps 2 and 3 will attach to the auxiliary nozzles, pump 2: green hose to green tip, pump 3: blue hose to blue tip.

C. Discharge for Three Tie Balers

The three-1/4" hose assembly will be used to attach the pumps to the spray shield. The pump order is from closest to the filter bowl 1,2 and 3. Pump 1 will attach to the main nozzles that have two tips – attach clear hose to white tips. Pumps 2 and 3 will attach to the auxiliary nozzles, pump 2: green hose to green tip, pump 3: blue hose to red tip.


5. INSTALLATION OF STAR WHEELS AND BALE RATE SENSORS

The pair of star wheels will need to mount on the bottom side as close to the front of the bale chute as possible and at least 3/8" away from any metal. They will need to maintain a safe distance away from the twine.


The star wheels will require two holes to be drilled per block, when drilling make sure to keep the wheel square to the bale chamber. Any angle will cause stress on the wheel and will eventually cause the wheel to work itself out of the block. Some balers may require a notch cut on the bottom of the bale chamber to mount the star wheels as close to the front of the chamber as possible. Use the template in back of manual to aid in installation.

Use the supplied bolts and place the carriage head inside of the bale chamber followed by lock and nut. Next attach the star wheels to the bolts followed by flat washer, lock washer and nut. The right side star wheel will have the bale rate sensor bolted to the bottom of the block. The sensors need to be no more than 1/4 inch away from the star wheel itself. The cable will attach to the BMP at the bale rate sensor port.

Remove the four screws holding the plastic cover and attach one wire eye loop per star wheel through the grommet and tighten down with the nut attached to the swivel. Reinstall the cover and run the wires up to the pump plate. You will need to use zip ties to attach the wires so as to not interfere with normal baler use.

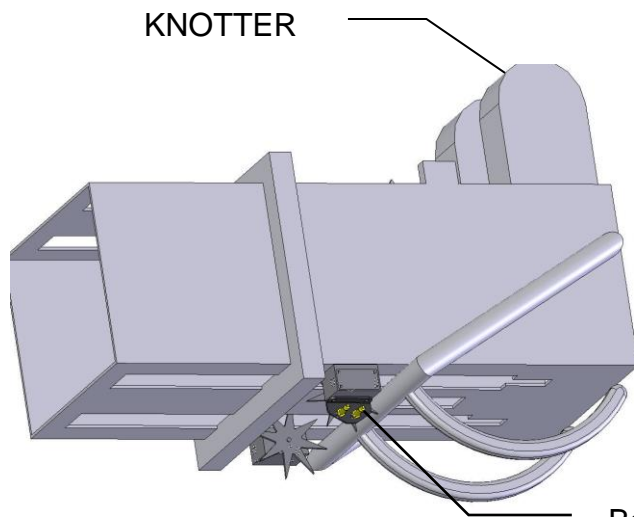

CASE IH AND NEW HOLLAND BALERS

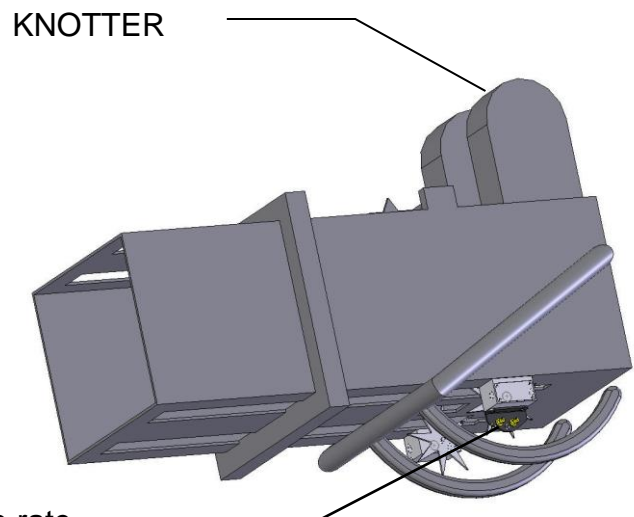

AGCO AND JOHN DEERE BALERS


FOR THREE TIE BALERS

The pair of star wheels will need to mount on the top as close to the knotters as possible and at least 3/8" away from any metal. They will need to maintain a safe distance away from the twine.


The star wheels will require two holes to be drilled per block, when drilling make sure to keep the wheel square to the bale chamber. Any angle will cause stress on the wheel and will eventually cause the wheel to work itself out of the block. A template can be found in the back of the manual to help with the placement of the star wheel.

Use the supplied 5/16" allen head carriage bolts and place the carriage head inside of the bale chamber followed by lock and nut. Next attach the star wheels to the bolts followed by the twine diverters 001-4644 and 001-4645. Finally secure the entire block using nuts, locks, and flat washers. The twine diverter with the bale rate sensors needs to be mounted on the right side of the baler when facing the back.

Remove the four screws holding the plastic cover and attach one wire eye loop per star wheel through the grommet and tighten down with the nut attached to the swivel. Reinstall the cover and run the wires up to the pump plate. You will need to use zip ties to attach the wires so as to not interfere with normal baler use.

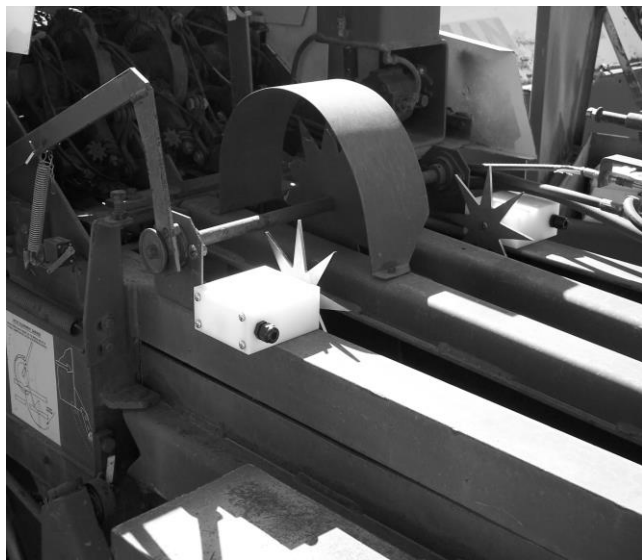

Freeman
Balers

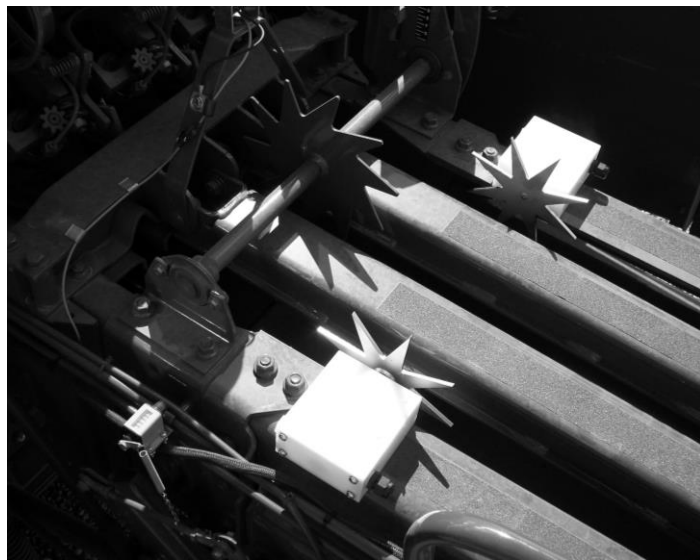

Hesston and New
Holland Balers

6. POWER CABLE AND MAIN WIRING HARNESS INSTALLATION

1. Locate the power harness.
2. Connect the power harness (006-4640A) to the battery (12 volt) using the red wire with fuse to the positive side and the black wire to the negative.




A) The power harness must be connected to the battery! The unit will draw more amps than convenience outlets can handle. Any modifications of the power harness will void systems warranty. **CONTACT HARVEST TEC IF MODIFICATION IS REQUIRED!**

B) This unit will not function on positive ground tractors.

C) If the unit loses power while operating it will not keep track of accumulated pounds of product used.

3. The power harness (006-4640A) will run from the tractor battery to the hitch. The power harness (006-4660K) will connect to the tractor power harness (006-4640A) at the hitch. Run the Communication harness (006-4660N) from the cab to the hitch. This wire will connect to the Communication harness (006-4660L). These wires will run together to the Baler Mounted Processor (006-4671SS).
4. Connect Flow Meter (006-4725A) to the Baler Mounted Processor.
5. Connect Pump Harness (006-4660Z) the Baler Mounted Processor.
6. If you have the optional Hay Indicator connect it to the Baler Mounted Processor.
7. Attach moisture cable (006-4640D) to Baler Mounted Processor.
8. Connect bale rate sensors cable (006-7202) to the Baler Mounted Processor.
9. Install Baler Mounted Processor in pump plate using 5/16" lock, nut and flat washers.

SYSTEM WIRING DIAGRAM

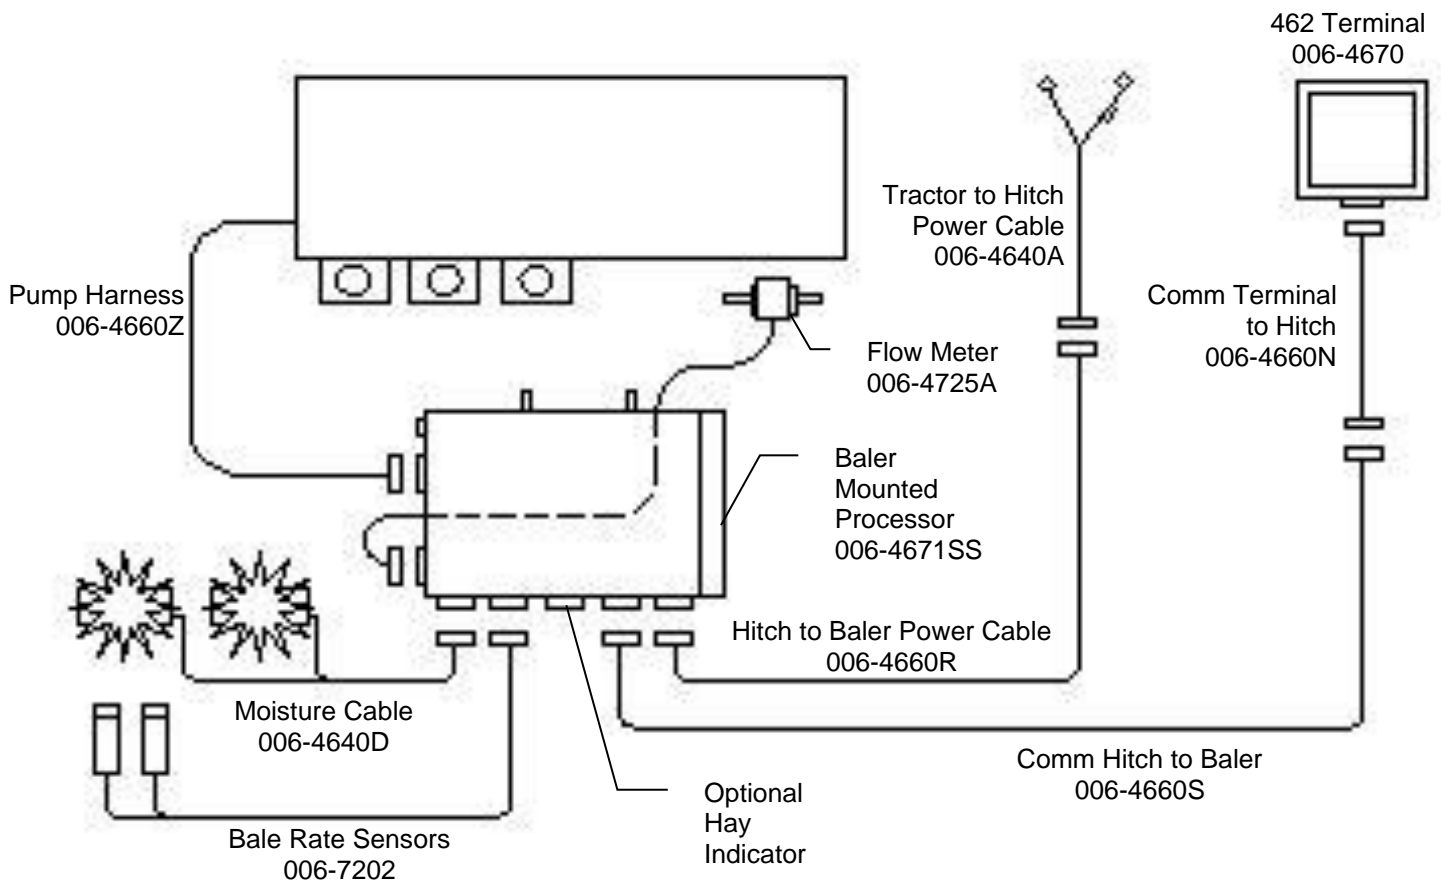

INSTALLATION OF CONTROL

INSTALL THE MOUNTING BRACKET FOR THE CONTROL IN THE CAB.


Use the four mounting screws to mount the round base in a convenient area in your cab or on your fender. If unit is mounted on the fender it will need to be removed at night and stored in a clean and dry area.

Use the ram mount swivel-positioning nut to tighten the entire assembly. Adjust it so that you can view the entire screen and be able to use the touch screen without interfering with other tractor functions.

Connect communication wire (006-4660N) to the bottom of the terminal.

7. DESCRIPTION OF BUTTONS

This system is calibrated for use with Harvest Tec buffered propionic acid. The use of other products can cause application problems and damage to system components. It is designed to apply rates of 16 to 300 pounds of acid per hour and read moisture levels of 10 to 32 percent. The 462 monitor will allow you to set your bale weight, single bale formation time, moisture levels and application rates. The Automatic Mode option will automatically adjust the application rates as the moisture level changes. Manual Mode will allow you to control the application rates on the go. To turn the display on, press anywhere on the right side of the screen followed by pushing the "Press to Start" key.

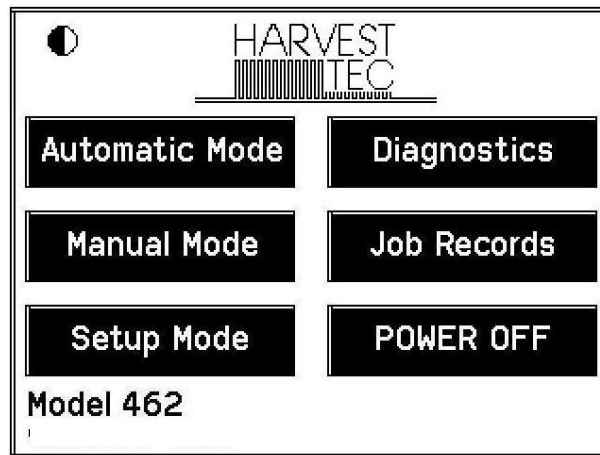

AUTOMATIC MODE This mode allows you to use all of the applicators features such as adjusting preservative application on the go and counting total pounds of product used.

MANUAL MODE Allows operator to manually turn pumps on and off. This mode also has moisture content displayed. Use this mode to prime pumps.

SETUP MODE This mode allows the operator to adjust bale rate and application rate settings and view or change tip selection.

DIAGNOSTICS Allows operator to automatically check performance and output of pumps as well as set the date and time.

JOB RECORDS Keeps track of up to 63 jobs with total product used, average moisture content, tons baled, and date of baling.

POWER OFF This key turns the unit off. Press anywhere on the right side of the screen to turn the unit on.




CONTRAST This button is your contrast control. Press this button to lighten the screen. When the screen reaches its lightest point, pressing again will return to the darkest setting. Fine tuning the contrast can be accomplished by turning the knob on the bottom right side of the enclosure.

8. FIRST TIME AND ANNUAL START UP INSTRUCTIONS

AFTER INSTALLATION THE UNIT MUST BE CHECKED OUT BEFORE FIELD OPERATION!!

CHECKING AND PRIMING THE PUMPS

1. Put 10 gal of water in tank and turn main ball valve on.
2. Inspect for any leaks or drips at this time. If any are found tighten or replace area or fitting.
3. **Turn controller on** (push anywhere on the screen).
4. Press the SETUP MODE key. (**See page 15**) **Select Sensors are: OFF** to disable bale rate sensors. Make sure the AVG Bale Weight is 100 lbs and the AVG Baler Length is 36 in. and EST Baling Time is 10 sec. Press the MAIN MENU key to return to the opening screen.
5. Press the MANUAL MODE key.
6. The screen shown below should appear.
7. The rates listed below are for Harvest Tec buffered propionic acid. Other products will need to be collected and weighed to assure proper performance is achieved.

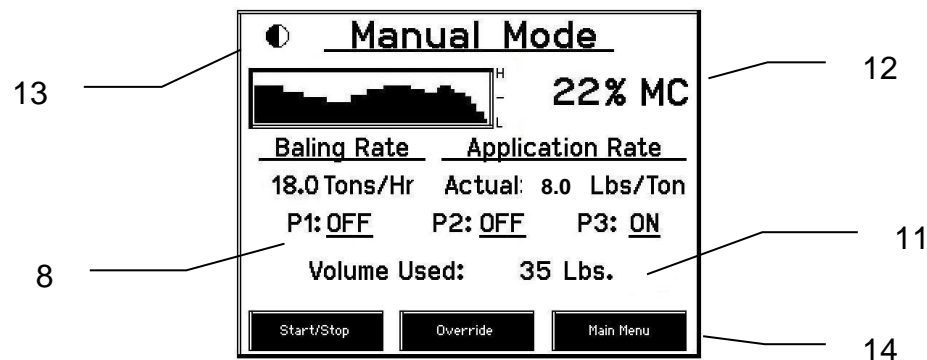

8. NOTE: THE SYSTEM COMES WITH THE TIPS ALREADY INSTALLED ON THE SPRAY SHIELD. FOR TWO-TIE BALERS USE THE CONVENTIONAL TEST BELOW, FOR THREE-TIE USE THE THREE-TIE TEST BELOW.

- **For Conventional Square balers:** Turn pump 1 on (P1). To do this press the underlined area on the screen which says OFF. The application rate should then read between 1.2 – 1.6 Lbs/Ton. Ideally, at 13.5 volts, the rate would read 1.4 Lbs/Ton.
- Repeat the process for pumps 2 and 3 (P2 and P3). The application rate should read between 3.6 – 5.0 Lbs/Ton and 6.7 – 9.3 Lbs/Ton respectively. Ideally, at 13.5 volts, the rate for pump 2 would be 4.3 Lbs/Ton; pump 3 would be 8.0 Lbs/Ton.
- **For Three Tie:** Turn pump 1 on (P1). To do this press the underlined area on the screen which says OFF. The application rate should then read between 1.8 – 2.6 Lbs/Ton. Ideally, at 13.5 volts, the rate would read 2.2 Lbs/Ton.
- Repeat the process for pumps 2 and 3 (P2 and P3). The application rate should read between 3.6 – 5.0 Lbs/Ton and 9.7 – 13.4 Lbs/Ton respectively. Ideally, at 13.5 volts, the rate for pump 2 would be 4.3 Lbs/Ton; pump 3 would be 11.4 Lbs/Ton.

9. This process will also be used to prime the pumps whenever needed.


10. While running pumps check for a good spray pattern out of the respective tips and verify that no parts of the system are leaking.
11. While doing these tests the Volume Used on the bottom of the screen should be counting up, this verifies that the flow meter is functioning.
12. In order to check moisture reading, have an assistant grab the star wheels. The moisture should read between 17-25 percent depending on how moist their hands are.
13. This button is your contrast control. Press this button to lighten the screen. When the screen reaches its lightest point, pressing again will return to the darkest setting.
14. Press the MAIN MENU key to return to the initial start up screen.

9. SETTING UP SYSTEM FOR INITIAL USE

IN THIS MODE YOU WILL SETUP YOUR INITIAL APPLICATION RATE AND BALING RATE

APPLICATION RATE


After pushing the SETUP MODE key in the Main Menu screen, the top screen should appear:

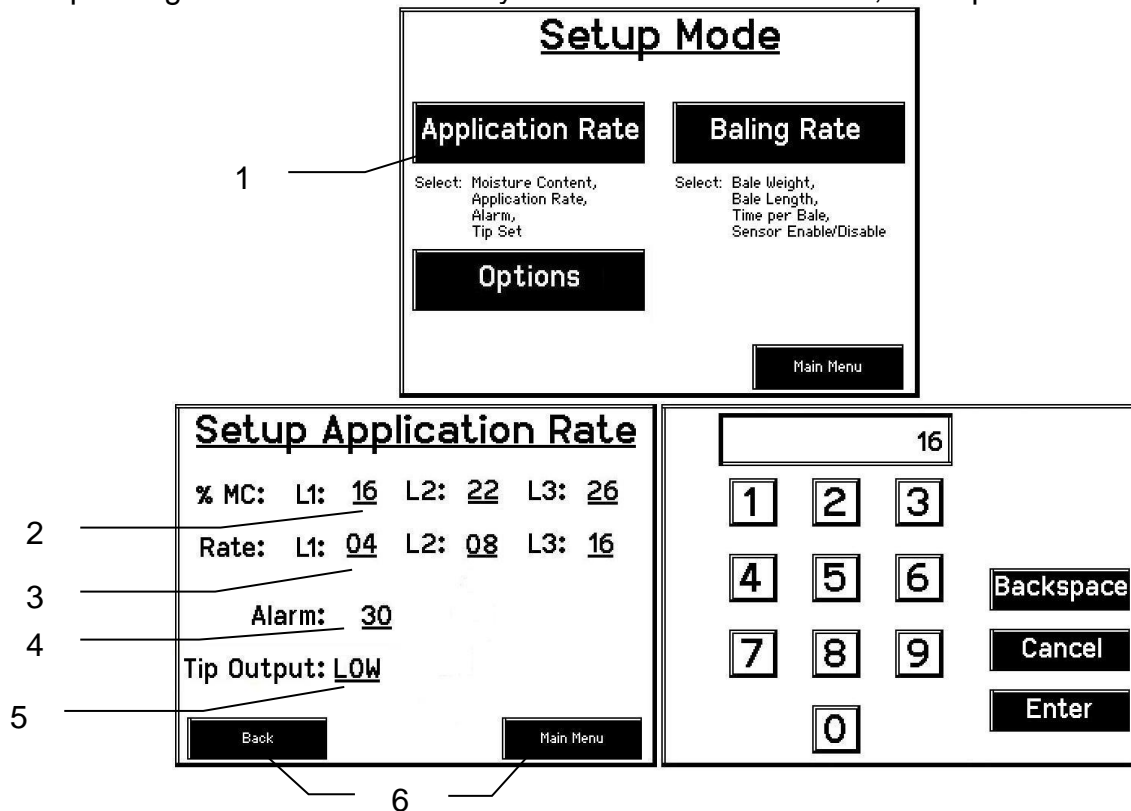

1. On this screen the operator will press the APPLICATION RATE key. Once pressed the SETUP APPLICATION RATE screen will be shown. (bottom left picture)
2. Press any of the underlined numbers to the right of %MC to adjust their figures. The key pad shown on the bottom right will display. Remember level 1 must be lower than level 2 and level 2 must be lower than level 3. Harvest Tec products recommend set points of 16, 22, and 26 % MC levels. These are preset from the factory. Press ENTER to return to previous screen.
3. To change rate of chemical application press any of the underlined numbers to the right of the RATE:. The key pad shown on the bottom right will display. Remember level 1 must be lower than level 2 and level 2 must be lower than level 3. Harvest Tec products recommend rates of 4,8, and 16 lbs/ton. These rates are preset from the factory. Press ENTER to return to previous screen. **IT IS THE OPERATORS RESPONSIBILITY TO FOLLOW THE RECOMMENDATIONS OF THE PRESERVATIVE. ONLY THE OPERATOR CAN APPLY THE PROPER RATE.**
4. To set the alarm press on the underlined area. Set the level at which you want the alarm to activate. To turn the alarm off, set level above 35.
5. The TIP OUTPUT should always read LOW for small square balers; only use HIGH for three tie balers. The TIP OUTPUT key allows the operator to select between high and low outputs.
6. Next press the BACK key found on the bottom left hand of the screen to return to the previous screen or press MAIN MENU key on the bottom right hand of the screen to return to the opening screen.

BALING RATE

After pushing the SETUP MODE key in the Main Menu screen, the top screen should appear:

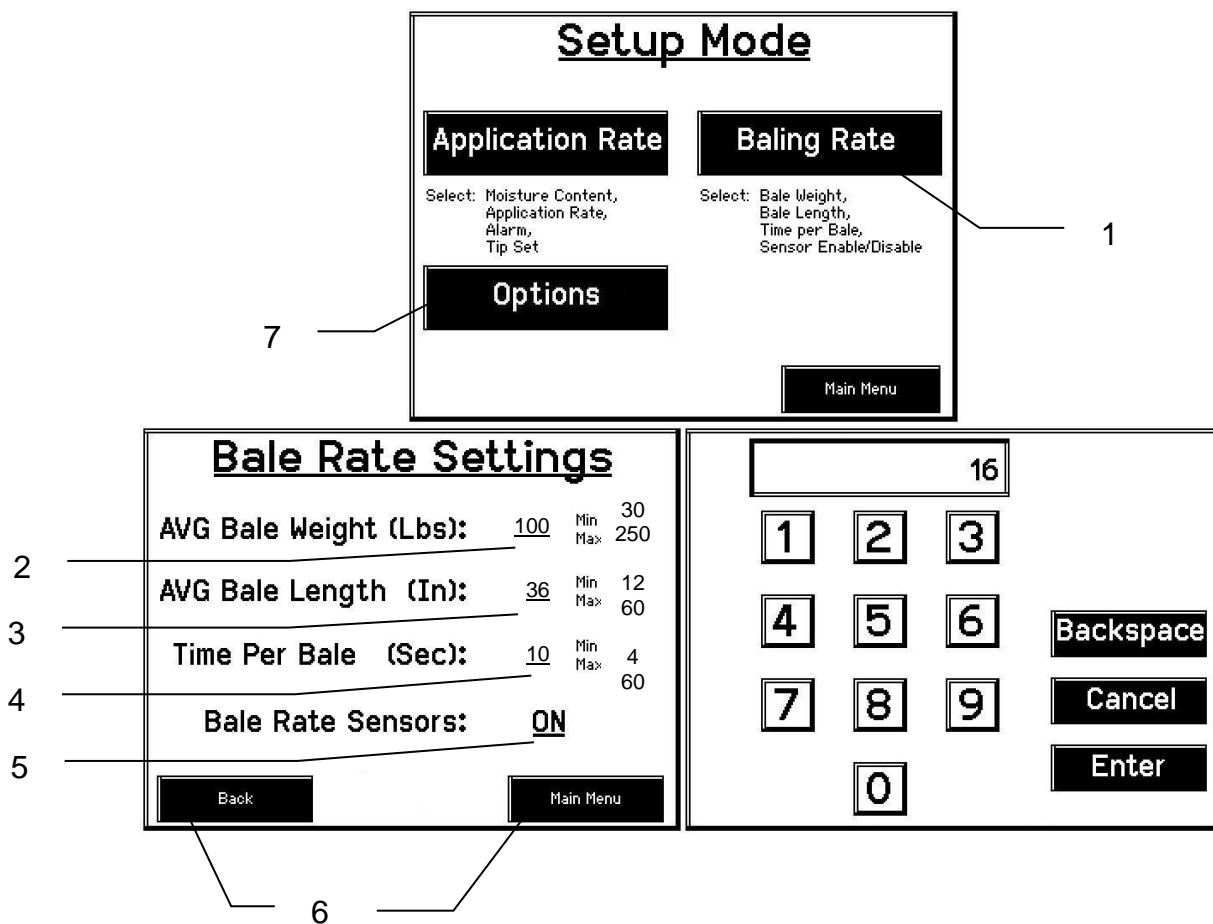


1. On this screen the operator will press the BALING RATE key. This screen is shown on the bottom left picture shown above.
2. Press the underlined number to the right of AVG Bale Weight (Lbs): to adjust the weight of your bales. The key pad shown on the right side will display. Press any number combination in this screen within the min/max limits. Press the ENTER key to save this information. The information will remain until it is changed again.
3. Press the underlined number to the right of AVG Bale Length (In): to adjust the length of your bales. The key pad shown on the right side will display. Press any number combination in this screen within the min/max limits. Press the ENTER key to save this information. The information will remain until it is changed again.
4. Press the underlined number to the right of EST Baling Time (Sec): to adjust the time it takes to make a bale. The key pad shown on the right side will display. Press any number combination in this screen within the min/max limits. Press the ENTER key to save this information. The information will remain until it is changed again.
5. If the unit will be run with the bale **sensors on**, then the bale weight and length will need to be inputted. When the **sensors are:** on, the applicator will calculate your tons per hour. When the **Sensors are:** off (as shown above), a constant tons per hour (your inputed bale weight and time) will be used. Press the underlined word to toggle between on or off.
6. Next press the BACK key found on the bottom left hand of the screen to return to the Setup Mode screen, or press the MAIN MENU key on the bottom right hand of the screen to return to the opening screen.
7. Press the OPTION key to adjust the touchscreen between metric and standard units and languages

OPERATING INSTRUCTIONS

Auto mode will automatically apply product based on both hay moisture content sensed by the star wheels and the operator's presets. (See SETTING UP SYSTEM FOR INITIAL USE to change any of these settings). **Manual mode will apply preservative to the hay at a fixed rate regardless of the moisture content.**

AUTOMATIC MODE


After pushing the AUTOMATIC MODE key in the Main Menu screen, the following screen should appear:

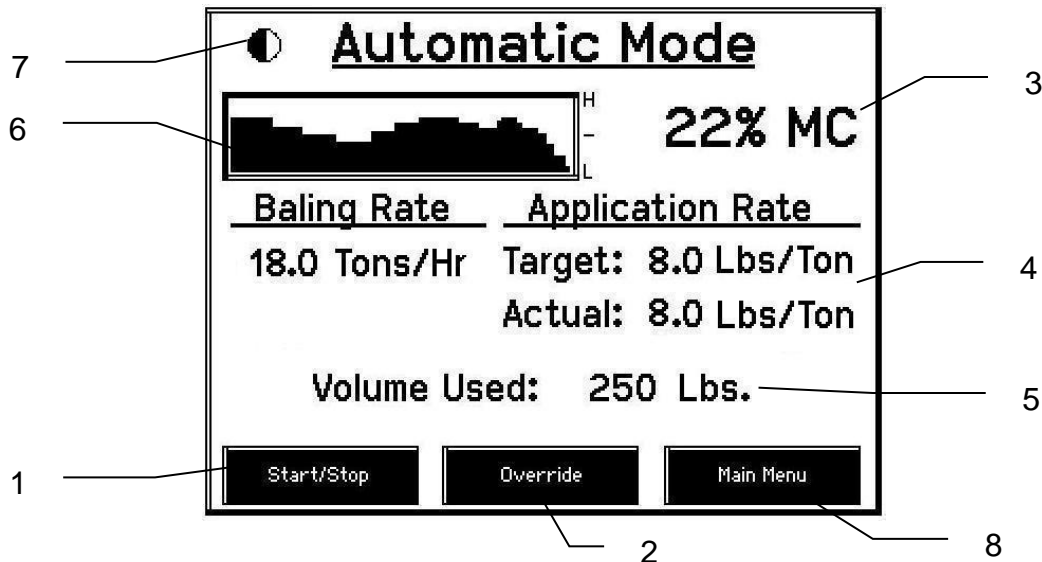

1. Push the START/STOP key to pause the unit while in operation.
2. Push the OVERRIDE key to turn on all three pumps at the same time for full output of the system. Use this mode when going through a short area of wet crop.
3. The moisture content is shown in the upper right hand corner.
4. Baling Rate and Application Rate are shown in the middle. The operator sets the target application rate in the setup mode; the actual rate should be within +/- one pound when running. The baling rate is also set in Setup Mode.
5. Volume used shown at the bottom of the screen will show accumulated pounds of preservative used on the go. This number will reset at power down, but remains in the job record screen. **NOTE: Initial start-up requires pressing the New Job key in the Job Records screen in order for Volume Used accumulation to be recorded. This only needs to be done once on initial start-up of system and not every time the system is started for operation.** (See JOB RECORDS screen)
6. The graph shows the moisture trend from the past 90 seconds in 3 second intervals.
7. This button is your contrast control. Press this button to lighten the screen. When the screen reaches its lightest point, pressing again will return to the darkest setting.
8. Press the MAIN MENU key to return to the opening screen.

MANUAL MODE

After pushing the MANUAL MODE key in the Main Menu screen, the following screen should appear:

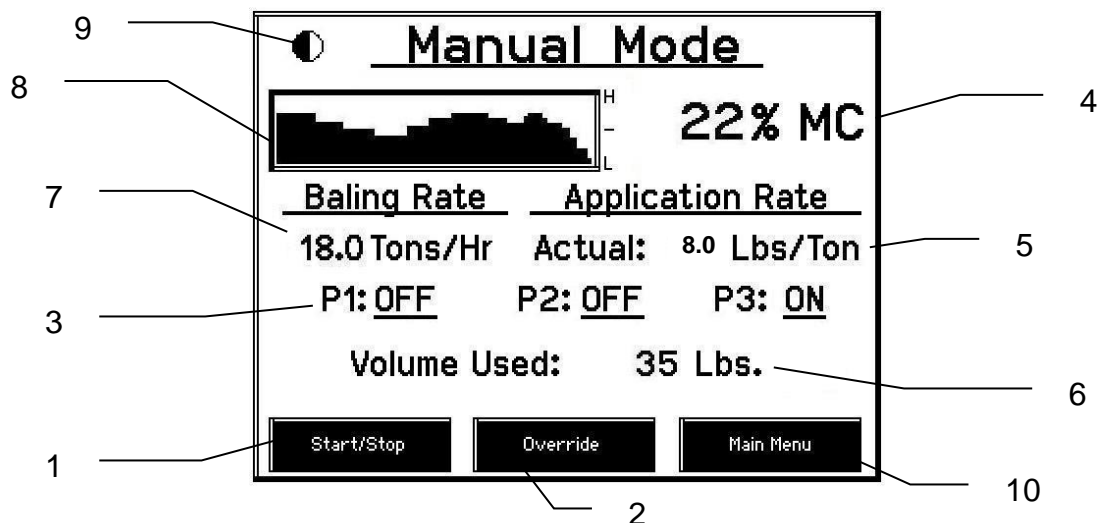

1. Push the START/STOP key to pause the system while in operation.
2. Push the OVERRIDE key to turn on all three pumps at the same time for full output of the system. Use this mode when going through a short area of wet crop.
3. In Manual Mode you can turn the pumps on or off by pressing the underlined area next to the pump numbers. In Manual Mode (regardless of tons per hour, moisture, or bale weight) the outputs of the pumps are fixed rates as follows:

Pump outputs for Three Tie (High):

Pump 1 = 40 LBS/HR
Pump 2 = 75 LBS/HR
Pump 3 = 205 LBS/HR


Conventional Square (Low):

Pump 1 = 25 LBS/HR
Pump 2 = 75 LBS/HR
Pump 3 = 145 LBS/HR

4. The moisture content is shown in the upper right hand corner.
5. Baling rate and Application rate are shown in the middle. The output of a pump can be checked by dividing the preset output (shown in step 3, above) by the displayed baling rate. For example, if you are running pump three, by itself for conventional square, your output is 145 lbs/hr. Given the baling rate shown on the above screen (18 tons/hr), the application rate should be about 8.0 lbs/ton (145 lbs/hr divided by 18 tons/hr).
6. Volume used shown at the bottom of the screen will show accumulated pounds of preservative used on the go. This number will reset at power down, but remains in the job record screen. **NOTE: Initial start-up requires pressing the New Job key in the Job Records screen in order for Volume Used accumulation to be recorded. This only needs to be done once on initial start-up of system and not every time the system is started for operation.** (See JOB RECORDS on the following page)
7. The baling rate is set in the Setup Mode menu.
8. The graph shows the moisture trend from the past 90 seconds of baling time (one reading every three seconds).
9. This button is your contrast control. Press this button to lighten the screen. When the screen reaches its lightest point, pressing again will return to the darkest setting
10. Press the Main Menu key to return to the opening screen.

JOB RECORDS

After pushing the JOB RECORDS key in the Main Menu screen, the following screen should appear:

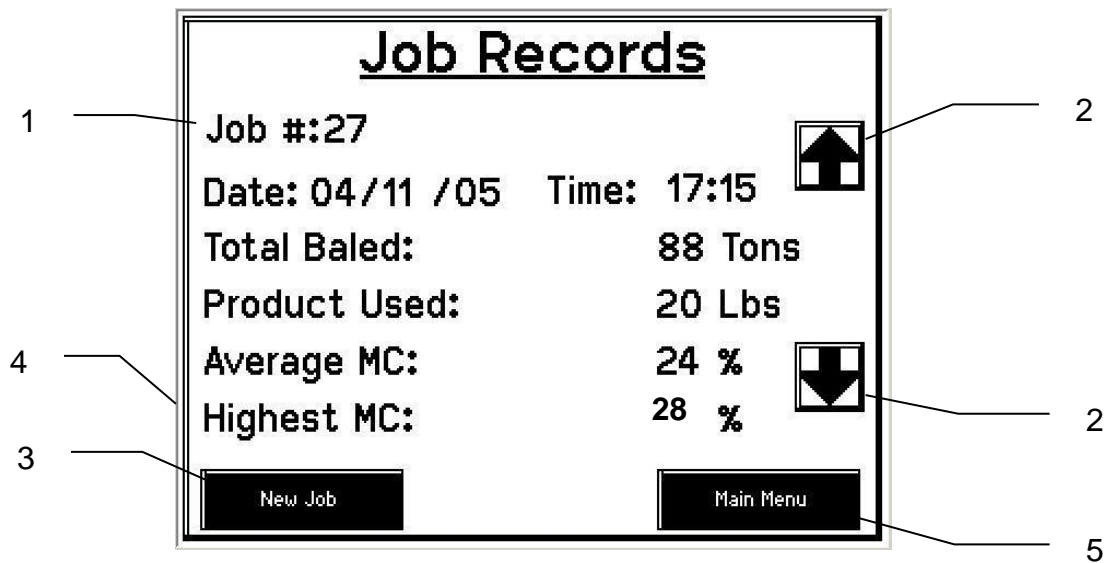


1. The job number will be displayed in the top left corner and will move to the next job when the NEW JOB key is pressed. The current job being viewed will always read "Job #: 0". Product used and average moisture content will be reset when the NEW JOB key is pressed. The job records screen will store up to 63 jobs and will allow you to access previous jobs by using the up and down arrows found on the right side of the screen.
2. Scrolling through previous jobs is done by pressing the UP or Down keys.
3. **Every time the NEW JOB key is pressed the accumulated pounds on auto and manual modes will be reset to zero.** After 63 jobs have been stored, the next time the NEW JOB key is pressed the system will start over with job one and the old job will be replaced.
4. Highest moisture content will display moistures up to 33%. Any moisture recorded higher than 33 % will register only as 99%.
5. To return the opening screen, press the MAIN MENU key.

NOTE: Initial start-up requires pressing the New Job key in the Job Records screen in order for Volume Used accumulation to be recorded. This only needs to be done once on initial start-up of system and not every time the system is started for operation.

DIAGNOSTICS

After pushing the DIAGNOSTICS key in the Main Menu screen, the following screen should appear:

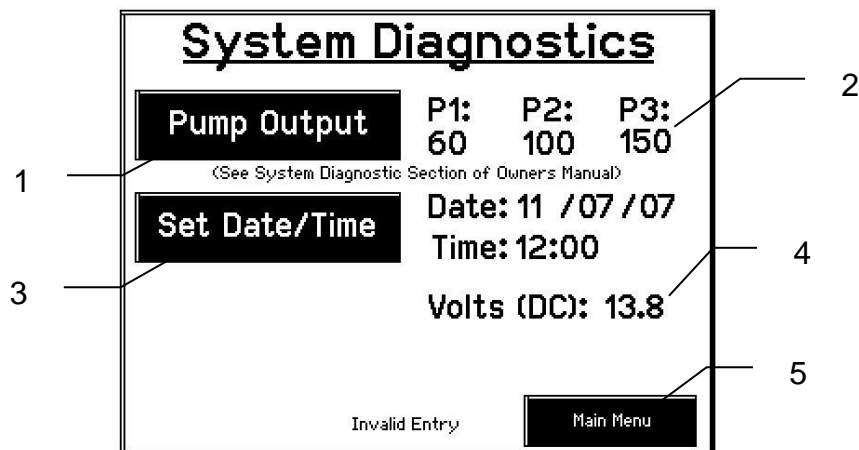

The diagnostic mode will automatically check the pump output and performance of the three pumps. It is recommended to use this mode daily to ensure proper system performance.

Acceptable ranges for output:

Low output tips:

Pump 1 = 21 - 30 LBS/HR

Pump 2 = 64 - 88 LBS/HR

Pump 3 = 123 - 170 LBS/HR

High output tips:

Pump 1 = 34 - 47 LBS/HR

Pump 2 = 64 - 88 LBS/HR

Pump 3 = 175 - 240 LBS/HR

- Once the screen is displayed, press the PUMP OUTPUTS key.
The machine will cycle all three of the pumps for 15 seconds. After the cycles are complete, the system will display a number next to each pump number.
- If the system displays within the listed range.**
 - The system is operating correctly.**If the system displays higher than the listed range, some common problems could be:**
 - Leak in line. Inspect lines thoroughly.
 - Tip missing. Check for lost or broken tip on spray shield.
 - Tip worn. Replace tip.
 - High tractor voltage.**If the system displays lower than the listed range, some common problems could be:**
 - Make sure there is preservative in the tank and ball valve is in the open position.
 - Air in lines. Pump will not prime. Check for leak in lines, or defective check valve.
 - Pump is working, but not producing desired output. Pump needs to be rebuilt.
 - Main filter plugged. Check filter by tank and clean if necessary.
 - Tip or tip screen plugged. Check both tip and tip screen and clean if necessary.
 - Kink in hose. Straighten or replace hose.
 - Voltage from tractor is low. Check power cord with multimeter for 12 volts at baler mounted processor. Clean connections on battery. Dielectric grease connections at baler mounted processor and at hitch connection.
 - Pump is defective. Rebuild pump if motor runs smoothly. Replace pump if motor is bad.
 - Defective flow meter. Only if all pumps run, product is applied, and all numbers read 0.
- To set date and time, press the SET DATE/TIME key. In the next screen enter the date (month, day, year format) followed by the time. When done press the ENTER key. NOTE: The clock uses military (or 24 hour) time.
- The voltage should be between 12.0 to 14.5 volts for the system to work properly. If voltage is not in this range check all power cord connections and the tractors charging system.
- When done in this mode, press the MAIN MENU key.

COMMON QUESTIONS ABOUT THE 462

1. How do I turn the system on/off?

To turn the system ON simply press anywhere on the right side of the screen followed by pushing the press to start key. To turn the system OFF, return to the Main Menu screen and press the POWER OFF key.

2. How to get in the LBS/TON, MC%, and TONS/HR screens?

In the Main Menu press the SETUP MODE key. From this screen you can change your application rates and how much product is applied. See SETTING UP FOR INITIAL USE for a detailed explanation of this process.

3. The unit is stuck in the Application Rate screen.

In the Application Rate screen, level 1 must be less than level 2, and level 2 must be less than level 3. For example, if level 1 is set at 16, level 2 must be set at 17 or higher, and level 3 must be set higher than level 2.

4. How does OVERRIDE work?

Override turns on all three pumps at full output. The pumps will remain at full output until the operator turns these pumps off by pressing the OVERRIDE key again.

5. The flow meter reading is more or less than the programmed level set in the box.

Some variation in flow meter readings compared to the programmed set point is normal due to factory tolerances on the pump motors as well as varying tractor voltages inputted to the control box. The flow meter reading is an accurate measure of how much product is actually being applied. The set points then will need to be adjusted if you want to attain a different flow meter reading.

6. Why don't all the pumps turn on even at higher application rates?

The selections of what pumps turn on when are automatically controlled by the control box's flow rate look up chart. Thus, not all the pumps turn on at once and the combination of what pumps turn on when is automatically controlled by the software. If you want to make sure all three pumps are working, go to the Diagnostics screen and run pump outputs. .

7. The moisture content displays "LO" or "HI" all the time.

When the moisture content display does not change frequently while baling, there is likely a faulty star wheel connection. One of the first places to check is inside the white star wheel block. Check to see if the electronic swivel is in the star wheel shaft and check to see that the star wheel shaft is not working out of the block. Also, check all star wheel wires and connectors to see if there is a continuity or grounding problem.

8. Should the battery connections be removed before jump starting or charging a battery?

Yes. Anytime the tractor will have voltage going up rapidly the connections should be removed.

MAINTENANCE

1. Clean the tip strainers and main strainer every 10 hours of operation or more frequently if required.
2. Depending on the product being used, the system may need to be flushed with water at a regular interval (consult with manufacturer of the chemical.) If Harvest Tec product is being used, flushing is not necessary.
3. Although the pump can run dry, extended operation of a dry pump will increase wear. Watch the preservative level in the tank.
4. Cover the automatic cab terminal on open station tractors if left outside.
5. Pump performance may start to decline after 400 hours (1500 acres on conventional balers) of use. Rebuilding pumps is a simple procedure if the motor is not damaged. Order pump rebuilding kit #007-4581 for the automatic unit.
6. If you are using bacterial inoculants, flush your system daily after every use.
7. Clean tank cap every 10 hours of operation.

Maintenance Schedule

	Daily	10 hrs	400 hrs	Weekly	Monthly	Season
Diagnostics	X					X
Filter bowl cleaning		X				X
Tip screen cleaning		X				X
Tank cap cleaning		X				X
Dielectric grease connections					X	X
Rebuild pump			X			
Battery connections				X		X
Check valves			X			
Visually inspect hoses				X		X

WINTER STORAGE

1. Thoroughly flush the system with water.
2. Remove the filter bowl and run dry until the water has cleared out of the intake side.
3. Remove the red plug from the bottom of the pump, drain, and run the pump for 30 seconds or until it is dry.
4. Drain all lines on the outlet side.
5. Never use oils or alcohol based anti-freeze in the system.
6. During spring start-up, if the pump is frozen turn off the power immediately to avoid burning the motor out. The pump head can be disassembled and freed or rebuilt in most cases.
7. Disconnect power from the system.
8. Remove display from the tractor and store in a warm, dry place.

TROUBLE SHOOTING CHECKS:

PROBLEM	POSSIBLE CAUSE	SOLUTION
Pump will not run.	1. No voltage to Baler Mounted Processor.	1. Check for short, low voltage, and replace fuse if necessary.
	2. Pump locked up.	2. Clean or rebuild pump if motor is OK.
	3. Damaged wire.	3. Repair damaged wire.
Pump runs but will not prime.	1. Air leak in intake.	1. Tighten fittings on intake side.
	2. Clogged intake.	2. Clean.
	3. Restricted outlet.	3. Check and clean tips.
	4. Check valve on outlet stuck closed.	4. Clean or repair check valve.
	5. Dirt inside pump.	5. Replace pump check valve.
Pump does not develop enough output.	1. Air leaks or clogs on inlet side.	1. Tighten or clean filter bowl assembly.
	2. Pump worn or dirty.	2. Rebuild pump.
Moisture reading errors (high or low)	1. Wire disconnected or bad connection between star wheels and baler mounted processor.	1. Reconnect wire.
	2. Low power supply to baler mounted processor.	2. Check voltage at box. (Min of 12 volts required.) See Diagnostics section of manual.
	3. Wet hay over 32% moisture	
	4. Ground contact with one or both star wheels and baler mounted processor.	4. Reconnect.
	5. Short in wire between star wheels and baler mounted processor.	5. Replace wire.
	6. Check hay with hand tester to verify.	6. Contact Harvest Tec if conditions persist.
Moisture readings erratic.	1. Test bales with hand tester to verify that cab monitor has more variation than hand tester.	
	2. Check all wiring connections for corrosion or poor contact.	2. Apply dielectric grease to all connections.
	3. Check power supply at tractor. Voltage should be constant between 12 and 14 volts.	3. Install voltage surge protection on tractors alternator.
Flow meter readings do not match up with product usage.		
Product is less than actual product used.	1. Voltage supplied to meter is less than 6 volts.	1. Check for a min of 6 volts supplied at baler mounted processor.
	2. Wiring short in signal to baler mounted processor.	2. Inspect wire and replace if necessary.
	3. Clog in meter.	3. Back flush with water. DO NOT USE AIR.

Product shown is more than actual product used.	1. High voltage supplied to the meter.	1. Check voltage at baler mounted processor. Max of 18 volts.
	2. Light interference with meter.	2. Reflection into meter can cause a high reading. Move meter or protect from sunlight.
	3. Air leak in intake.	3. Look for air bubbles in line. Replace line or other defective area that is allowing air into the system.
System leaks product out of tips after shut down.	1. Dirty or defective check valves.	1. Clean or Replace.
Terminal reads under or over power.	1. Verify with mult-meter actual voltage. Voltage range should be between 12-14 volts.	1. Clean connections and make sure applicator is hooked to battery. See Diagnostics section of manual.
System always displays "End of Row Pause".	1. Flow meter connector plug is plugged into Hay Indicator port on Baler Mounted Processor.	1. Switch ports.
System does not pause at the end of a row.	1. Short in cable.	1. Replace cable.
Bale rate displays zero.	1. Bale rate sensors are reversed. 2. Short in cable.	1. Switch the sensors next to the star wheel. 2. Replace cable.
Display will not power up.	1. Display connector plug and bale rate sensors plug are switched on the Baler Mounted Processor. 2. Short in display cable.	1. Switch plugs. 2. Replace cable.
Display is too dark or light	1. Change in temperature or light conditions.	1. Use the monitors contrast control.
	2. Display and BMP not communicating.	2. Disconnect 12 volt power cable at hitch. DO NOT DISCONNECT DISPLAY CABLE. Wait 5 minutes and reconnect.
Display says waiting for BMP	1. Display and BMP not communicating.	1. Disconnect 12 volt power cable at hitch. DO NOT DISCONNECT DISPLAY CABLE. Wait 5 minutes and reconnect.

BACKUP FUSE


The Model 462 is equipped with a backup system if your display is not functioning. This function is intended for use only as a temporary means for application and not as a way to apply preservative over multiple fields or for a lengthy amount of time. The baler mounted processor has a location for a backup fuse on the same side as the pump and flow meter harness that bypasses all other system inputs and applies preservative using one pump (Pump Three) at a constant lbs/hour shown below. These values are based upon an input voltage of 13.5 DC. Insert at least a 10 amp up to 20 amp fuse (3 AG style) into the backup fuse port to activate the bypass. The system will not turn off or pause until the fuse is removed. The main fuse must also be functional for the backup fuse to work.

	Tip Set	Output (lbs/hour)
462	High	180
	Low	150

WIRING DIAGRAMS


A. Main power connector mounted on battery

Pin 1	Red	+ 12 V input from tractor supply
Pin 2	Black	Ground from tractor supply
Pin 3	Not used	

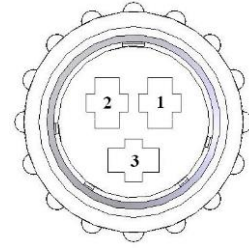


B. Main power connector mounted on BMP

Pin 1	Red	+ 12 V input from tractor supply
Pin 2	Black	Ground from tractor supply
Pin 3	Not used	

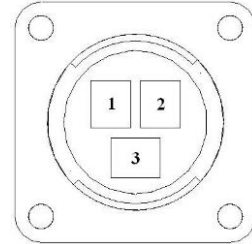


C. Pump connection colors

Pin 1	Black with orange markings	Pump 1 ground
Pin 2	Black with green markings	Pump 2 ground
Pin 3	Black with yellow markings	Pump 3 ground
Pin 4	Not used	
Pin 5	Orange with black markings	Pump 1 positive
Pin 6	Green with black markings	Pump 2 positive
Pin 7	Yellow with black markings	Pump 3 positive

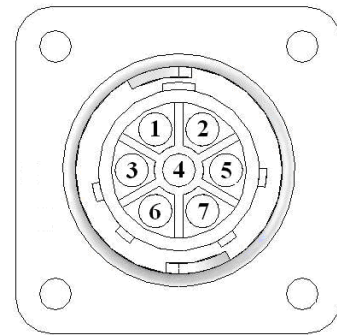

D. Flow meter connection on BMP


Pin 1	White	5 - 12 V (+) supply
Pin 2	Green	Ground
Pin 3	Brown	Signal
Pin 4	Black	Shield

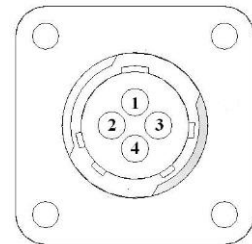

E. Connector for Hay Indicator option on BMP


Note: Hay indicators are an option that will turn the system on and off automatically as hay enters the pickup of the baler.

Pin 1	Red	+12V
Pin 2	Black	Ground
Pin 3	White	Signal wire
Pin 4	Not used	

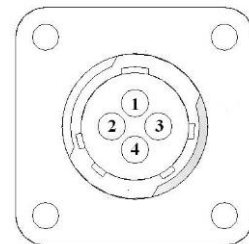


F. Bale rate sensors on BMP

Pin1	Brown	Sensor power
Pin2	Black	Signal for front prox. sensor
Pin3	Blue	Sensor ground
Pin4	Black	Signal for back prox. sensor

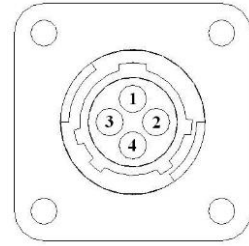


G. Star wheel connector mounted on BMP

Pin 1	Brown	Star wheel input 1
Pin 2	Blue	Star wheel input 2
Pin 3	Brown	Diagnostic 1
Pin 4	Blue	Diagnostic 2
Pin 5	Silver	Shield
Pin 6	Silver	Shield
Pin 7	Not used	
Pin 8	Not used	
Pin 9	Not used	

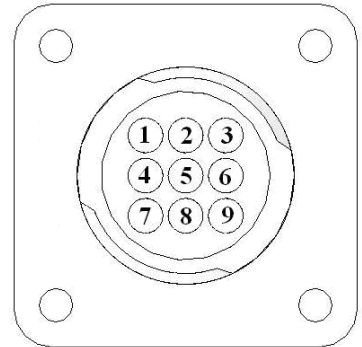


H. Communication harness display to hitch

Pin 1	Red	Power to display
Pin 2	Black	Ground to display
Pin 3	Blue	Comm channel OH
Pin 4	Orange	Comm channel OL

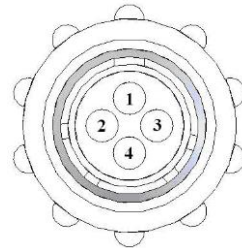


I. Communication harness hitch to baler mounted processor

Pin 1	Red	Power to display
Pin 2	Black	Ground to display
Pin 3	Blue	Comm channel OH
Pin 4	Orange	Comm channel OL

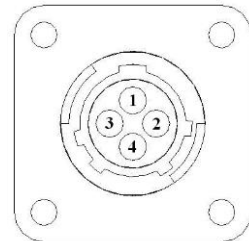


PARTS BREAKDOWN FOR 462

PARTS BREAKDOWN FOR PUMP PLATE

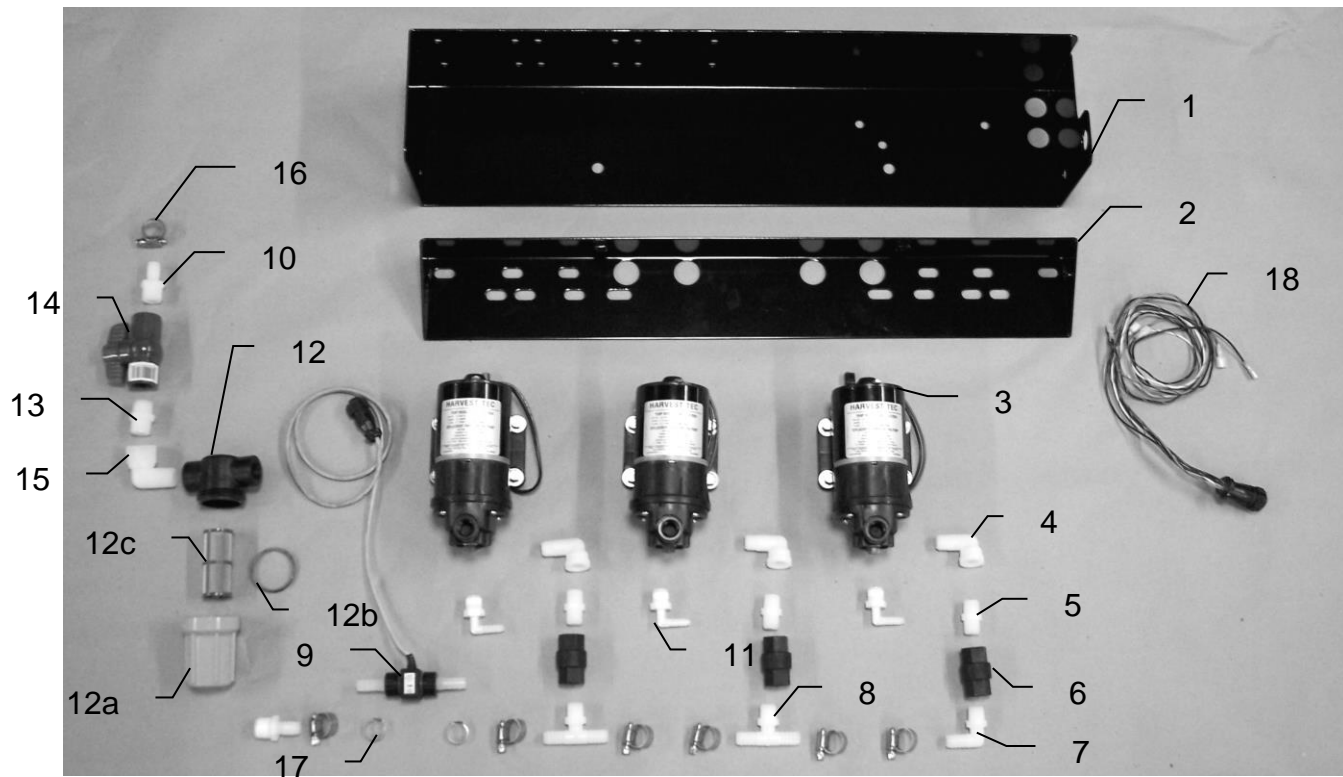


<u>Ref#</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Pump plate	001-4646D	1
2	Mounting Bracket	001-4646C	1
3	Pump	007-4120H	3
4	Street elbow fitting	003-SE38	3
5	Nipple fitting	003-M3838	3
6	Check valve	002-4566F	3
7	Elbow fitting	003-EL3812	1
8	Tee fitting	003-T3812HB	2
9	Flow meter assembly	006-4725A	1
10	Straight fitting	003-A1212	2
11	Elbow fitting	003-JEL1238	3
12	Filter bowl assembly	002-4315	1
12a	Filter bowl only	002-4315F	1
12b	Filter bowl gasket	002-4315D	1
12c	Filter bowl screen	002-4315B	1
13	Nipple fitting	003-M1212	1
14	Ball valve	002-2212	1
15	Street elbow fitting	003-SE12	1
16	Hose clamp	003-9003	7
17	Hose clamp (Flow Meter)	003-9005	2
18	Pump Cable	006-4660Z	1
NP	Pump rebuild kit	007-4581	1
	(1 per pump)		
NP	Elbow	003-EL1212	1
NP	Not Pictured		

PARTS BREAKDOWN FOR STAR WHEEL SENSOR AND HOSES

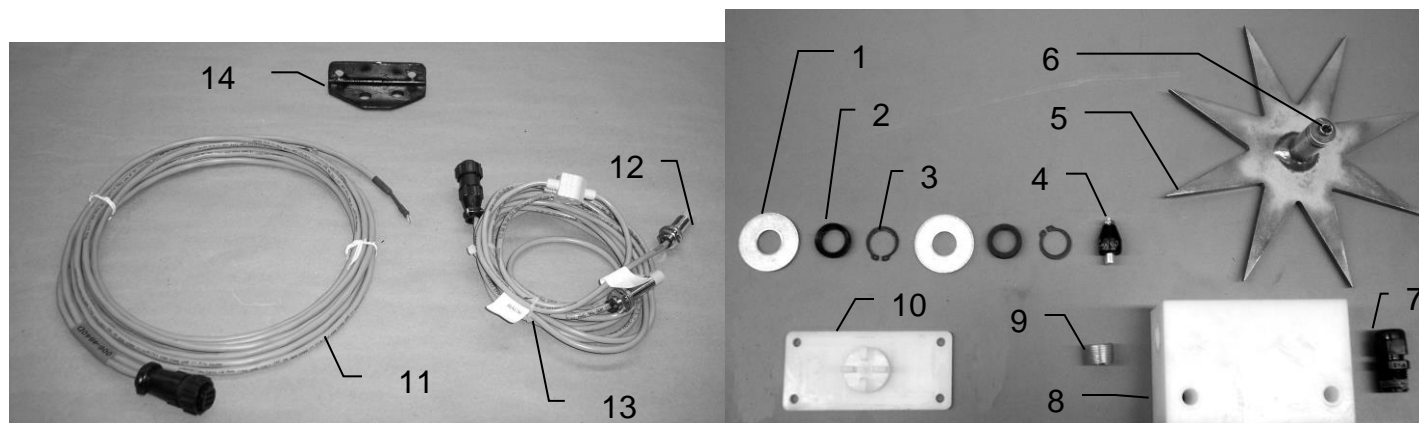


<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Washer		4	11	Moisture cable	006-4640D	1
2	Dust Seal		4	12	Bale rate sensor	006-7303S	2
3	Snap Ring		4	13	Bale rate sensor harness	006-7202H	1
4	Swivel	006-4642A	2	12-13	Bale rate sensor assembly	006-7202	1
5	Star Wheel	030-4641E	2	14	Bale rate sensor holder	001-4644SS	1
6	Insert	w/ Ref # 5	2				
7	Wiring grommet	008-0821A	2				
8	Star wheel block	006-4641A	2				
9	Plug Fitting	003-F38	2				
10	Block Cover	006-4641B	2				
1-10	Star wheel assembly	030-4642	2				

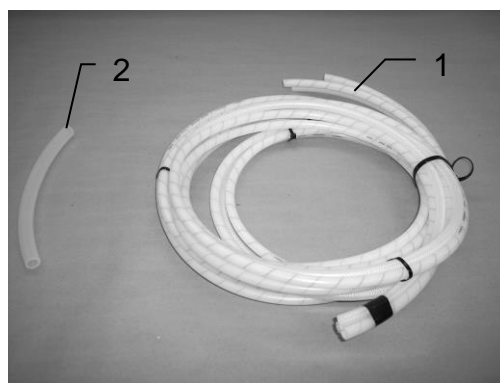


<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Triple weld hose (from pumps to tips)	002-9016	15ft
		002-9016B	15ft
		002-9016G	15ft
	Hose assembly (3 hose assembly)	030-9016SS	1
2	1/2" Hose (tank to filter)	002-9001	6ft

PARTS BREAKDOWN FOR CONTROL BOX AND WIRING HARNESSES

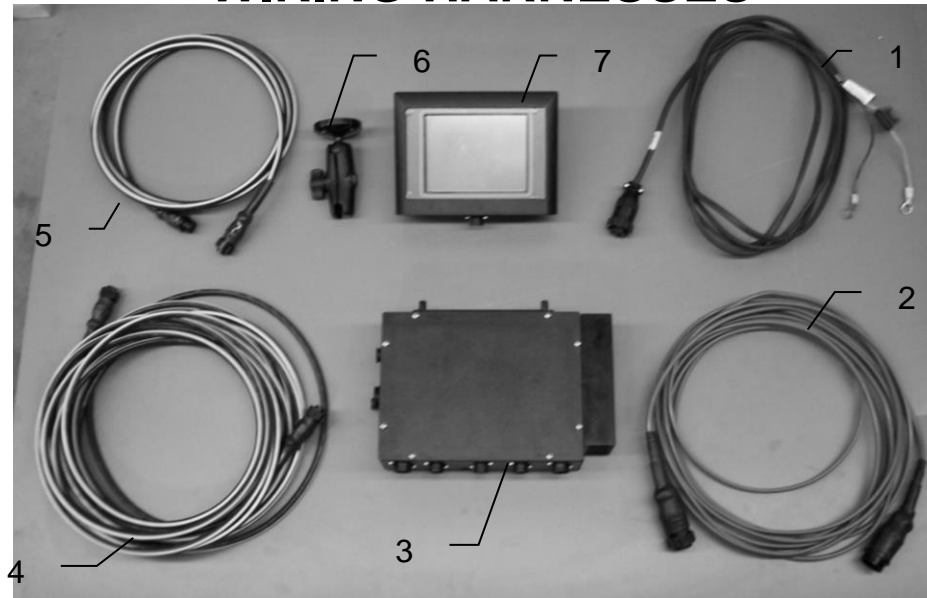

<u>Ref</u>	<u>Description</u>	<u>Part#</u>
1	Power lead tractor	006-4640A
2	Power lead baler	006-4660R
3	Baler mounted processor	006-4671SS
4	Communication harness (baler)	006-4660S
5	Communication harness (tractor)	006-4660N
6	Ram mount	001-2012H
7	462 Terminal	006-4670
NP	Dust caps	006-4660PLUGS

HARVEST TEC MODEL 4400AB INSTALLATION KIT FOR UNIVERSAL CONVENTIONAL SQUARE BALERS, AUTOMATIC CONTROL

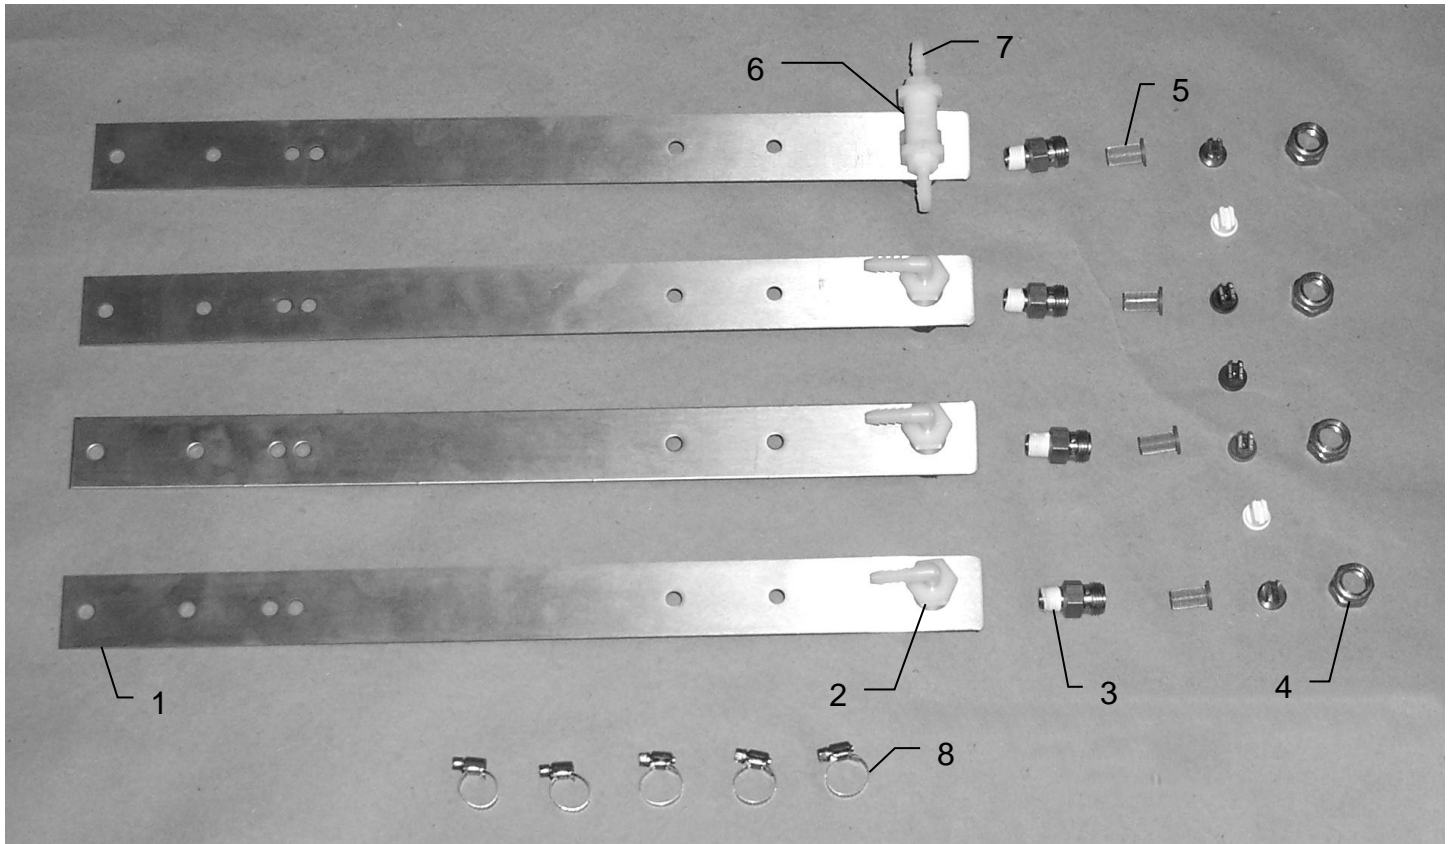

<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Nozzle strap	001-4215	4	NP	Tip	004-650033-SS	2
2	Elbow	003-EL1414F	3	NP	Tip	004-XR110015VS	1
3	Nozzle body	004-4744	4	NP	Tip	004-XR11003VS	1
4	Nozzle cap	004-4745	4	NP	Tip	004-XR11004VS	1
5	Tip strainer	004-4213-200	4	NP	Tip	004-650050-PT	2
6	Tee	003-TT14	1	NP	Not pictured		
7	Straight fitting	003-A1414	2				
8	Hose clamp	003-9002	5				

NOTES:

Harvest Tec, LLC. Warranty and Liability Agreement.

Harvest Tec, LLC. will repair or replace components that are found to be defective within 12 months from the date of manufacture. Under no circumstances does this warranty cover any components which in the opinion of Harvest Tec, LLC. have been subjected to negligent use, misuse, alteration, accident, or if repairs have been made with parts other than those manufactured and obtainable from Harvest Tec, LLC.

Our obligation under this warranty is limited to repairing or replacing free of charge to the original purchaser any part that in our judgment shows evidence of defective or improper workmanship, provided the part is returned to Harvest Tec, LLC. within 30 days of the failure. Parts must be returned through the selling dealer and distributor, transportation charges prepaid.

This warranty shall not be interpreted to render Harvest Tec, LLC. liable for injury or damages of any kind, direct, consequential, or contingent, to persons or property. Furthermore, this warranty does not extend to loss of crop, losses caused by delays or any expense prospective profits or for any other reason. Harvest Tec, LLC. shall not be liable for any recovery greater in amount than the cost or repair of defects in workmanship.

There are no warranties, either expressed or implied, of merchantability or fitness for particular purpose intended or fitness for any other reason.

This warranty cannot guarantee that existing conditions beyond the control of Harvest Tec, LLC. will not affect our ability to obtain materials or manufacture necessary replacement parts.

Harvest Tec, LLC. reserves the right to make design changes, improve design, or change specifications, at any time without any contingent obligation to purchasers of machines and parts previously sold.

Revised 5/22

HARVEST TEC, LLC.
P.O. BOX 63
2821 HARVEY STREET
HUDSON, WI 54016
PHONE: 715-386-9100
1-800-635-7468
FAX: 715-381-1792
Email: info@harvesttec.com