


4541C Installation Kit

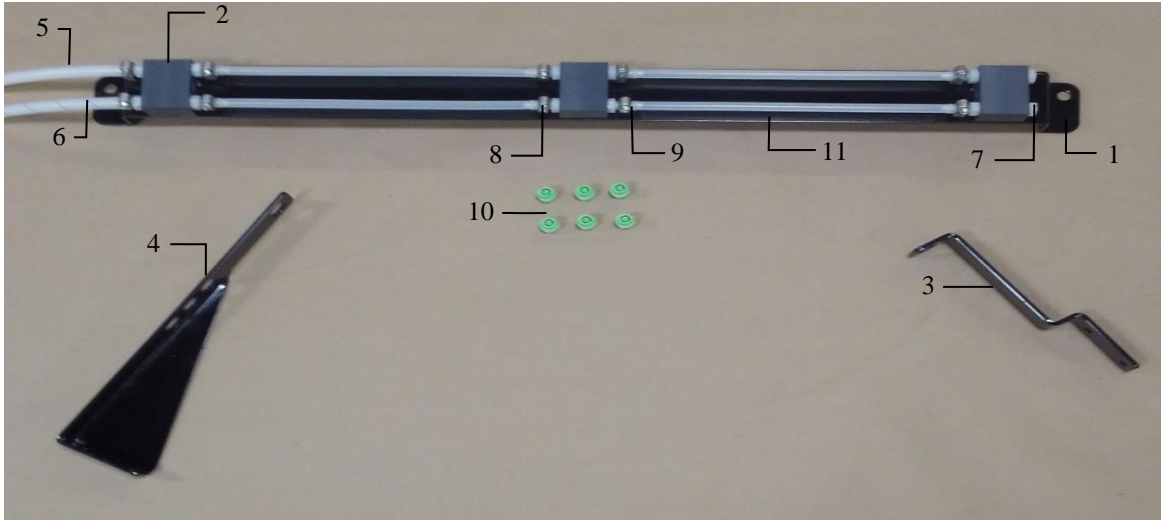

<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	Spray Shield	001-4435NSX	1	8	Mini Hose Clamp	003-9002	12
2	Spray Shield Block	001-4435NSB	3	9	1/4" x 1/4" Straight Fitting	003-A1414	12
3	End of Bale Bracket	001-4648	1	10	1/4" NPT Tip	004-T8003-PT	3
4	Krone End of Bale Bracket	001-4648K	1	11	1/4" EVA Tubing	002-9006	4
5	1/4" Braided Hose	002-9016	4	NP	Rubber Washer	004-1207W	2
6	1/4" Braided Hose - Blue	002-9016B	4	NP	Female Quick Connect	004-1207H	2
7	1/4" Hex Plug	003-F14	2	NP	1/4" NPT Tip	004-T8005-PT	5

*Tip color subject to change

Complete Installation Kit 030-4541C
(Ref. 1-11)