

Operation Manual

MODEL 547 & 549 ***25 & 55 Gallon Automatic Preservative Applicators***



HayBoss™
G2

(intentionally blank)

Harvest Tec 547 & 549 Operation Table of Contents

	<u>Page</u>
Introduction	5
Model Reference Chart	5
Safety	6
Safety Decal Definitions	6-7
Safety Decal Locations	7-8
Model 547	7
Model 549	8
Preparing the applicator for operation	9-10
Filling the tank	9
Operation of the main ball valve	10
Connecting the power harness	10
Description of screens & menus of the Harvest Tec monitor	11-17
Screen menus	11-17
Automatic mode	12
Manual mode	13
Setup mode	14-15
Job Records	16
Diagnostics	17
First time and annual startup instructions	18
Checking and priming the pumps	18
Setting up the system for initial use	19-21
Application rate	19
Selecting between high and low output tips	19
Baling rate	20
Fixed Chamber	21
Operating instructions	22-26
Automatic mode	22
Manual mode	23
Job records	24-25
Diagnostics	26
Common questions about the 563	27
Maintenance	28-32
Maintenance schedule	28
Diagnostics	28
Filter bowl cleaning	28
Tips & tip screen cleaning	29
Tank lid cleaning	30
Dielectric grease connections	31
Rebuild pumps	31
Battery Connections	31
Check valves	31
Miscellaneous Maintenance	32
Winter storage	32
Troubleshooting	33-34
Status Alerts	34
Wiring diagrams	35-36
Parts breakdowns	37-48
547 base kit	37
549 base kit	37
Drain fill kit	38
Pump Manifold	39
Moisture sensor and hoses	40

Control box and wiring harnesses	41
Baler specific installation kits	42-48
Model 447-SO	42
Model 4503B	43
Model 4504B	44
Model 4505B	45
Model 4508B	46
Model 4517B	47
Model 4524B	48
Selecting Tips-Reference Guide	49
Notes	50
Warranty statement	51

Introduction

Congratulations on purchasing a Harvest Tec Model 547 or 549 applicator and thank you. These 547 or 549 applicators are designed to apply a buffered propionic acid on to the forage crop as it is being baled. The 547 or 549 applicator will adjust the rates based on the moisture and tonnage of the crop being harvested. This manual will take you through the steps of operation of the applicator and also point out all safety precautions that need to be made while using the applicator. Read this manual carefully to learn how to operate the equipment correctly. Failure to do this can result in personal injury or equipment malfunction. If you are unsure about operating the system after consulting this manual, contact your local authorized dealership for additional assistance. If you are in need of parts for the system please see your Installation Manual and contact your local authorized dealer to order the parts. This applicator is designed to apply Harvest Tec buffered propionic acid.

Right and Left sides are determined by facing in the direction of forward travel.

Model reference chart

Baler make	Baler Model	Model	Installation kit	Tank size
Case IH	All RBX & RB series four feet wide	547	447-SO	25 gallon
Case IH	All RBX & RB series five feet wide	547	447-SO	55 gallon
New Holland	All BR balers four feet wide	547	447-SO	25 gallon
New Holland	All BR balers five feet wide	547	447-SO	55 gallon
AGCO	5446 – 5556 & 2646 - 2766	549	4508B	55 gallon
AGCO	2846-2856A	549	4524B	55 gallon
Challenger	RB 46 - 56	549	4508B	55 gallon
Challenger	RB453 - RB563A	549	4524B	55 gallon
Hesston	800 and 900 series round balers	549	4508B	55 gallon
John Deere	582 & 854 round balers	549	4503B	55 gallon
John Deere	5, 6, and 7 series round balers	549	4504B	55 gallon
John Deere	8 & 9 series round balers	549	4517B	55 gallon
Massey Ferguson	2646 – 2766	549	4508B	55 gallon
Massey Ferguson	2846-2856A	549	4524B	55 gallon
Vermeer	604M and 605M round balers	549	4505B	55 gallon





Safety


Carefully read all the safety signs in this manual and on the applicator before use. Keep signs clean and in good working order. Replace missing or damaged safety signs. Replacement signs are available from your local authorized dealer. See your installation manual for under the replacement parts section for the correct part numbers.

Keep your applicator in proper working condition. Unauthorized modifications to the applicator may impair the function and/or safety of the machine.

Carefully read and understand all of the baler safety signs before installing or servicing the baler. Always use the supplied safety equipment on the baler to service the applicator.

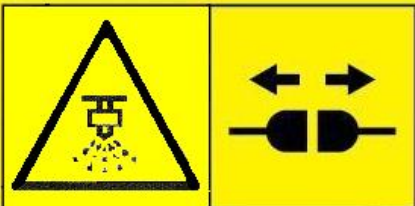Safety Decal Descriptions

 DCL-8003	<p>Number 1 Spraying hazard. Disconnect power before servicing the applicator Part no. DCL-8003</p>
 DCL-8002	<p>Number 2 Falling hazard. Do not step in this area. Part no. DCL-8002</p>
 DCL-8001	<p>Number 3 Use caution when working around chemicals. Wear all protective equipment according to the label of the product. Part no. DCL-8001</p>
 DCL-8000	<p>Number 4 Read and understand the operator's manual before using or working around the equipment. Part no. DCL-8000</p>

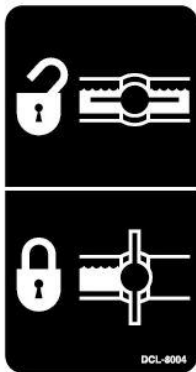

Number 5

Open (unlocked) and closed (locked) position of the ball valve.

Part no. DCL-8004


Safety Decal Locations

Model 547



Safety Decal Location

Model 549

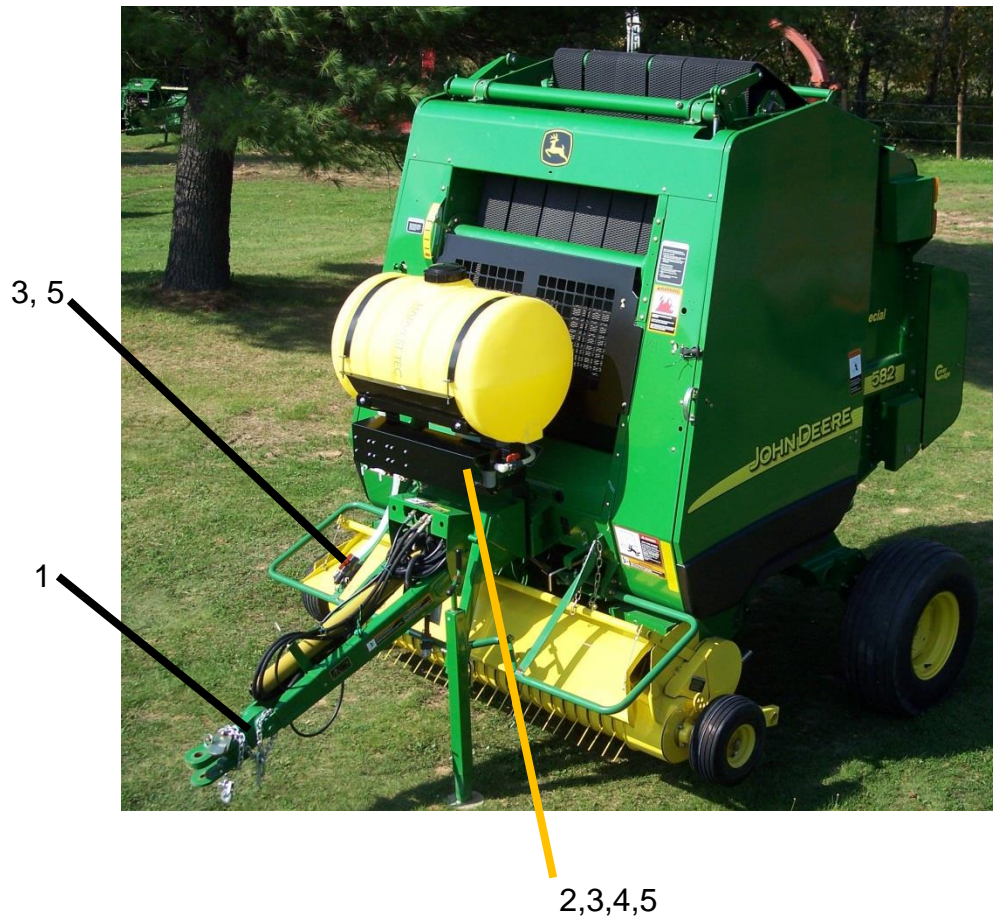

For AGCO part cross-reference visit: www.harvesttec.com/system.html

Preparing the applicator for operation

After the Applicator has been installed on the baler, follow the below steps to prepare for operating the applicator both safely and correctly.


Filling the tank (model 549 & 547):

Read the label of the product being filled into the tank to determine what individual protective measures need to be taken. Locate the drain/fill line on the baler. Open the cam-couplers (A) and remove the protective plug (B). Insert the male coupler (found on transfer pump) into the female cam and close the cams (A). To open the ball valve (C) turn the handle so it is vertical. After the ball valve has been turned on switch the pump to the On position. Monitor the level on the tank visually and shut off the pump before over filling. Once the pump is turned off, close the ball valve and remove the male coupler. The handle of the ball valve (C) will be horizontal when closed. Reinstall the protective plug and close the cams. The Harvest Tec model 9212 transfer pump is recommended for this process.

Water is recommended for first time and annual start up procedures.



Drain/Fill line on the baler

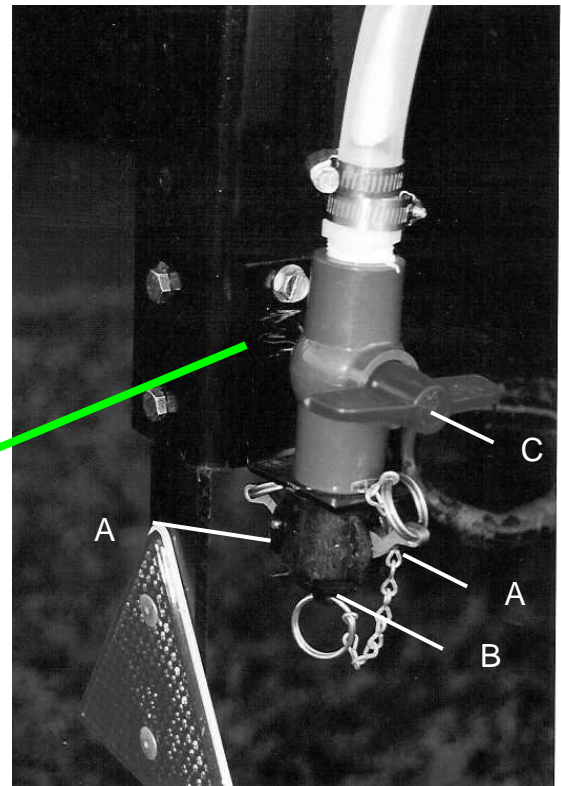



Enlarged view of the drain/fill line valve and cam-coupler assembly.

For AGCO part cross-reference visit: www.harvesttec.com/system.html


Operation of the main ball valve

The ball valve should be closed at all times when the applicator is not being used. The valve should also be closed when any service work is being done to the baler or applicator.

The valve is located next to the pump and by the applicator tank. The arrow below points at the valve.

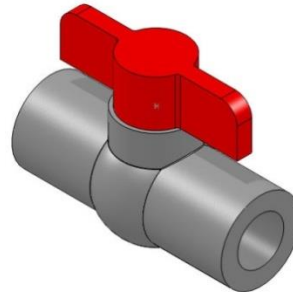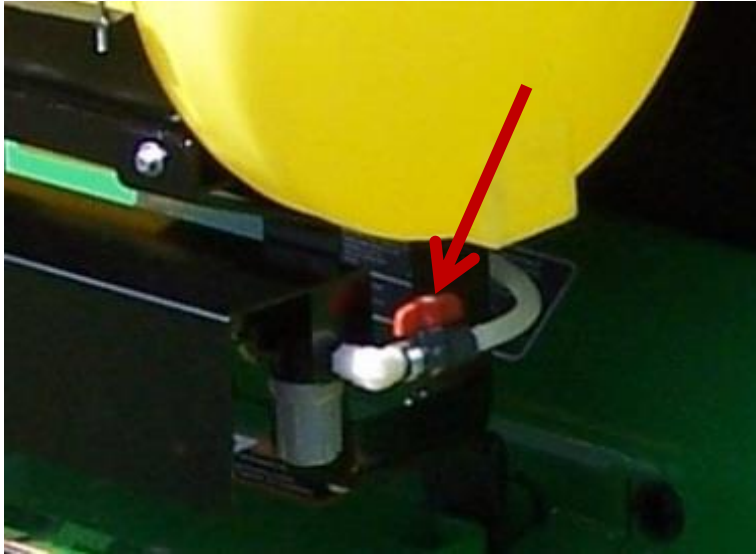

Valve open

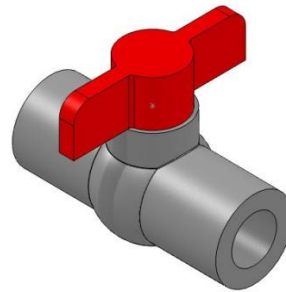

Valve closed

Connecting the power harness


The power harness that supplies power from the tractor battery to the applicator pump has a disconnect at the hitch. Connect the two together for operation. Always disconnect before servicing the applicator or baler.

WARNING: Stop tractor engine and shift to park or neutral, set brakes and remove key before leaving the tractor.

For AGCO part cross-reference visit: www.harvesttec.com/system.html

Description of Screens & menus of the Harvest Tec monitor

This system is calibrated for use with Harvest Tec buffered propionic acid. The use of other products can cause application problems and damage to system components. It is designed to apply rates of 32 – 632 pounds of acid per hour and read moisture levels of 10 to 32 percent. The 563 monitor will allow you to set your bale weight, single bale formation time, moisture levels and application rates. The Automatic Mode will automatically adjust the application rates as the moisture levels change. Manual Mode will allow you to control the application rates on the go.

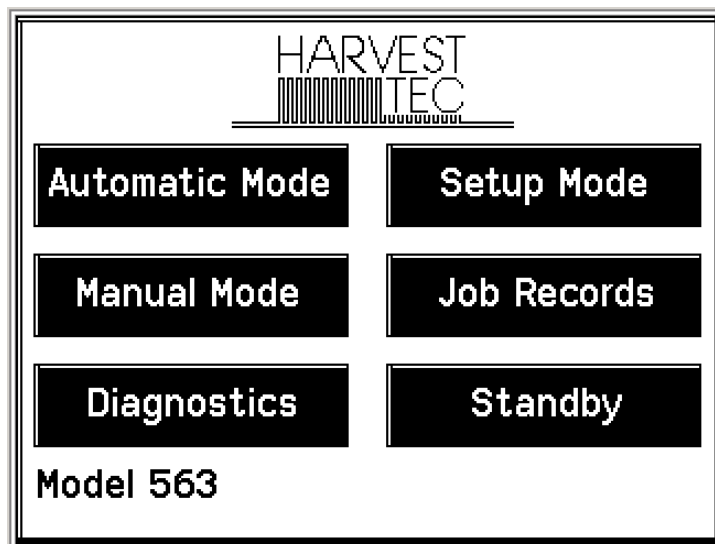

AUTOMATIC MODE This operating mode automatically adjusts preservative application as you bale. The following items are displayed in the mode while baling: Moisture, Baling Rate, Application Rate (actual and target), Last Bale Average Moisture, Ton Baled, and Pounds of Product Used.

MANUAL MODE This operating mode allows the three different pumps to be turned on at a fixed rate as you bale. The following items are displayed in the mode while baling: Moisture, Baling Rate, Application Rate (actual only), Last Bale Average Moisture, Tons Baled, and Pounds of Product Used. This mode can also be used to prime the pumps.

SETUP MODE This mode allows the operator to customize the applicators settings for their baler and baling needs. This mode allows changes to be made to the following areas: Application Rate, Baling Rate, Chamber Style, Language, US or Metric units, and turn on/off the optional Hay Indicators.

DIAGNOSTICS Allows operator to automatically check performance and output of pumps as well as set the date and time and calibrate the touch screen. The installed software versions can also be viewed here.

JOB RECORDS Keeps track of up to 300 jobs with total product used, average moisture content, highest moisture content, tons baled, date of baling, and total number of bales made. Individual bales are also able to be viewed and the records can also be downloaded to a USB drive in this mode.

For AGCO part cross-reference visit: www.harvesttec.com/system.html


STANDBY This powers down the display only. The application unit will not fully power down unless the keyed power is turned off. Press anywhere on the screen to power back on (with the key on).

For AGCO part cross-reference visit: www.harvesttec.com/system.html

Screen Menus


Use the below listed screen menus to navigate through all of the operation screens.

Automatic Mode:

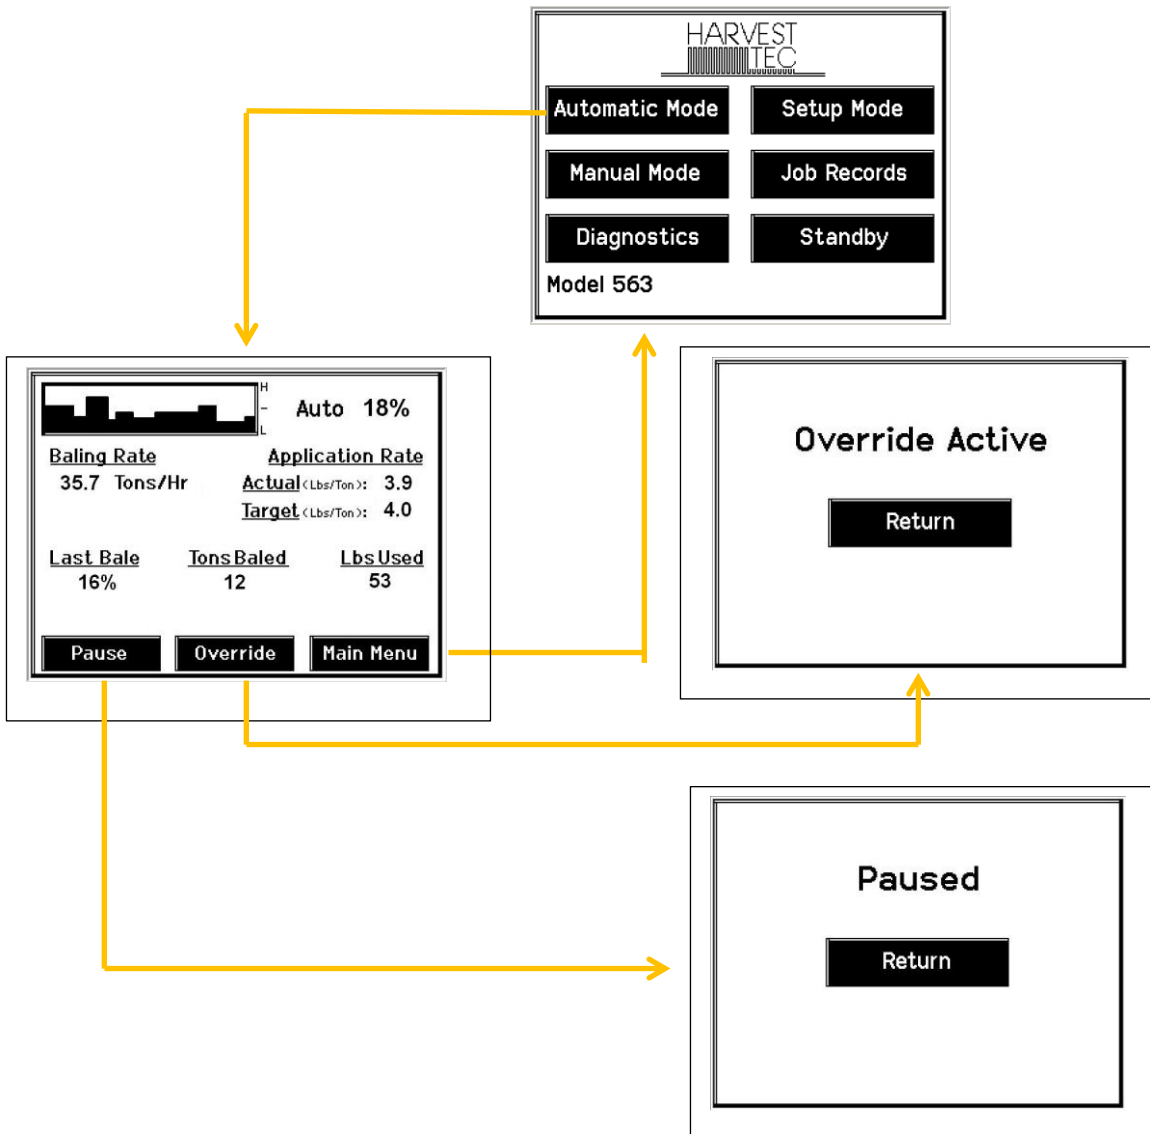


For AGCO part cross-reference visit: www.harvesttec.com/system.html

Manual Mode:

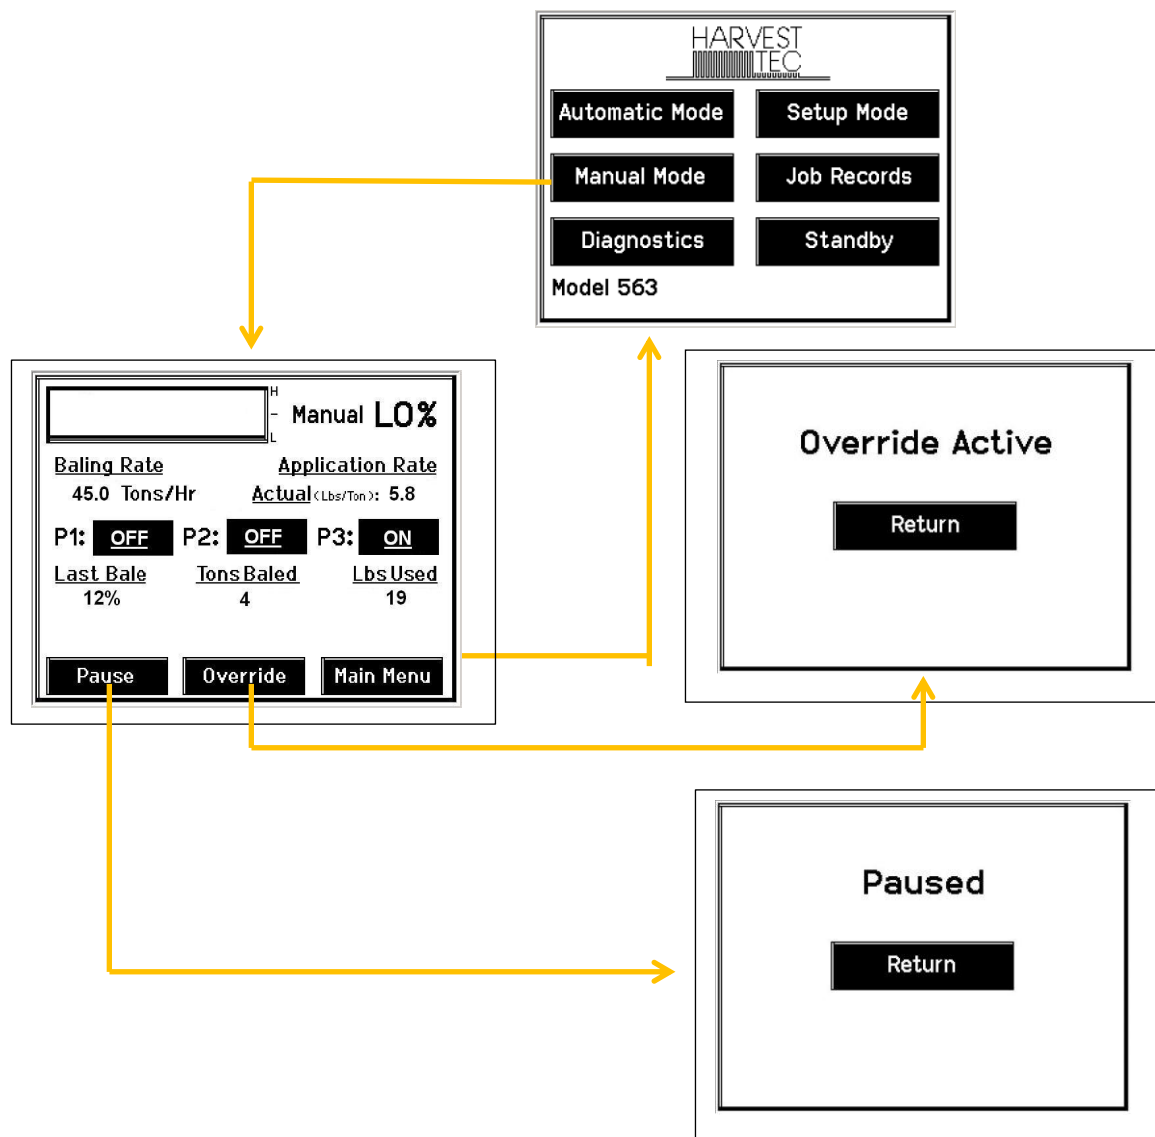


For AGCO part cross-reference visit: www.harvesttec.com/system.html

Setup Mode:

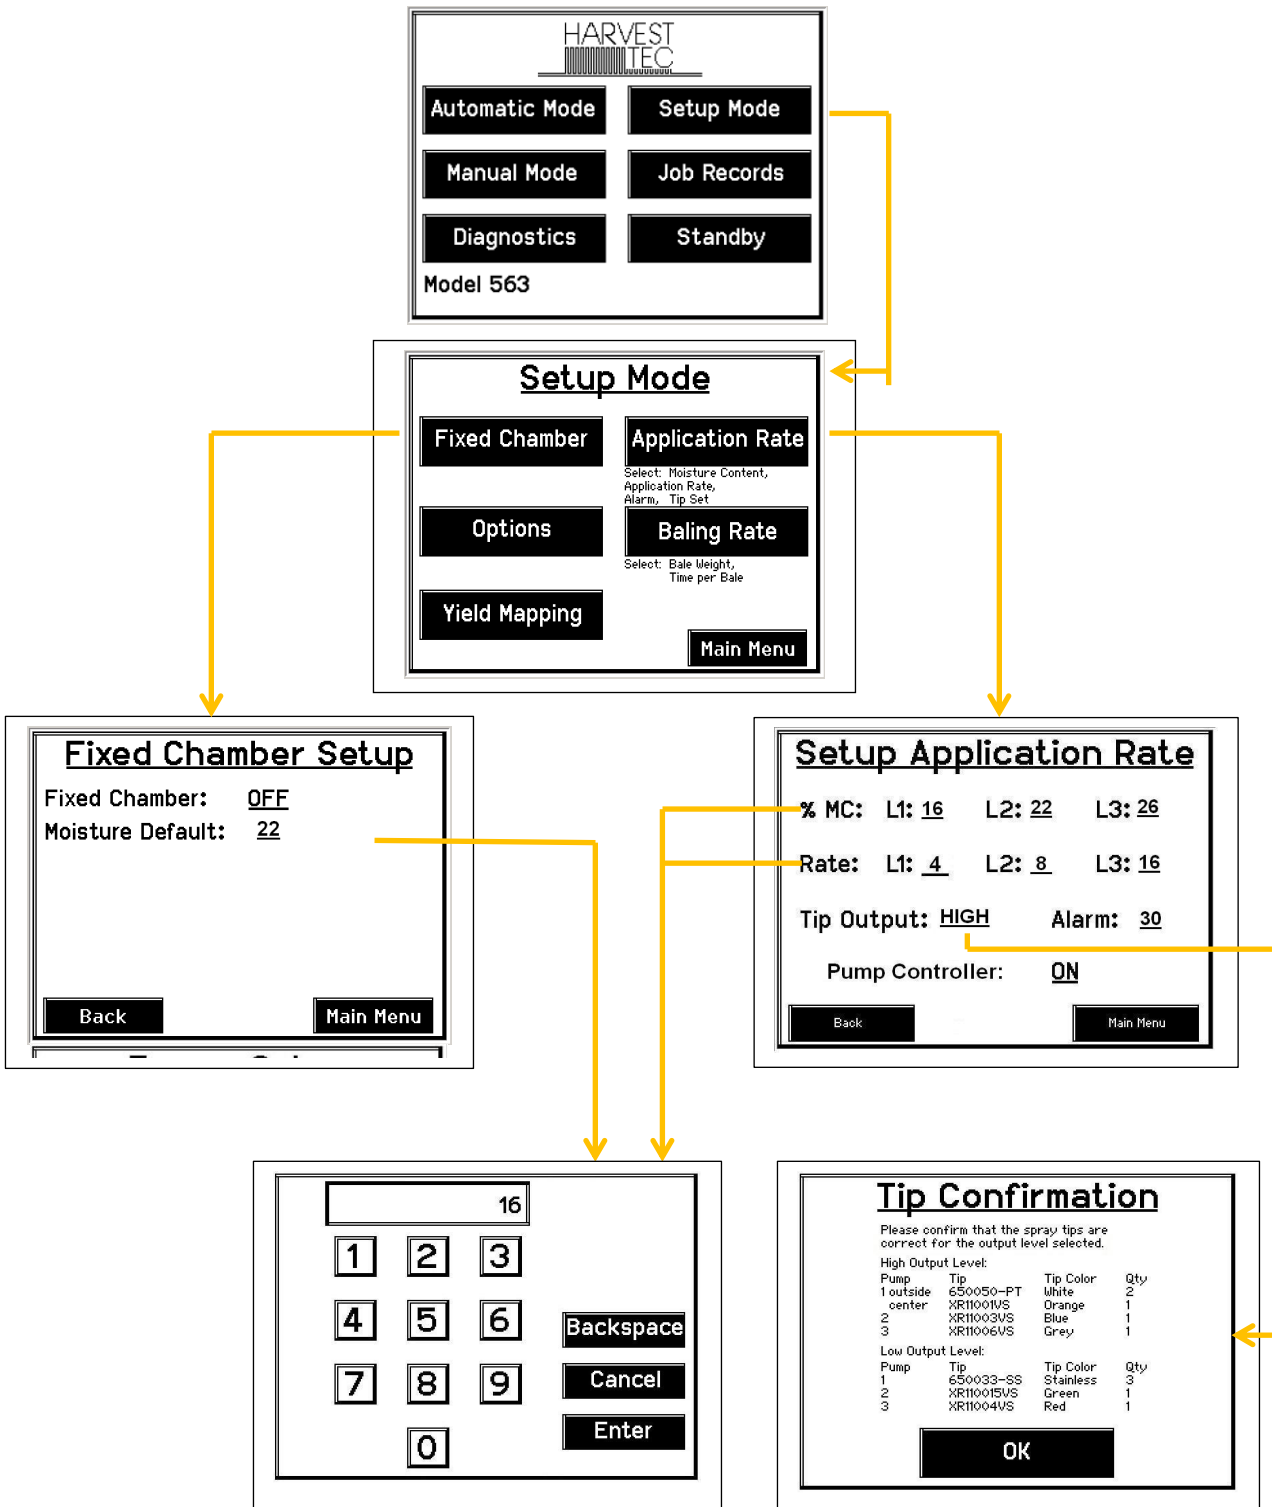


For AGCO part cross-reference visit: www.harvesttec.com/system.html

Setup Mode Continued:

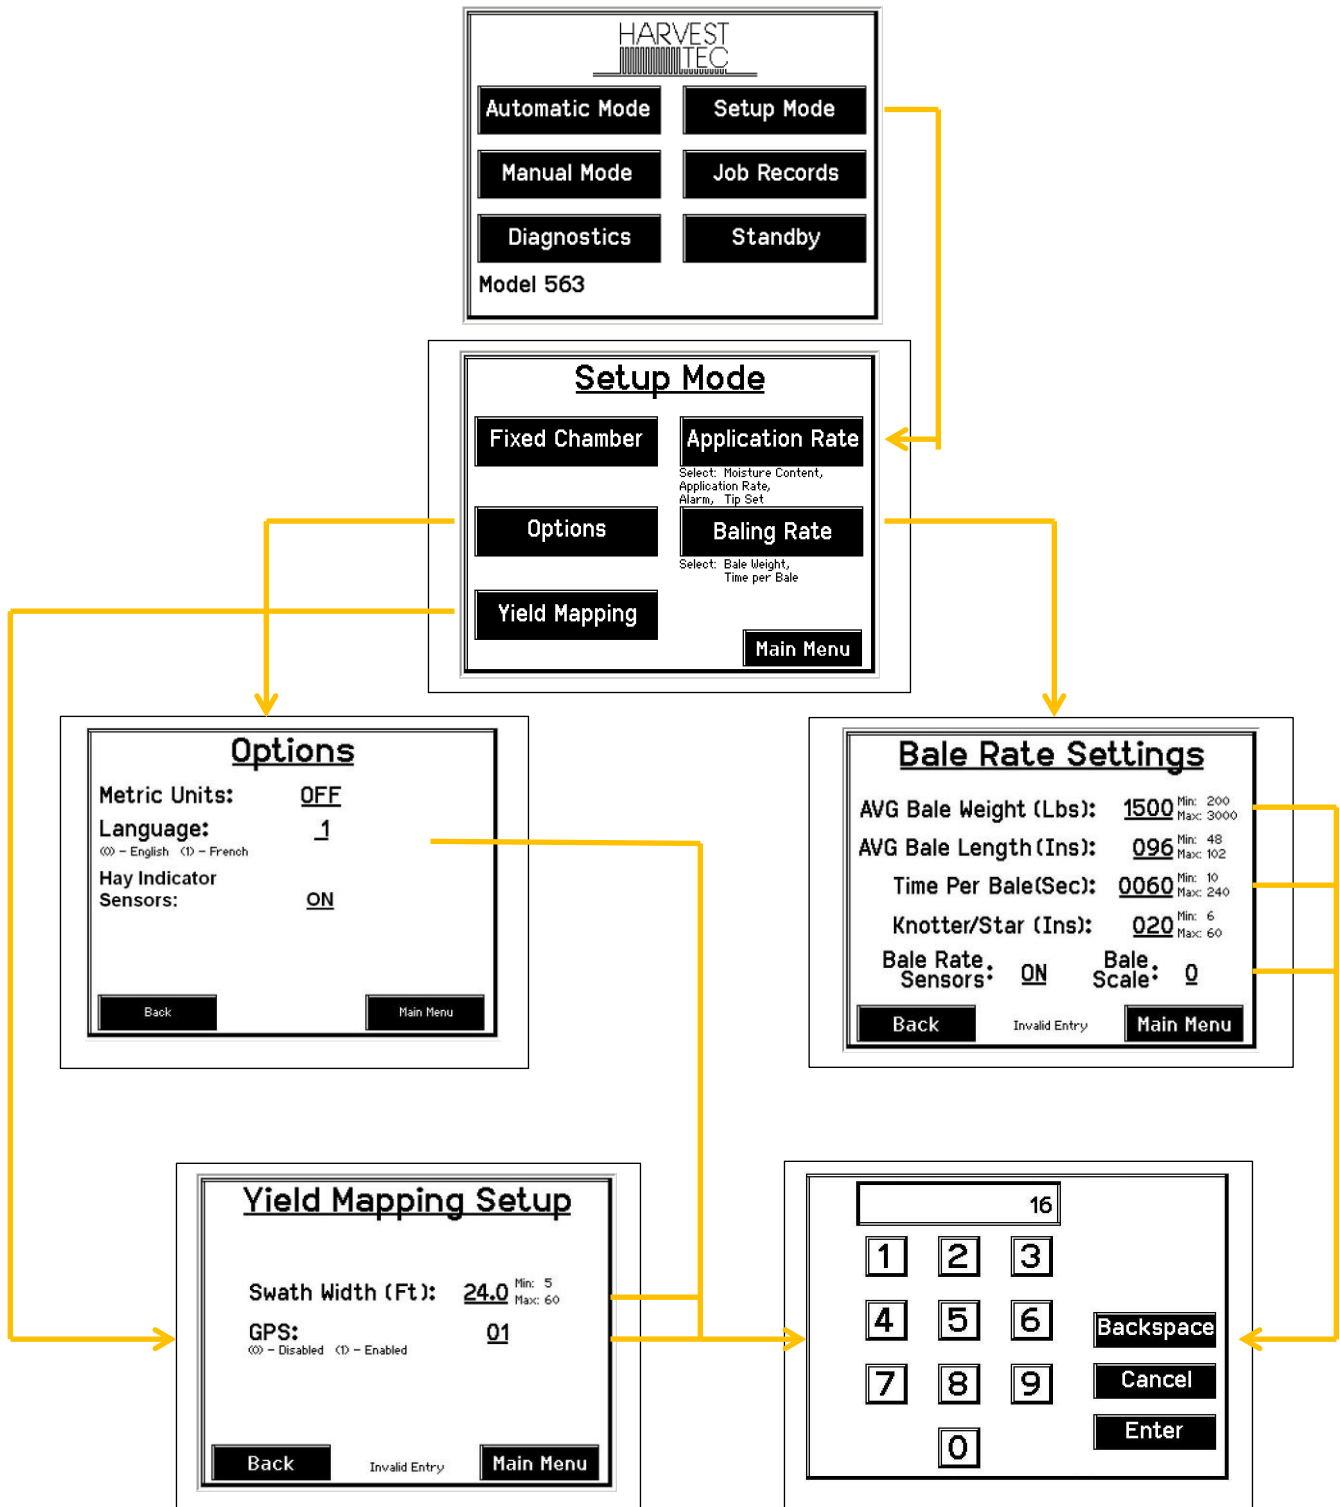


For AGCO part cross-reference visit: www.harvesttec.com/system.html

Job Records:

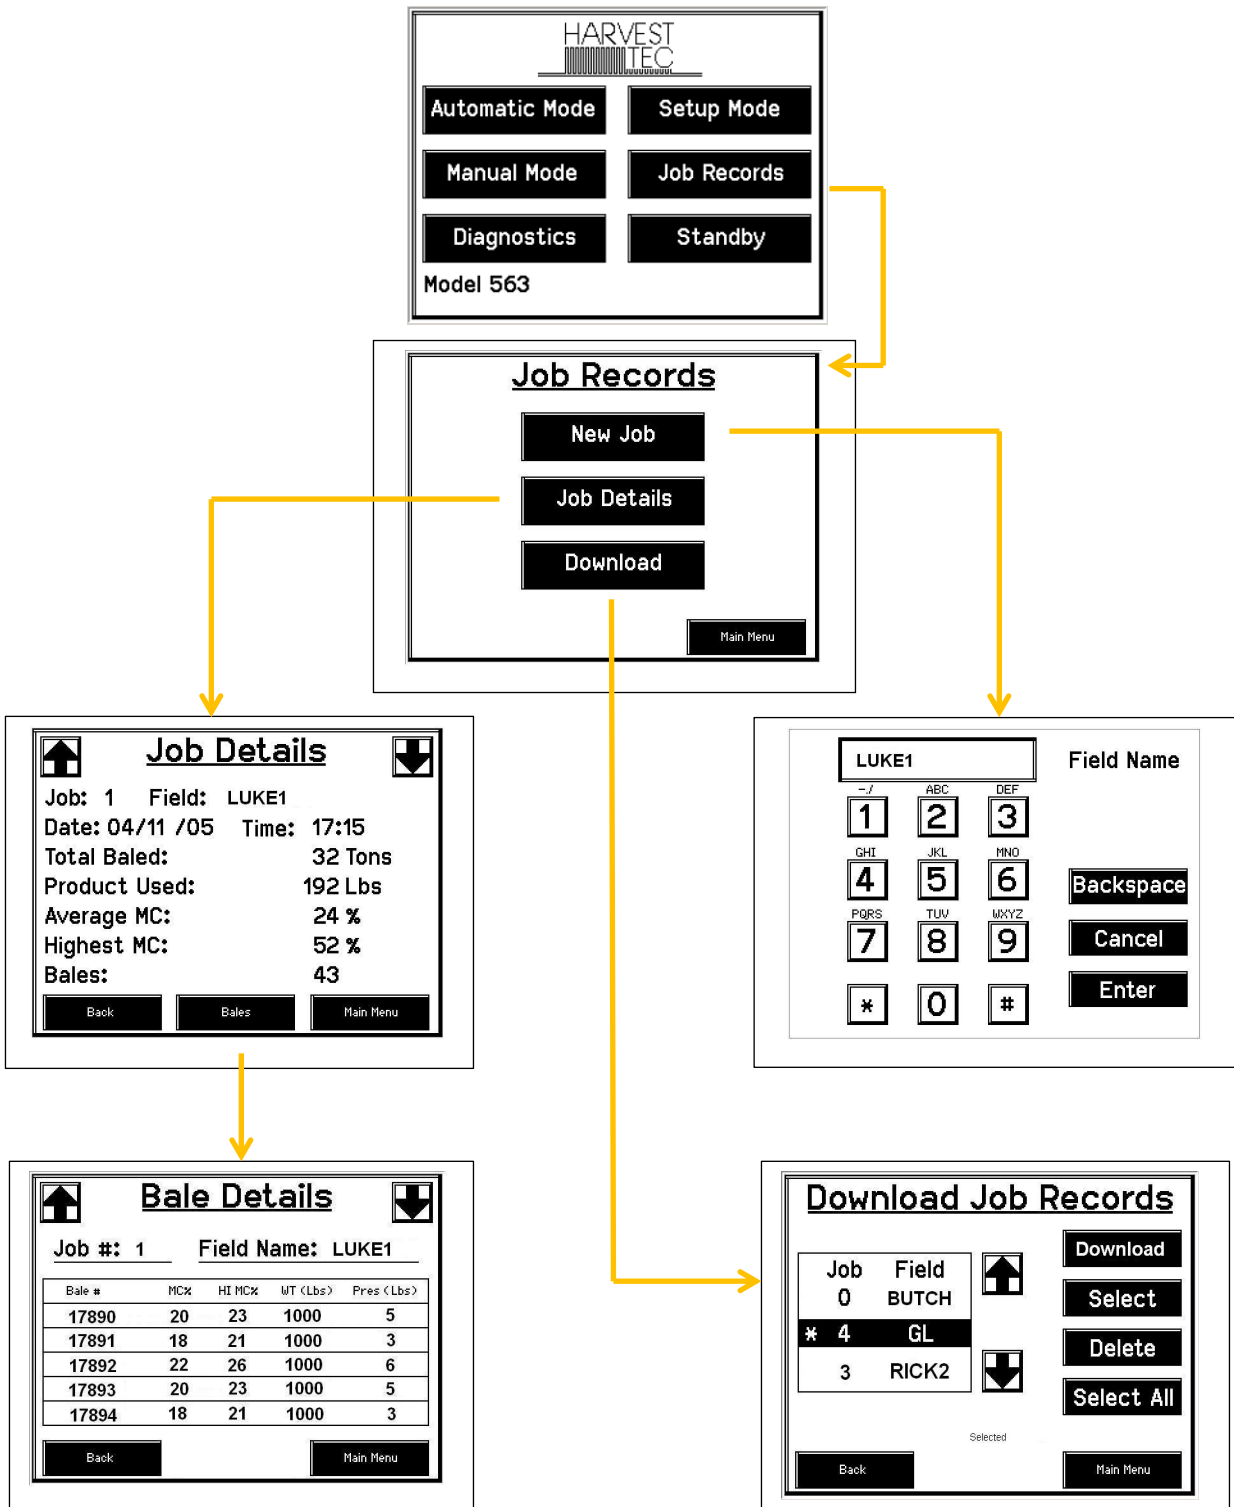

Diagnostics:

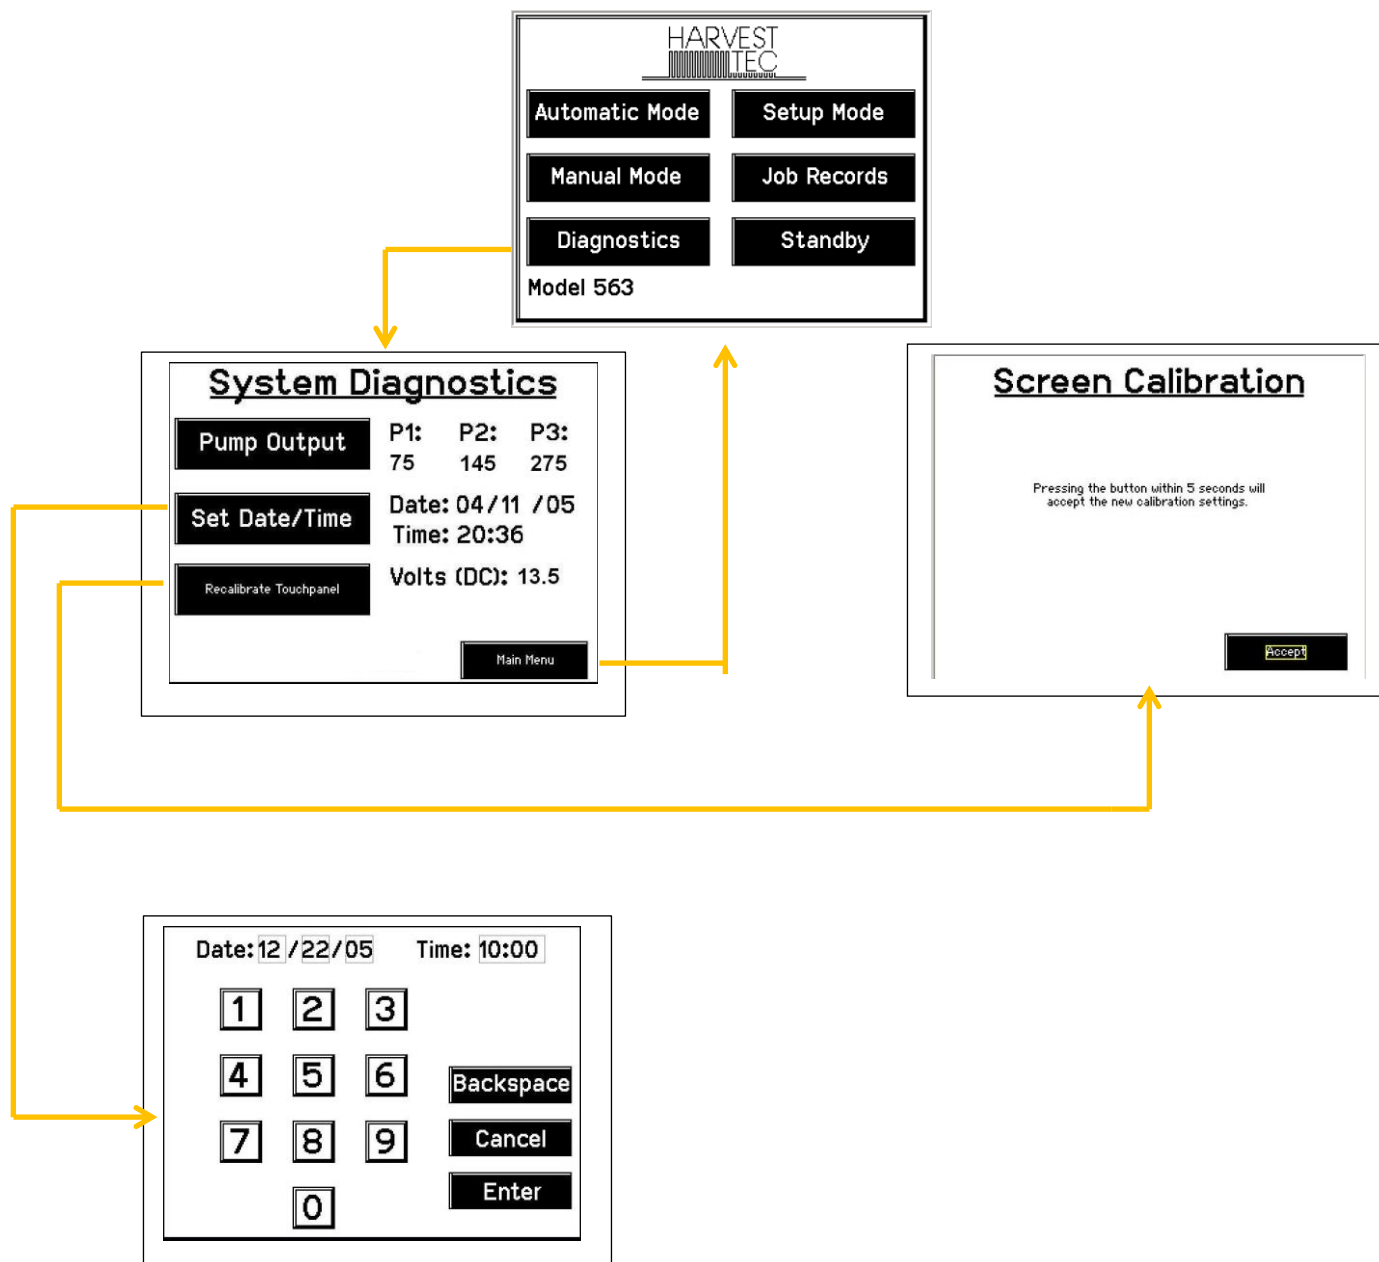


For AGCO part cross-reference visit: www.harvesttec.com/system.html

First Time and Annual Start Up Instructions

AFTER INSTALLATION THE UNIT MUST BE CHECKED OUT BEFORE FIELD OPERATION!!

Check and Prime the Pumps

1. Put 10 gal of water in tank and turn main ball valve on.
2. Inspect for any leaks or drips at this time. If any are found tighten or replace area or fitting.
3. **Turn controller on** (push anywhere on the screen followed by pressing on the press to start key).
4. Press the SETUP MODE key. (**See page 19**) Disable the Bale Rate Timer. Bale Rate Timer will now say **OFF**. Make sure the AVG Bale Weight is 1500 lbs. and EST Baling Time is 60 sec. Press the MAIN MENU key to return to the opening screen.
5. Press the MANUAL MODE key.
6. The screen shown below should appear.
7. The rates listed below are for Harvest Tec buffered propionic acid. Other products will need to be collected and weighed to assure proper performance is achieved.

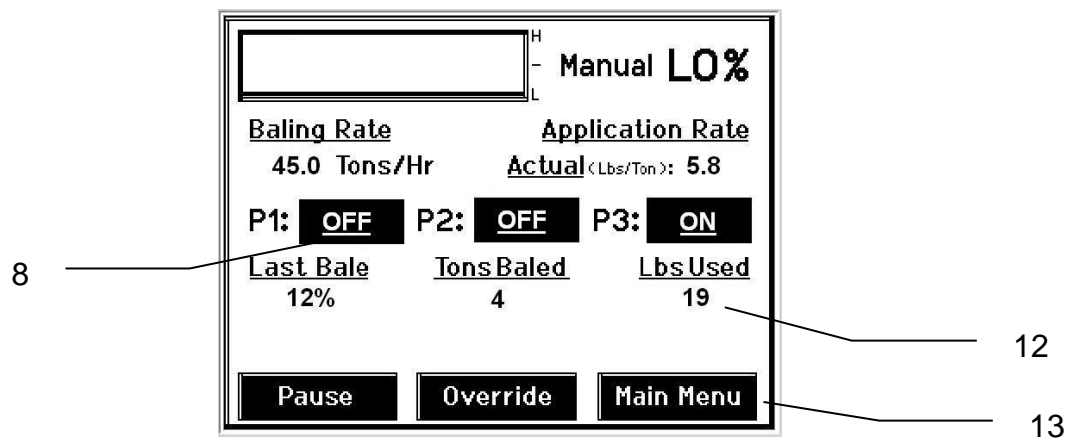

8. NOTE: THE SYSTEM COMES WITH THE HIGH TIPS ALREADY INSTALLED ON THE SPRAY SHIELD. TEST SYSTEM WITH TIPS YOU WILL USE MOST OFTEN.


- **With low tips in:** Turn pump 1 on (P1). To do this press the underlined area on the screen which says OFF. The application rate should then read between .7 – 1.2 Lbs/Ton. Ideally, at 13.5 volts, the rate would read 1.0 Lbs/Ton.
 - Repeat the process for pumps 2 and 3 (P2 and P3). The application rate should read between 1.7 – 2.4 Lbs/Ton and 2.5 – 3.5 Lbs/Ton respectively. Ideally, at 13.5 volts, the rate for pump 2 would be 2.0 Lbs/Ton; pump 3 would be 3.0 Lbs/Ton.
 - **With high tips in:** Turn pump 1 on (P1). To do this press the underlined area on the screen which says OFF. The application rate should then read between 1.3 – 1.9 Lbs/Ton. Ideally, at 13.5 volts, the rate would read 1.6 Lbs/Ton.
9. Repeat the process for pumps 2 and 3 (P2 and P3). The application rate should read between 2.6 – 3.6 Lbs/Ton and 4.9 – 6.8 Lbs/Ton respectively. Ideally, at 13.5 volts, the rate for pump 2 would be 3.1 Lbs/Ton; pump 3 would be 5.8 Lbs/Ton.
 10. This process will also be used to prime the pumps whenever needed.
 11. While running pumps check for a good spray pattern out of the respective tips and verify that no parts of the system are leaking.
 12. While doing these tests the Volume Used on the bottom of the screen should be counting up, this verifies that the flow meter is functioning.
 13. Press the MAIN MENU key to return to the initial start up screen.

Setting Up System For Initial Use

In this mode you will setup your initial application rate and baling rate.

Application Rate


After pushing the **Setup Mode** key in the **Main Menu** screen, the top left screen should appear:

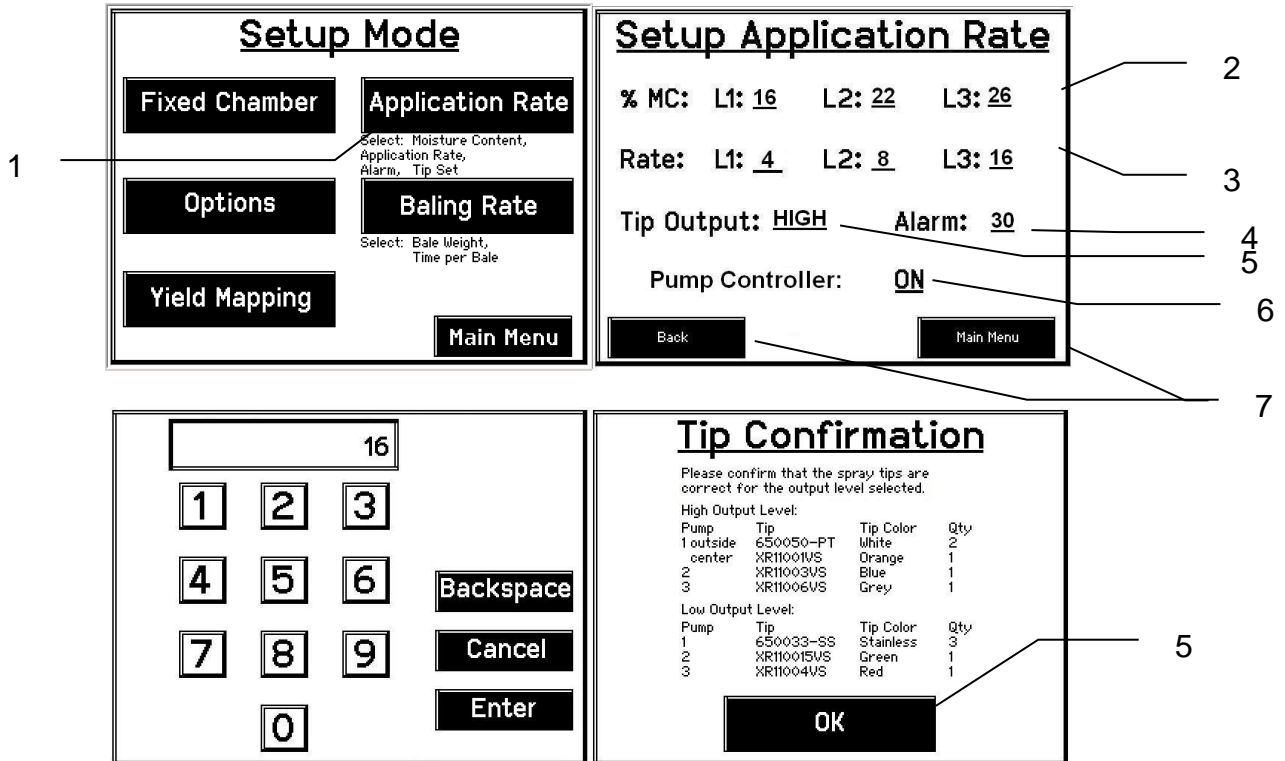

1. On this screen the operator will press the **Application Rate** key. Once pressed the **Setup Application Rate** screen will be shown. (Top right picture)
2. Press any of the underlined numbers to the right of %MC to adjust their figures. The key pad shown on the bottom left will display. Remember level 1 must be lower than level 2 and level 2 must be lower than level 3. Harvest Tec products recommend set points of 16,22, and 26 % MC levels. These are preset from the factory. Press ENTER to return to previous screen.
3. To change rate of chemical application, press any of the underlined numbers to the right of **Rate**:. The key pad shown on the bottom left will display. Remember level 1 must be lower than level 2 and level 2 must be lower than level 3. Harvest Tec products recommend rates of 4,8, and 16 lbs/ton. These rates are preset from the factory. Press ENTER to return to previous screen. **IT IS THE OPERATORS RESPONSIBILITY TO FOLLOW THE RECOMMENDATIONS OF THE PRESERVATIVE. ONLY THE OPERATOR CAN APPLY THE PROPER RATE.**
4. To set the alarm press on the underlined area and set the level at which you want the alarm to activate. To turn the alarm off, set level above 35.
5. **To change the tip output setting to either low or high**, press the underlined word to the right of Tip Output:. In the TIP CONFIRMATION screen the operator can verify and change tip selection. After the tips have been verified or changed, press the OK key to return to the previous screen.
6. The Pump Controller needs to be turned ON for the pumps and flow meter to function.
7. Next press the BACK key found on the bottom left hand figure of the screen to return to SETUP MODE screen or press MAIN MENU key on the bottom right hand figure of the screen to return to the opening screen.

Baling Rate

After pushing the SETUP MODE key in the Main Menu screen, the top screen should appear:

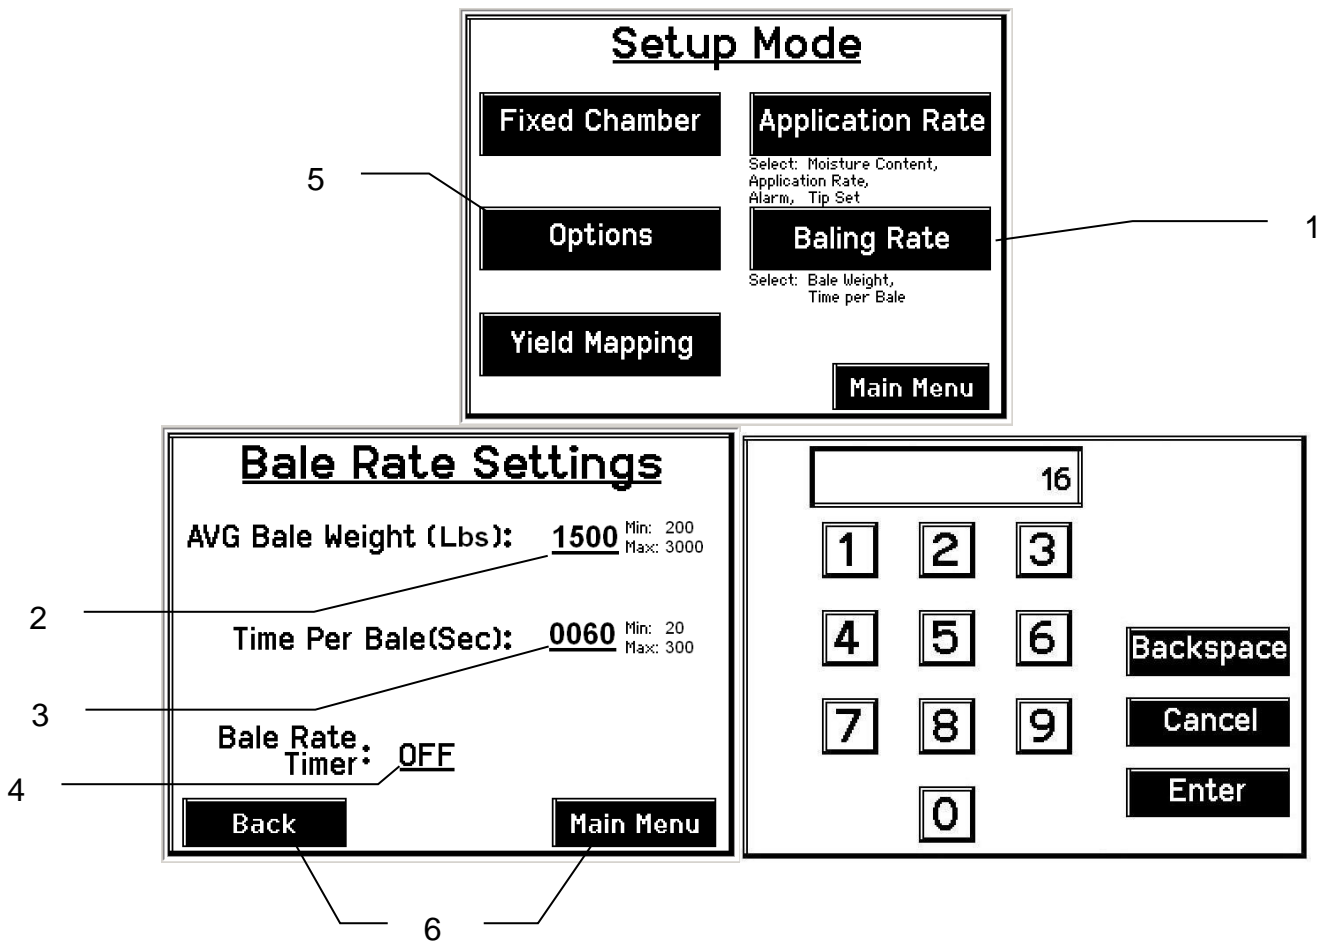


1. On this screen the operator will press the BALING RATE key. This screen is shown on the bottom left side picture shown above.
2. Press the underlined number to the right of AVG Bale Weight (Lbs): to adjust the weight of your bales. The key pad shown on the right side will display. Press any number combination in this screen within the min/max limits. Press the ENTER key to save this information. The information will remain until it is changed again.
3. Press the underlined number to the right of Time Per Bale (Sec): to adjust the time it takes to make a bale. The key pad shown on the right side will display. Press any number combination in this screen within the min/max limits. Press the ENTER key to save this information. The information will remain until it is changed again. Recommended.
4. If the unit will be run with the Bale Rate Timer: **ON** (recommended), the system looks at your inputted bale weight and the interval of time of the baler door opening. When the Bale Rate Timer is **ON**, the applicator will calculate your tons per hour. If the unit will be run with the Bale Rate Timer: **OFF** (as shown above), a constant tons per hour (your inputted bale weight and time) will be used. Press the underlined word to toggle between on or off. **With the Bale Rate Timer: ON, the bales made must be within 50 percent of the default time. If your field variations do not allow this turn the Bale Rate Timer: OFF and set for the lowest time per bale.**
5. Press the OPTION key to adjust the touchscreen between metric and standard units and languages. The Hay Indicators can also be turned on or off in this screen. Press the ON or OFF next to EOR.
6. Next press the BACK key found on the bottom left hand figure of the screen to return to SETUP MODE screen or press the MAIN MENU key on the bottom right hand of the screen to return to the opening screen.

Fixed Chamber

Attention: This section is only used for fixed chamber balers.

After pushing the SETUP MODE key in the Main Menu screen, the top screen should appear:

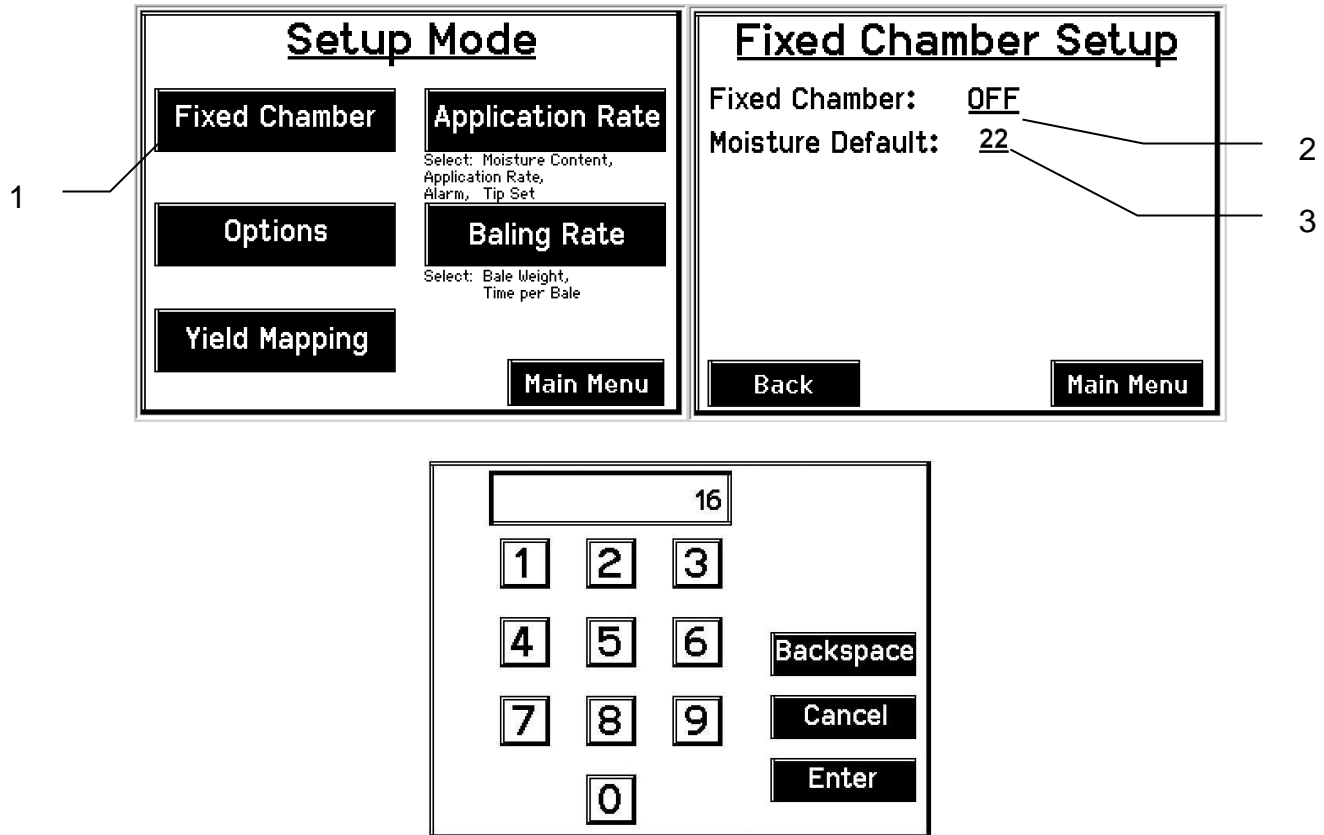


1. On this screen the operator will press the FIXED CHAMBER key. This screen is shown on the left side picture shown above.
2. Press the underlined OFF next to Fixed Chamber to cycle between ON and OFF.
3. To adjust the Moisture Default press the underlined number. The key pad shown on the bottom will display. Press any number combination in this screen within the min/max limits. Press the ENTER key to save this information. The information will remain until it is changed again. The moisture default number needs to be set for the highest moisture that will be found in the bale. The moisture default will be the moisture setting used for the first half of the bale formation. During the second half of the bale formation the system will utilize the moisture discs to adjust the moisture reading every three seconds.
 - a. The first half of the next bale will use the moisture information read from the previous bale, until the moisture discs can take a reading and adjust accordingly; during the second half of bale.
4. The Bale Rate Timer needs to always be set to ON when operating in Fixed Camber mode. If no end of bale sensor is found within a time frame, an error message, will display on the screen notifying you that the sensor was not found. Verify that the sensor is installed and not damaged. See Installation of Bale Rate Timer Sensor.
5. If the Bale Rate Timer is set to OFF and in Fixed Chamber mode the system will **only** use the default moisture level for the entire bale and the tons/hour that is set up in the Baling Rate screen. Once the Bale Rate Timer is set to ON the system will return to normal operation.

Operating Instructions

Auto mode will automatically apply product based on hay moisture content sensed by the moisture discs, the tons per hour measured by the Bale Rate Timer, and the operator's presets. (See SETTING UP SYSTEM FOR INITIAL USE to change any of these settings). **Manual mode will apply preservative to the hay at a fixed rate regardless of the moisture content.**

AUTOMATIC MODE


After pushing the AUTOMATIC MODE key in the Main Menu screen, the following screen should appear:

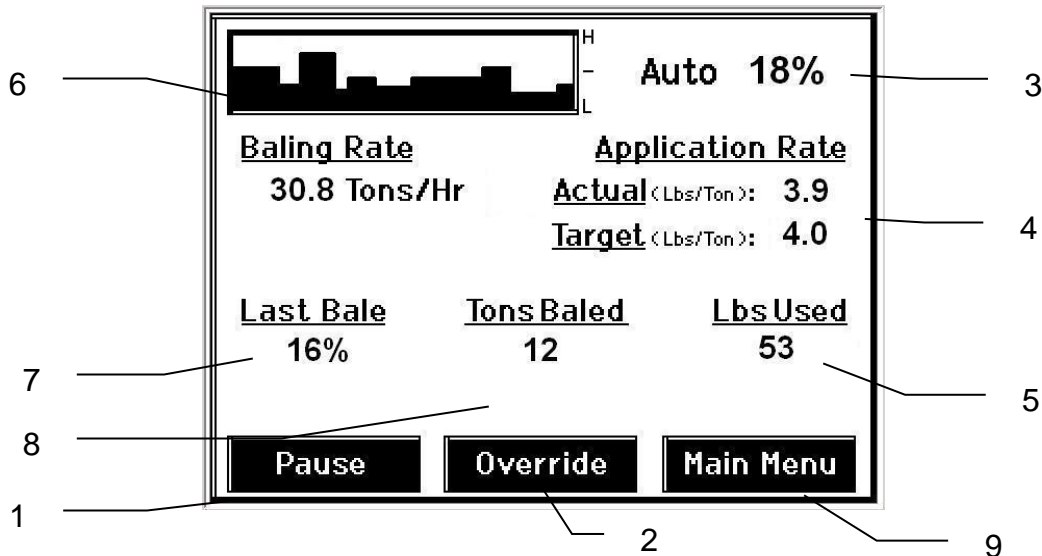

1. Push the Pause key to stop application while in operation.
2. Push the OVERRIDE key to turn on all three pumps at the same time for full output of the system. Use this mode when going through a short area of wet crop.
3. The moisture content is shown in the upper right hand corner.
4. Baling Rate and Application Rate are shown in the middle. The operator sets the target application rate in the setup mode; the actual rate should be within +/- one pound when running. The baling rate is also calculated in the Setup Mode.
5. The Totals on the bottom of the screen show the total tons baled and pounds of product used for the current job. These numbers will reset to zero when a new Job Record is started. If operating with Bale Rate Timer: OFF total tons baled will be zero.
6. The graph shows the moisture trend from the past 90 seconds in 3 second intervals.
7. Last Bale shows the average moisture content for the last bale.
8. Any Status Alerts for the system will appear in this area. See the STATUS ALERTS section for information.
9. Press the MAIN MENU key to return to the opening screen

MANUAL MODE

After pushing the MANUAL MODE key in the Main Menu screen, the following screen should appear:

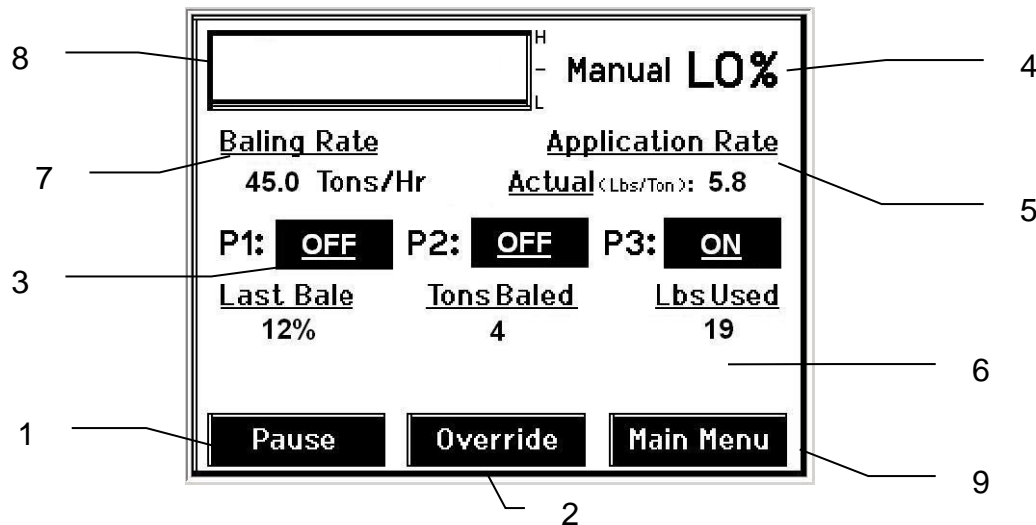

1. Push the START/STOP key to pause the system while in operation.
2. Push the OVERRIDE key to turn on all three pumps at the same time for full output of the system. Use this mode when going through a short area of wet crop.
3. In Manual Mode you can turn the pumps on or off by pressing the underlined area next to the pump numbers. In Manual Mode (regardless of moisture, tons per hour or bale weight) the outputs of the pumps are fixed rates as follows:

Low output tips:

Pump 1 = 45 LBS/HR
Pump 2 = 90 LBS/HR
Pump 3 = 135 LBS/HR

High output tips:

Pump 1 = 75 LBS/HR
Pump 2 = 140 LBS/HR
Pump 3 = 265 LBS/HR

4. The moisture content is shown in the upper right hand corner.
5. Baling rate and Application rate are shown in the middle. The output of a pump can be checked by dividing the preset output (shown in step 3) by the displayed baling rate. For example, if you have the high output tips in and are running pump three, by itself, your output is 265 lbs/hr. Given the baling rate shown on the above screen (45 tons/hr), the application rate should be about 5.8 lbs/ton (265lbs/hr divided by 45 tons/hr).
6. Volume used shown at the bottom of the screen will show accumulated pounds of preservative used on the go. This number will reset at power down, but remains in the job record screen. **NOTE: Initial start-up requires pressing the New Job key in the Job Records screen in order for Volume Used accumulation to be recorded. This only needs to be done once on initial start-up of system and not every time the system is started for operation.** (See JOB RECORDS screen)
7. The baling rate is set in the SETUP MODE menu.
8. This graph shows the moisture trend from the last 90 seconds of baling (one reading every 3 seconds).
9. Press the MAIN MENU key to return to the opening screen.

For AGCO part cross-reference visit: www.harvesttec.com/system.html

JOB RECORDS

After pushing the JOB RECORDS key in the Main Menu screen, the following screen should appear:

Job Records

1

3

5

LUKE1 **Field Name**

-./	ABC	DEF
1	2	3
GHI	JKL	MNO
4	5	6
PQRS	TUV	WXYZ
7	8	9
*	0	#

Job Details

Job: 1 Field: LUKE1

Date: 04/11 /05 Time: 17:15

Total Baled: 32 Tons

Product Used: 192 Lbs

Average MC: 24 %

Highest MC: 52 %

Bales: 43

Bale Details

Job #: 1 Field Name: LUKE1

Bale #	MC%	HI MC%	WT (Lbs)	Pres (Lbs)
17890	20	23	1000	5
17891	18	21	1000	3
17892	22	26	1000	6
17893	20	23	1000	5
17894	18	21	1000	3

1. Pressing New Job will save all the previous bale records and open the Field Name screen.
2. Use the key pad in the Field Name screen to enter up to an eight character field name. Use the asterisk key to move on to the next letter or number if they are identical. Use the pound sign as a space between the characters. When you have completed the field name press enter.
3. Pressing Job Details will open the Job Details screen. Use the up and down arrows to scroll through the different jobs. Job: 0 will always be your current and open job record. Press Back to go to the Job Records screen or Main Menu for the main screen.
4. Pressing Bales on the bottom of the screen will open a Bale Details screen. This screen lets you look at the individual bale records for the first five bales made. Use the up and down arrows to scroll through five bales at a time. Press Back to go to the Job Details screen or Main Menu for the main screen.

Continued on the next page

Continued JOB RECORDS

Download Job Records

Job 0

* 4 GL

3 RICK2

Download

Select

Delete

Select All

Back

Main Menu

Selected

Microsoft Excel - 563 Job Record Example.xls

JOB DATA									
FIELD	JOB #	AVG MC	HI MC	# USED	BALES	TONS	DATE/TIME		
31	2	18	22	89	25	22	25 AUG 10 14:11		
BALE DATA									
FIELD	JOB #	AVG MC	HI MC	#/BALE	BALE ID	BALE WT	BALE TM	DATE/TIME	
31	2	17	19	6.7	S355401229	1800	60	25 AUG 10 12:23	
31	2	18	19	2.4	S355401240	1800	59	25 AUG 10 14:30	
31	2	17	19	3.9	S355401241	1800	68	25 AUG 10 14:33	
31	2	17	21	4.2	S355401242	1800	99	25 AUG 10 14:36	
31	2	18	20	3.8	S355401243	1800	64	25 AUG 10 14:40	
31	2	17	19	6.1	S355401244	1800	114	25 AUG 10 14:43	
31	2	17	18	2.1	S355401245	1800	65	25 AUG 10 14:45	
31	2	17	19	6.5	S355401246	1800	123	25 AUG 10 14:49	
31	2	16	18	3.1	S355401247	1800	100	25 AUG 10 14:53	
31	2	15	17	2.7	S355401248	1800	97	25 AUG 10 14:57	
31	2	15	17	1.4	S355401249	1800	99	25 AUG 10 15:00	
31	2	16	19	2.9	S355401250	1800	91	25 AUG 10 15:04	
31	2	16	18	2.8	S355401251	1800	95	25 AUG 10 15:07	
31	2	15	18	1.8	S355401252	1800	75	25 AUG 10 15:09	
31	2	14	17	1.8	S355401253	1800	85	25 AUG 10 15:13	
31	2	17	19	2.4	S355401254	1800	61	25 AUG 10 15:16	
31	2	17	18	3.5	S355401255	1800	65	25 AUG 10 15:19	
31	2	17	20	5.8	S355401256	1800	60	25 AUG 10 15:21	
31	2	15	18	4.1	S355401257	1800	105	25 AUG 10 15:40	
31	2	16	17	2.3	S355401258	1800	80	25 AUG 10 15:51	
31	2	16	17	3.2	S355401259	1800	77	25 AUG 10 15:54	
31	2	17	20	3.8	S355401260	1800	90	25 AUG 10 15:56	

RYAN1 - Notepad


JOB DATA							
FIELD NAME	JOB NUMBER	AVG MC	HIGH MC	PRODUCT USED	TOTAL BALES	TOTAL TONS	DATE/TIME
RYAN1	00033	00026	00005	0000000397	00026	0000000004	29 DEC 08 12:51
BALE DATA							
FIELD NAME	JOB NUMBER	AVG MC/BALE	HIGH MC/BALE	PRODUCT USED/BALE	BALE ID NUMBER	BALE WEIGHT	
RYAN1	00033	00026	00024	00024	0003.3	0847600728	01600, 29 DEC
RYAN1	00033	00024	00024	00024	0003.9	0847600729	01600, 29 DEC
RYAN1	00033	00024	00024	00024	0003.9	0847600730	01600, 29 DEC
RYAN1	00033	00024	00024	00024	0003.9	0847600731	01600, 29 DEC
RYAN1	00033	00024	00024	00024	0003.3	0847600732	01600, 29 DEC
RYAN1	00033	00024	00024	00024	0003.9	0847600733	01600, 29 DEC
RYAN1	00033	00024	00024	00024	0003.9	0847600734	01600, 29 DEC
RYAN1	00033	00024	00024	00024	0003.4	0847600735	01600, 29 DEC
RYAN1	00033	00026	00026	00026	0003.6	0847600736	01600, 29 DEC
RYAN1	00033	00026	00026	00026	0003.6	0847600737	01600, 29 DEC
RYAN1	00033	00026	00026	00026	0004.2	0847600738	01600, 29 DEC
RYAN1	00033	00026	00026	00026	0004.2	0847600739	01600, 29 DEC

5. Pressing the Download key will open the Download Job Records screen. This screen lets you select jobs to download onto a USB drive. To download insert a USB drive into the port on the Precision Information Processor. Select the job(s) you would like to download using the up and down arrows to highlight the job(s), an asterisk will appear next to all selected jobs. Once all the jobs are selected press the Download key. Press the Download key again to confirm. When the USB drive light goes off all the jobs selected will be saved. The jobs can then be opened on any computer with Excel or Notepad. To delete jobs highlight, select them and press delete followed by pressing delete again for confirmation. Press Back to go to the Job Records screen or Main Menu for the main screen.
6. Pressing the Select key will select or unselect the highlighted job.
7. Pressing the Select All key will select all jobs, except for the current job (0). To unselect press the Back key.
8. The job record in excel will show as above. The Bale ID column will need to be adjusted for proper viewing.
9. The job record in Notepad will show as above. You will need to move right to see all the information.

For AGCO part cross-reference visit: www.harvesttec.com/system.html

DIAGNOSTICS

After pushing the DIAGNOSTICS key in the Main Menu screen, the following screen should appear:

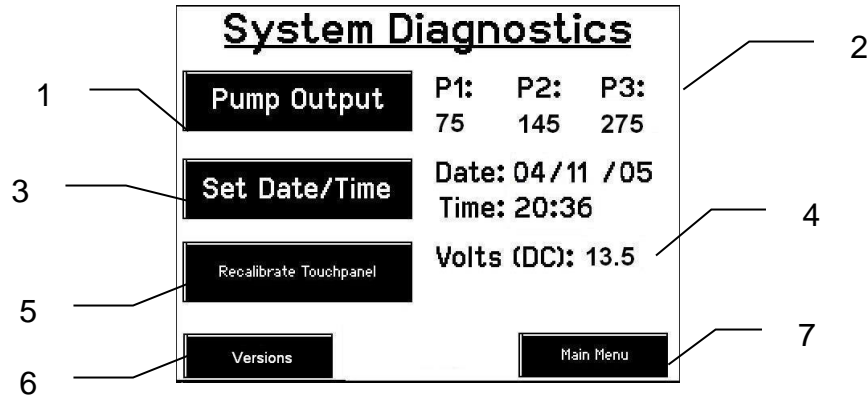

The diagnostic mode will automatically check the pump output and performance of the three pumps. It is recommended to use this mode daily to ensure proper system performance.

Acceptable ranges for output:

Low output tips:

Pump 1 = 38 - 53 LBS/HR
Pump 2 = 76 - 105 LBS/HR
Pump 3 = 115 - 160 LBS/HR

High output tips:

Pump 1 = 64 - 88 LBS/HR
Pump 2 = 119 - 165 LBS/HR
Pump 3 = 225 - 312 LBS/HR

- Once the screen is displayed, press the PUMP OUTPUTS key.
The machine will cycle all three of the pumps for 15 seconds. After the cycles are complete, the system will display a number next to each pump number.
- If the system displays within the listed range.**
 - The system is operating correctly.**If the system displays higher than the listed range, some common problems could be:**
 - Leak in line. Inspect lines thoroughly.
 - Tip missing. Check for lost or broken tip on spray shield.
 - Tip worn. Replace tip.
 - High tractor voltage.**If the system displays lower than the listed range, some common problems could be:**
 - Make sure there is preservative in the tank and ball valve is in the open position.
 - Air in lines. Pump will not prime. Check for leak in lines, or defective check valve.
 - Pump is working, but not producing desired output. Pump needs to be rebuilt.
 - Main filter plugged. Check filter by tank and clean if necessary.
 - Tip or tip screen plugged. Check both tip and tip screen and clean if necessary.
 - Kink in hose. Straighten or replace hose.
 - Voltage from tractor is low. Check power cord with multimeter for 12 volts at baler mounted processor. Clean connections on battery. Dielectric grease connections at baler mounted processor and at hitch connection.
 - Pump is defective. Rebuild pump if motor runs smoothly. Replace pump if motor is bad.
 - Defective flow meter. Only if all pumps run, product is applied, and all numbers read 0.
- To set date and time, press the SET DATE/TIME key. In the next screen enter the date (month, day, year format) followed by the time. When done press the ENTER key. NOTE: The clock uses military (or 24 hour) time.
- The voltage should be between 12.0 to 14.5 volts for the system to work properly. If voltage is not in this range check all power cord connections and the tractors charging system.
- Press the Recalibrate Touchpad key to realign the screen keys to your preference. When the screen appears follow the directions and press accept when done.
- Press the Versions key to check all software versions of modules attached to the PIP.
- When done in this mode, press the MAIN MENU key.

For AGCO part cross-reference visit: www.harvesttec.com/system.html

Common Questions about the 563

1. How do I turn the system on/off?

Turn the key in the tractor to the on position. If the unit is in Standby Mode, press anywhere on the screen. To turn off, press the Standby key, wait for the screen to power down and turn off the key.

2. How to get in the LBS/TON, MC%, and TONS/HR screens?

In the Main Menu press the SETUP MODE key. From this screen you can change your application rates and how much product is applied. See SETTING UP FOR INITIAL USE for a detailed explanation of this process.

3. The unit is stuck in the Application Rate screen.

In the Application Rate screen, level 1 must be less than level 2, and level 2 must be less than level 3. For example, if level 1 is set at 16, level 2 must be set at 17 or higher, and level 3 must be set higher than level 2.

4. How does OVERRIDE work?

Override turns on all three pumps at full output. The pumps will remain at full output until the operator turns these pumps off by pressing the OVERRIDE key again.

5. The flow meter reading is more or less than the programmed level set in the box.

Some variation in flow meter readings compared to the programmed set point is normal due to factory tolerances on the pump motors as well as varying tractor voltages inputted to the control box. The flow meter reading is an accurate measure of how much product is actually being applied. The set points then will need to be adjusted if you want to attain a different flow meter reading.

6. Why don't all the pumps turn on even at higher application rates?

The selections of what pumps turn on when are automatically controlled by the control box's flow rate look up chart. Thus, not all the pumps turn on at once and the combination of what pumps turn on when is automatically controlled by the software. If you want to make sure all three pumps are working, go to the Diagnostics screen and run pump outputs.

7. The moisture content displays "LO" or "HI" all the time.

When the moisture content display does not change frequently while baling, there is likely a faulty moisture disc connection. One of the first places to check is build up around the moisture discs and for grounding between the disc and the bale chamber. Also, check all moisture disc wires and connectors to see if there is a continuity or grounding problem.

8. Should the battery connections be removed before jump starting or charging a battery?

Yes. Anytime the tractor will have voltage going up rapidly the connections should be removed.

9. How do I recalibrate the touch screen display?

In the system diagnostics screen press the Recalibrate Touch screen key and follow the directions on the screen. Press accept when done.

10. How can I turn the optional Hay Indicators on/off from the cab?

In the Setup Mode screen press options. Press the on/off underlined area next to EOR sensor.

For AGCO part cross-reference visit: www.harvesttec.com/system.html

Maintenance

- If you are unsure how to perform any of the maintenance steps have your local authorized dealer perform the tasks.


Maintenance Schedule

	Daily	10 hrs	400 hrs	Weekly	Monthly	Season
Diagnostics	X					X
Filter bowl cleaning		X				X
Tips & tip screen cleaning		X				X
Tank lid cleaning		X				X
Dielectric grease connections					X	X
Rebuild pumps			X			
Battery connections				X		X
Check valves			X			
Visually inspect hoses				X		X


Diagnostics: Follow the instructions in this manual to run the Diagnostics mode.

Filter bowl cleaning: The filter bowl is located in front of the applicators tank and is connected to the ball valve. Before cleaning the filter bowl all personal protective equipment must be worn (Face shield or goggles, chemically resistant apron, boots, and gloves).

Verify that the ball valve located next to the pump is turned off. Locate the filter bowl on the side of the pump manifold (A). Unscrew the bottom section of the filter bowl and remove the strainer. (B) Clean off any debris and soak in warm water with a mild soap if necessary. Once the screen is clean reinstall by following the directions in reverse.

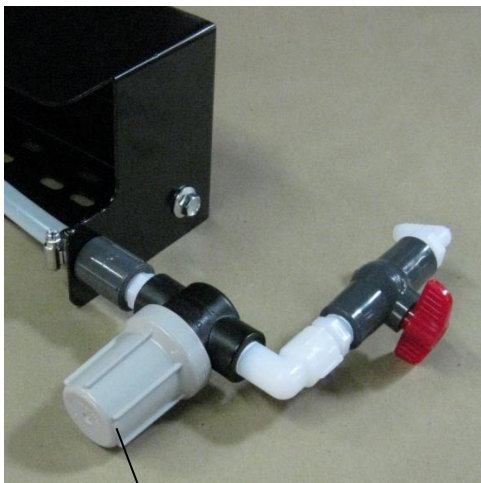

A

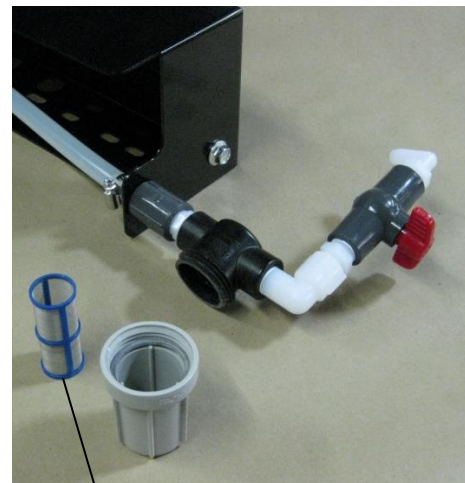

B


For AGCO part cross-reference visit: www.harvesttec.com/system.html

Tips & tip screen cleaning: The spray shield assembly or nozzle tubes that hold the tips and tip screens is located above the pickup head.

Before cleaning the tips and screens all personal protective equipment must be worn (Face shield or goggles, chemically resistant apron, boots, and gloves).

For spray shield assemblies only:


Verify that the ball valve located next to the pumps turned off. Disconnect spray shield from hangers by removing the lynch pins (A). Disconnect check valve nuts and remove hoses from shield. (B) Remove shield from baler. Remove all six nozzle caps with a 7/8 inch wrench.(C) Hold the nozzle body from turning while removing the nozzle caps with a 11/16 inch wrench. Remove the tip, and screen. Clean off any debris and soak in warm water with a mild soap if necessary. Once the tips and screens are cleaned reinstall by following the directions in reverse.

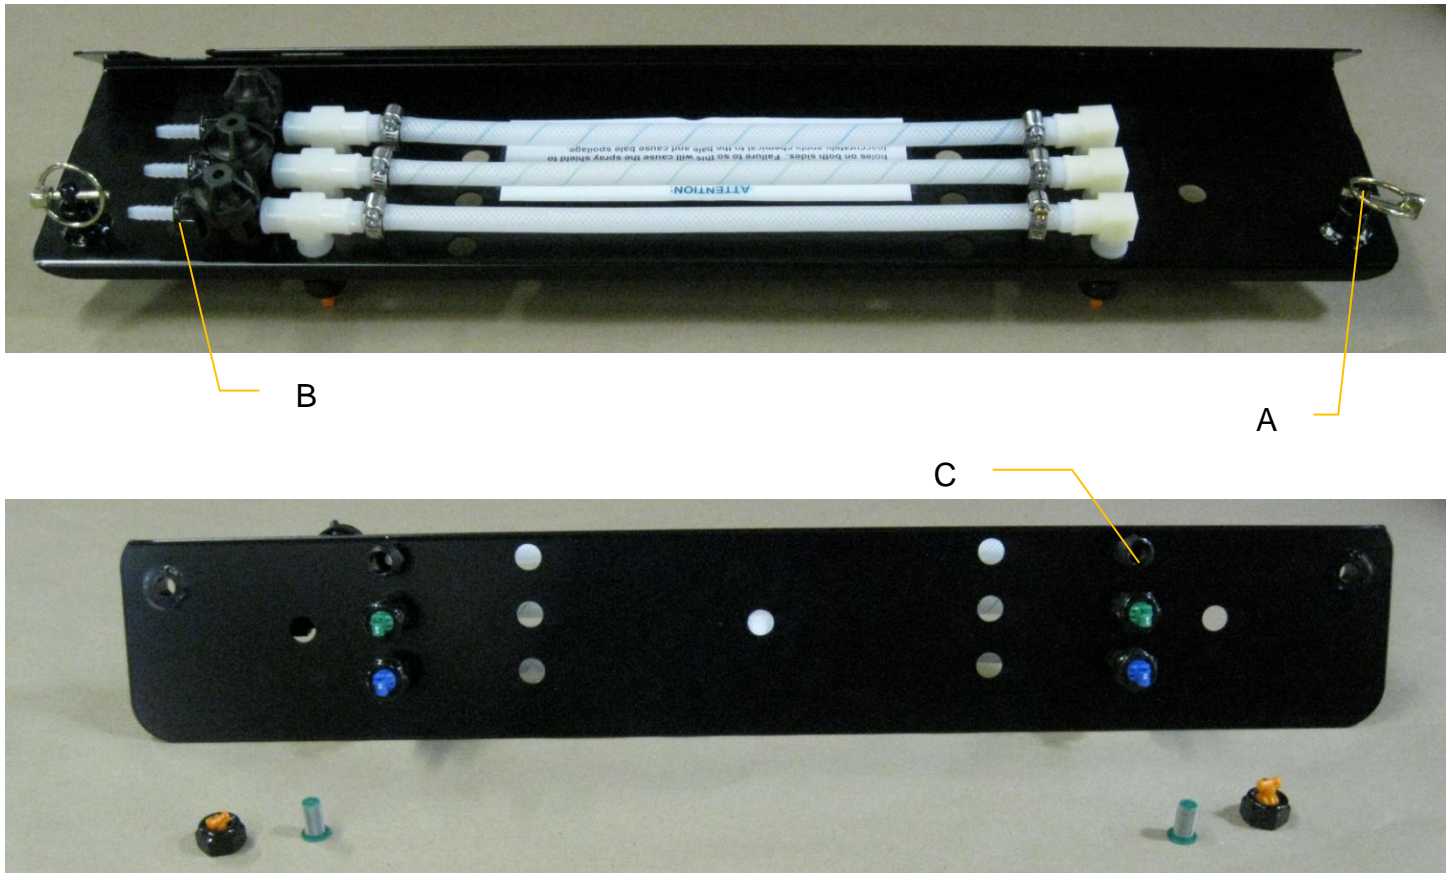


For AGCO part cross-reference visit: www.harvesttec.com/system.html

For nozzle tubes only:

Verify that the ball located next to the pumps is turned off. Clean off any loose debris in the area of the tips. Using a 7/8 inch wrench remove the nozzle caps. (A) Remove the tip and screen. Clean any debris off the tip and screen and soak in warm water with a mild soap if necessary. Once the tips and screens are cleaned reinstall by following the directions in reverse. Make sure the tips are aligned correctly before tightening.

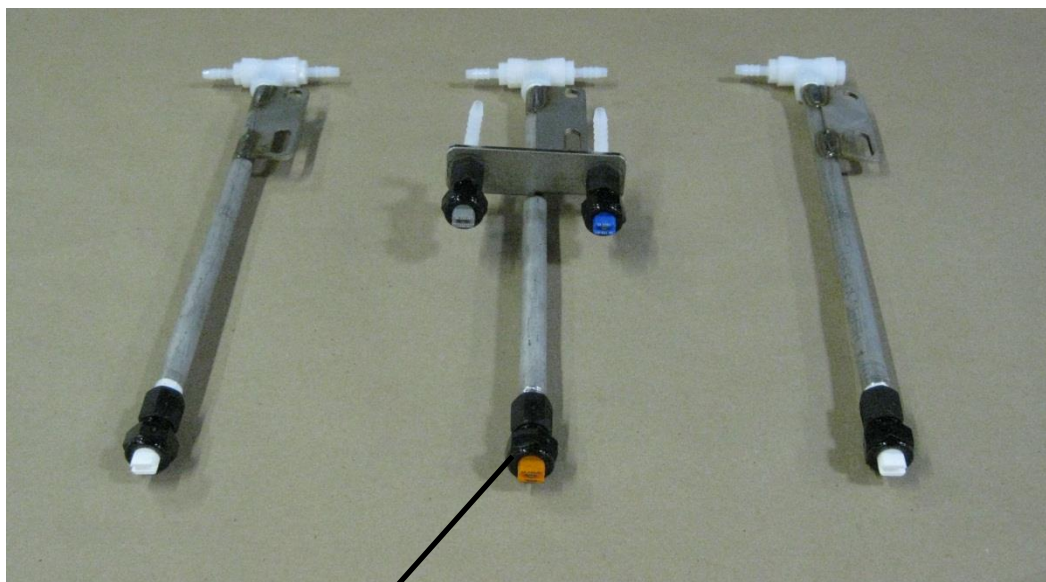

A


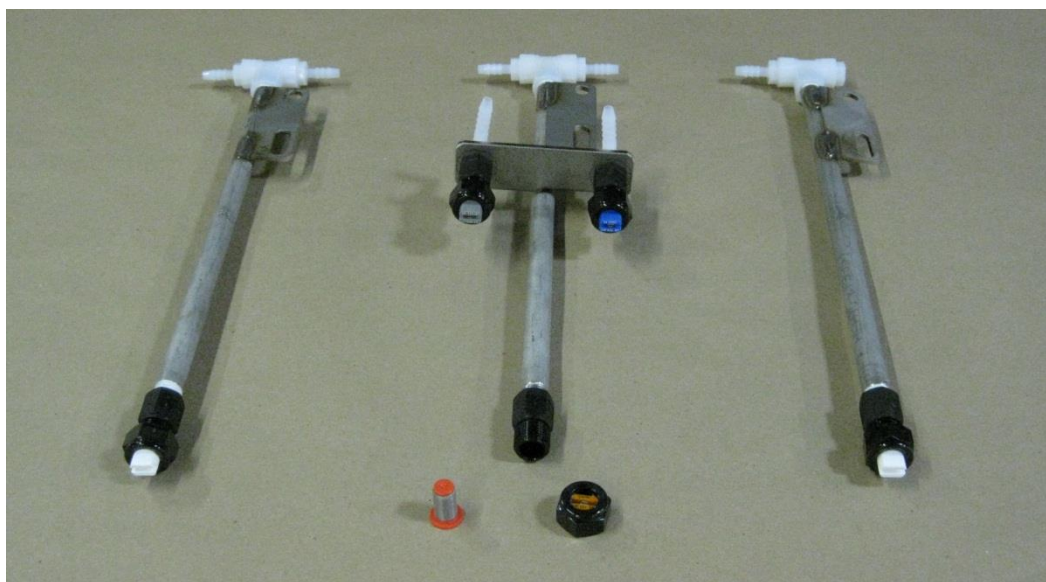


For AGCO part cross-reference visit: www.harvesttec.com/system.html

Tank lid cleaning:

Before cleaning the tank lid all personal protective equipment must be worn (Face shield or goggles, chemically resistant apron, boots, and gloves).

The tank lid is located on the top of the tank. Use the supplied handle on the tank to secure your person and use the other hand to remove any debris from the top of the tank. Unscrew the tank lid and bring down ground level. Use compressed air clean out the tank screen (D). If the screen cannot be thoroughly cleaned with compressed air, replace fitting (005-9022B3). Once the screen is cleaned reinstall the cover.

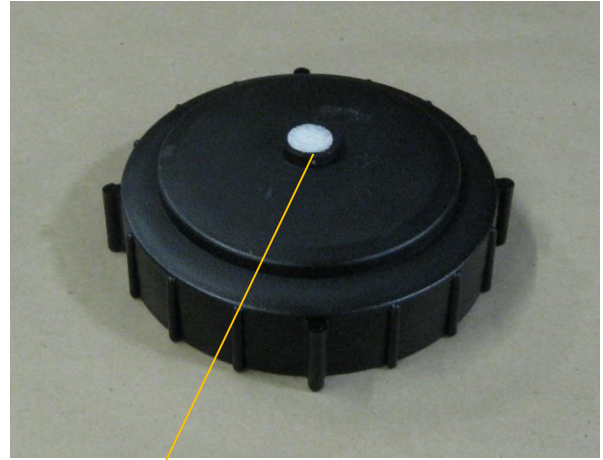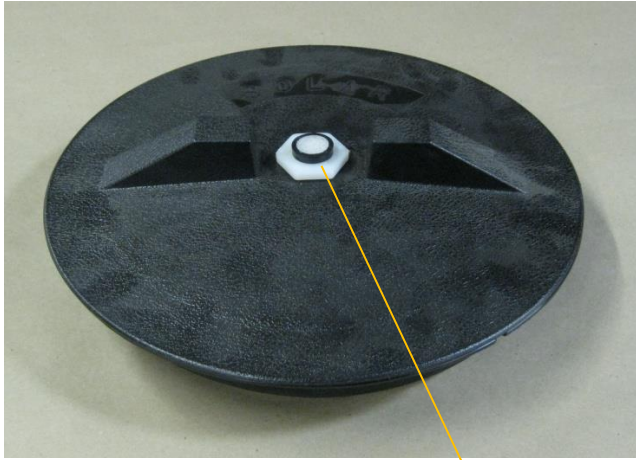

D

Dielectric grease connections: Disconnect all harnesses on the applicator, clean the connections, and repack with dielectric grease.

Rebuild pumps: If Diagnostic or Manual mode show that the pumps are running lower than normal, a pump rebuild may be necessary. To do this rebuild the pump must be removed from the pump manifold. Pump rebuild is part no. 007-4581. A service pack that includes pump rebuilds and check valves is available from your local dealer.

Verify that the ball valve is turned off. Before working around the pumps all personal protective equipment must be worn (Face shield or goggles, chemically resistant apron, boots, and gloves). Remove pump from manifold. Follow rebuild instructions supplied with pump rebuild kit. Reinstall after rebuild is complete.

Battery connections: Follow the batteries safety warnings and clean the battery connections. If the connections cannot be cleaned, replace harness.

Check Valves: Before servicing the check valves all personal protective equipment must be worn (Face shield or goggles, chemically resistant apron, boots, and gloves).

Verify the ball valve is turned off before service the check valves. Replace the intake check valves by the pumps (002-4566F) and the discharge check valves by the tip (004-1207VB).

For AGCO part cross-reference visit: www.harvesttec.com/system.html

Miscellaneous maintenance:

1. Depending on the product being used, the system may need to be flushed with water at a regular interval (consult with manufacturer of the chemical.) If Harvest Tec product is being used, flushing is not necessary.
2. Although the pump can run dry, extended operation of a dry pump will increase wear. Watch the preservative level in the tank.
3. If you are using bacterial inoculants, flush your system daily after every use.

Winter Storage

1. Thoroughly flush the system with water.
2. Remove the filter bowl and run dry until the water has cleared out of the intake side.
3. Remove the red plug from the bottom of the pump, drain, and run the pump for 30 seconds or until it is dry.
4. Drain all lines on the outlet side.
5. Never use oils or alcohol based anti-freeze in the system.
6. For spring start-up, if the pump is frozen, turn off the power immediately to avoid burning the motor out or blowing a fuse. The pump head can be disassembled and freed or rebuilt in most cases. Check the fuses after the pump has been freed.
7. Disconnect power from the Precision Information Processor.
8. Remove display from tractor and store in a warm, dry place.

TROUBLESHOOTING

<u>PROBLEM</u>	<u>POSSIBLE CAUSE</u>	<u>SOLUTION</u>
Pump will not run.	1. No voltage to PIP or Pump controller.	1. Check for short, low voltage, and replace fuse(s) if necessary.
	2. Pump locked up.	2. Clean or rebuild pump if motor is OK.
	3. Damaged wire.	3. Repair damaged wire.
	4. Fuse blown on Pump controller.	4. Replace fuse and check pump for short in wire or locked motor.
Pump runs but will not prime.	1. Air leak in intake.	1. Tighten fittings on intake side.
	2. Clogged intake.	2. Clean.
	3. Restricted outlet.	3. Check and clean tips.
	4. Check valve on the outlet is stuck closed.	4. Clean or repair check valve.
	5. Dirt inside pump.	5. Replace pump check valve.
Pump does not develop enough output.	1. Air leaks or clogs on inlet side.	1. Tighten or clean filter bowl assembly.
	2. Pump worn or dirty.	2. Rebuild pump.
Moisture reading errors (high or low)	1. Wire disconnected or bad connection between discs and PIP	1. Reconnect wire.
	2. Low power supply to PIP	2. Check voltage at box. (Min of 12 volts required.) See Diagnostics section of manual.
	3. Wet hay over 40% moisture	
	4. Ground contact with one or both discs and baler mounted processor.	4. Reconnect.
	5. Short in wire between moisture discs and PIP.	5. Replace wire.
	6. Check hay with hand tester to verify.	6. Contact Harvest Tec if conditions persist.
Moisture readings erratic.	1. Test bales with hand tester to verify that cab monitor has more variation than hand tester.	
	2. Check all wiring connections for corrosion or poor contact.	2. Apply dielectric grease to all connections.
	3. Check power supply at tractor. Voltage should be constant between 12 and 14 volts.	3. Install voltage surge protection on tractors alternator.
Flow meter readings do not match up with product usage.		
Product is less than actual product used.	1. Voltage supplied to meter is less than 6 volts.	1. Check for a min of 6 volts supplied at Pump controller.
	2. Wiring short in signal to Pump Controller.	2. Inspect wire and replace if necessary.
	3. Clog in meter.	3. Back flush with water. DO NOT USE AIR.
	4. Air in flow meter	4. Prime all pumps to remove air
	5. Using product other than Harvest Tec	5. Catch and weigh product to check outputs.
Product shown is more than actual product used.	1. High voltage supplied to the meter.	1. Check voltage at Pump controller. Max of 18 volts.
	2. Light interference with meter.	2. Reflection into meter can cause a high reading. Move meter or protect from sunlight.
	3. Air leak in intake.	3. Look for air bubbles in line. Replace line or other defective area that is allowing air into the system.
	4. Using product other than Harvest Tec	4. Catch and weigh product to check outputs.

System leaks product out of tips after shut down.	1. Dirty or defective check valves.	1. Clean or Replace.
Terminal reads under or over power.	1. Verify with mult-meter actual voltage. Voltage range should be between 12-14 volts.	1. Clean connections and make sure applicator is hooked to battery. See Diagnostics section of manual.
System does not pause at the end of a row.	1. Short in cable. 2. Damaged sensor. 3. Bad alignment of sensors	1. Replace cable. 2. Replace sensor 3. Check 474 manual for alignment instructions
Bale rate displays zero.	1. Bale rate sensors are reversed. 2. Short in cable. 3. Damaged sensor.	1. Switch the sensors next to the star wheel. 2. Replace cable. 3. Replace sensor.
Display will not power up.	1. Connection broke between the display and the PIP. 2. Short in display cable.	1. Check, clean, and tighten connections. 2. Replace cable.
Display is too dark or light	1. Change in temperature or light conditions.	1. Use the monitors contrast control.
Display is locked up/froze.	1. CAN communication not responding. 2. Broke connection between the display and PIP or Pump control and PIP.	1. Check connections at PIP and Pump controller including the terminating resistors. 2. Check, clean, and tighten connections. 3. Power unit down and restart after steps 1 & 2 are complete.
Display powers up when key is turned and will not go to the Main Menu screen.	1. CAN communication not responding. 2. Broke connection between the display and PIP or Pump control and PIP.	1. Check connections at PIP and Pump controller including the terminating resistors. 2. Check, clean, and tighten connections. 3. Power unit down and restart after steps 1 & 2 are complete.
Display is locked up/froze and pumps continue to run.	1. CAN communication not responding. 2. Broke connection between the display and PIP or Pump control and PIP.	1. Check connections at PIP and Pump controller including the terminating resistors. 2. Check, clean, and tighten connections. 3. Power unit down and restart after steps 1 & 2 are complete.

STATUS ALERTS

Two Status Alerts will appear on the Auto and Manual mode screens when the Job Records are approaching, or full of records.


Status Alert “**Bale Records: Less than 1K remaining**”. The system is now approaching the maximum amount of records that can be saved. When this code appears download and delete jobs in the Job Records menu. Follow the instructions in Job Records to accomplish this.

Status Alert “**Bale Records failed – Memory Full**”. The system will not longer accept any new data until jobs in the Job Records menu are downloaded and deleted. Follow the instructions in Job Records to accomplish this.

WIRING DIAGRAMS


A. Communication and power harness

Pin 1	Red	Can 12 volt
Pin 2	Red	Battery 12 volt
Pin 3	Orange	Keyed power
Pin 4	Not Used	
Pin 5	Yellow	Comm channel OL
Pin 6	Green	Comm channel OH
Pin 7	Not used	
Pin 8	Black	Can ground
Pin 9	Black	Battery ground
Pin 10	Not used	

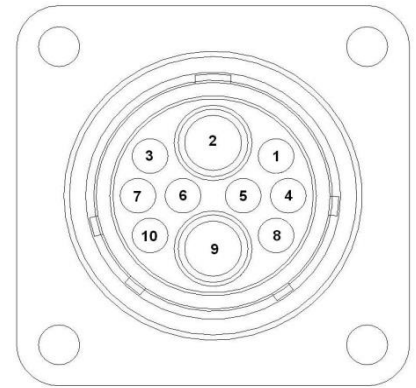


B. Main power connector mounted on PIP

Pin 1	Red	+ 12 V input from tractor supply
Pin 2	Black	Ground from tractor supply
Pin 3	Orange	Keyed power

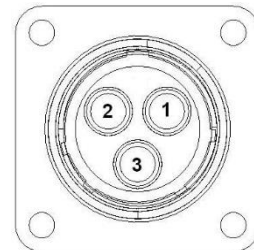


C. Pump connection colors

Pin 1	Black with orange markings	Pump 1 ground
Pin 2	Black with green markings	Pump 2 ground
Pin 3	Black with yellow markings	Pump 3 ground
Pin 4	Not used	
Pin 5	Orange with black markings	Pump 1 positive
Pin 6	Green with black markings	Pump 2 positive
Pin 7	Yellow with black markings	Pump 3 positive

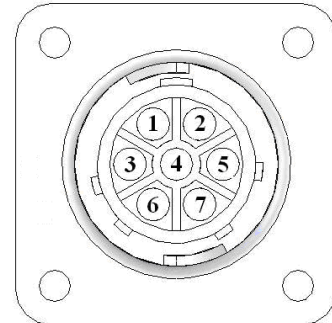

D. Flow meter connection on Pump Controller


Pin 1	White	5 - 12 V (+) supply
Pin 2	Green	Ground
Pin 3	Brown	Signal
Pin 4	Black	Shield

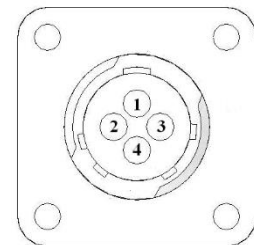

E. Connector for Hay Indicator option on PIP


Note: Hay indicators are an option that will turn the system on and off automatically as hay enters the pickup of the baler.

Pin 1	Red	+12V
Pin 2	Black	Ground
Pin 3	White	Signal wire
Pin 4	Not used	

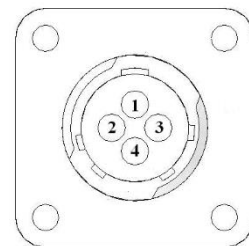


F. End of bale sensor on PIP

Pin1	Brown	<u>Sensor power</u>
Pin2	Blue	Sensor ground
Pin3	Not used	
Pin4	Black	Signal from sensor

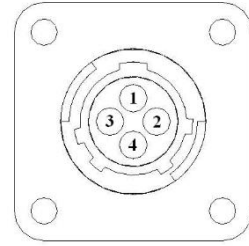


G. Moisture and Bale rate sensor connector on PIP

Pin 1	Not used	
Pin 2	Not used	
Pin 3	Not used	
Pin 4	Not used	
Pin 5	Silver	Shield
Pin 6	Silver	Shield
Pin 7	Not used	
Pin 8	Violet	Moisture input 1
Pin 9	Brown	Moisture input 2

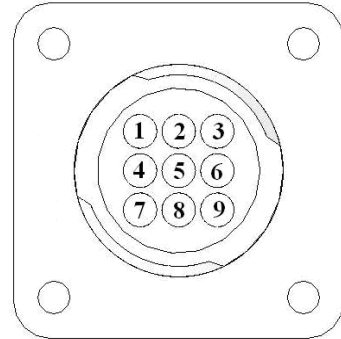


H. Display communication harness on PIP

Pin 1	Orange	Power to display
Pin 2	Blue	Ground to display
Pin 3	Green	Comm channel OH
Pin 4	Not used	
Pin 5	Yellow	Comm channel OL
Pin 6	Not used	
Pin 7	Not used	

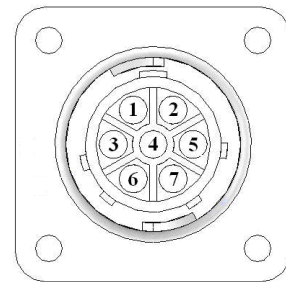


I. Communication harness on PIP and Pump Controller

Pin 1	Red	Can 12 volt
Pin 2	Red	Battery 12 volt
Pin 3	Grey	Shield
Pin 4	Green	Comm channel OH
Pin 5	Yellow	Comm channel OL
Pin 6	Blue	Comm channel IH
Pin 7	Orange	Comm channel IL
Pin 8	Black	Can ground
Pin 9	Black	Battery ground
Pin 10	Not used	

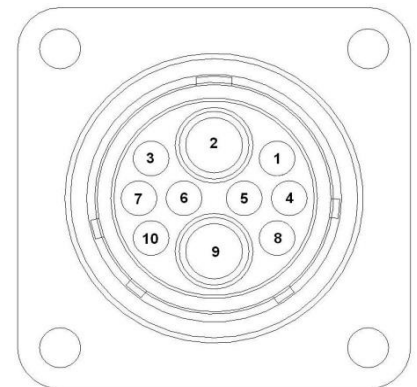


PARTS BREAKDOWN FOR THE TANK AND SADDLE

Harvest Tec Model 547 Base Kit

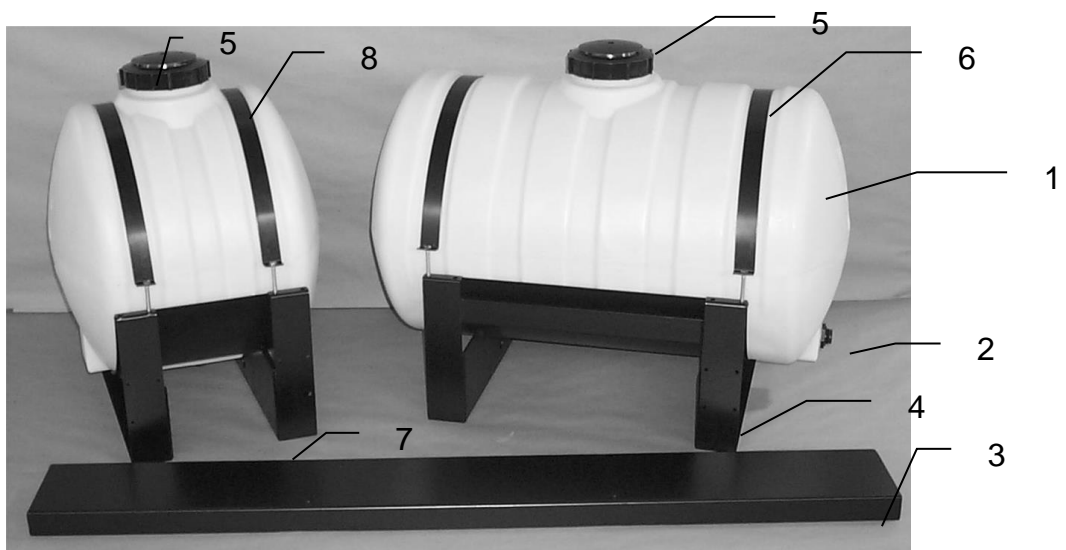


<u>Ref #</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>	<u>Ref #</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	55 Gallon tank	005-9203	1	5	Tank lid	005-9022C	1
2	Tank fitting	005-9100	1		Tank lid gasket	005-9022CG	1
3	Cross support bracket	001-4445B	1	6	Tank strap	001-4402	1
4	55 Gallon saddle	001-4445A	1	7	25 Gallon saddle	001-4442	1
				8	25 Gallon tank	005-9022	1

Harvest Tec Model 549 Base Kit

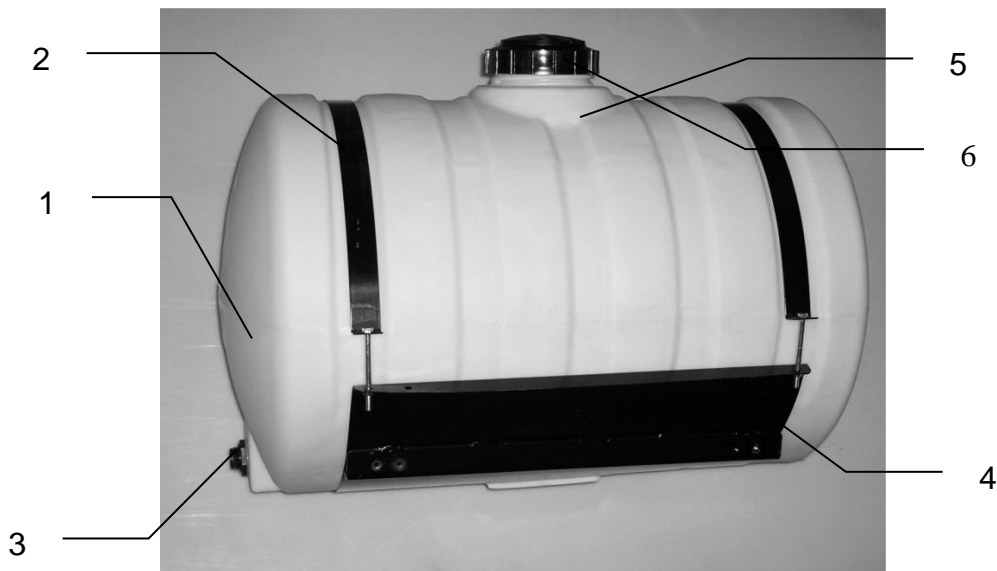

<u>Ref#</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	Tank	005-9023	1
2	Straps	001-4402	2
3	Tank Fitting	005-9100	2
4	Saddle	001-4703	1
5	Tank Cap	005-9022C	1
6	Tank Gasket	005-9022CG	1


PARTS BREAKDOWN FOR DRAIN FILL KIT

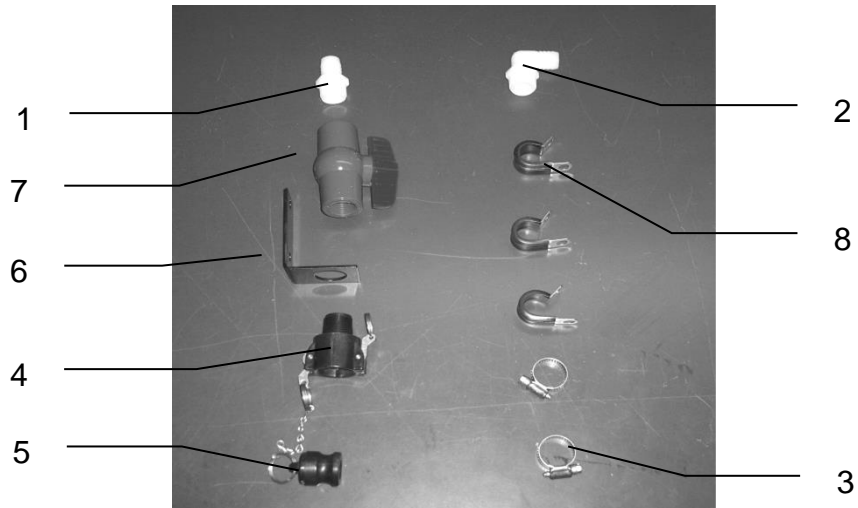

<u>Ref #</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>	<u>Ref #</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	Straight Fitting	003-A3434	1	5	Male Coupler	002-2205G	1
2	Elbow	003-EL3434	1	6	Valve Holder	001-6702H	1
3	Hose Clamps	003-9004	2	7	Ball valve	002-2200	1
4	Female Coupler	002-2204A	1	8	Jiffy Clip	008-9010	3

For AGCO part cross-reference visit: www.harvesttec.com/system.html


PARTS BREAKDOWN FOR PUMP MANIFOLD

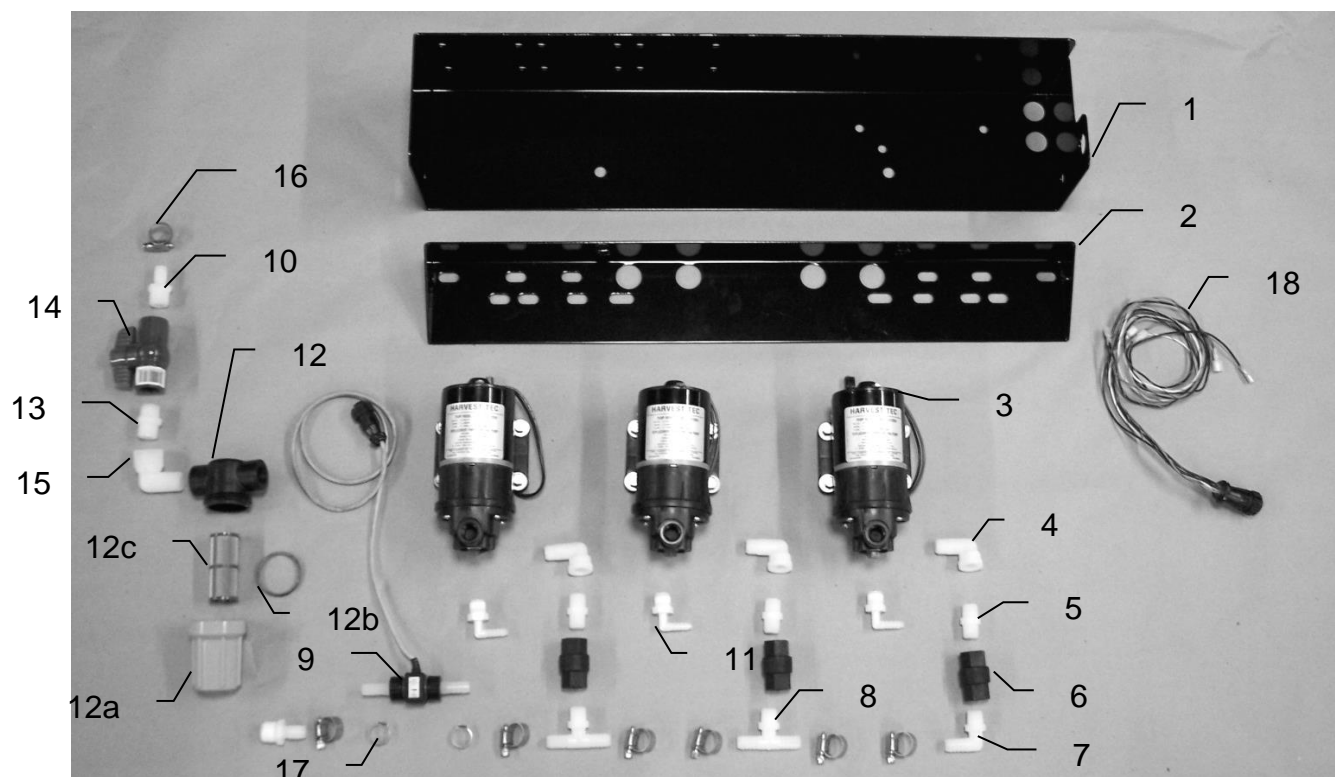


<u>Ref#</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Pump plate	001-4646D	1
2	Mounting Bracket	001-4646C	1
3	Pump	007-4120H	3
4	Street elbow fitting	003-SE38	3
5	Nipple fitting	003-M3838	3
6	Check valve	002-4566F	3
7	Elbow fitting	003-EL3812	1
8	Tee fitting	003-T3812HB	2
9	Flow meter assembly	006-4725A	1
10	Straight fitting	003-A1212	2
11	Elbow fitting	003-JEL1238	3
12	Filter bowl assembly	002-4315	1
12a	Filter bowl only	002-4315F	1
12b	Filter bowl gasket	002-4315D	1
12c	Filter bowl screen	002-4315B	1
13	Nipple fitting	003-M1212	1
14	Ball valve	002-2212	1
15	Street elbow fitting	003-SE12	1
16	Hose clamp	003-9003	7
17	Hose clamp (Flow Meter)	003-9005	2
18	Pump Cable	006-4660Z	1
NP	Pump rebuild kit (1 per pump)	007-4581	1
NP	Elbow	003-EL1212	1
NP	Not Pictured		

For AGCO part cross-reference visit: www.harvesttec.com/system.html

MOISTURE PAD AND HOSES PARTS BREAKDOWN

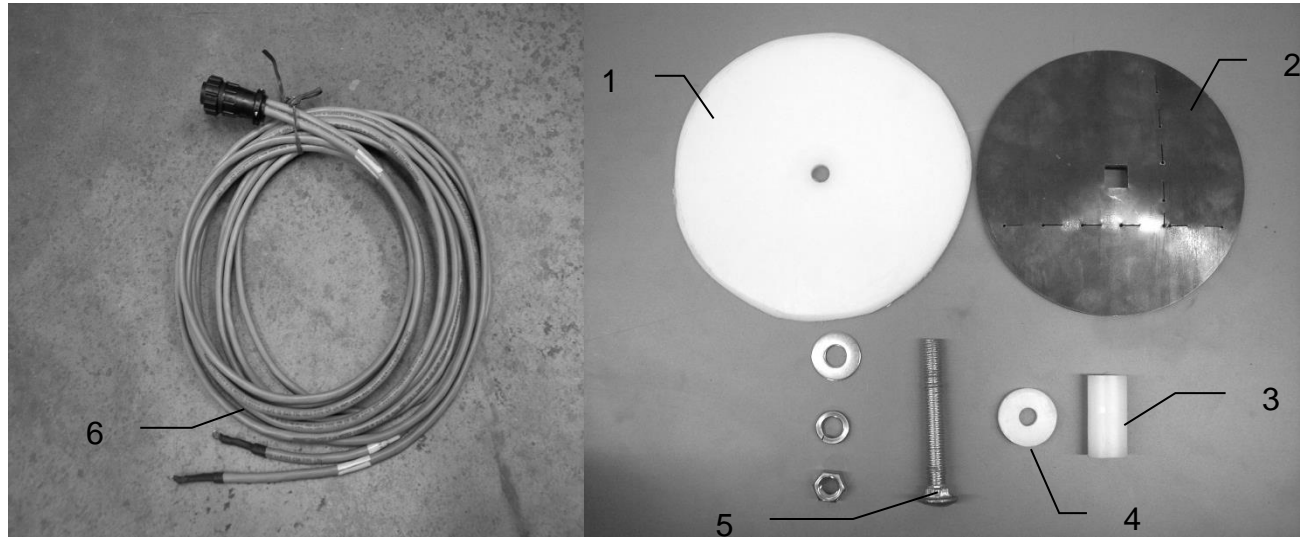

Ref#	Description	Part #	Qty
1	Plastic Pad	006-4641F	2
2	Moisture Disc	006-4641H	2
3	Plastic Bushing	006-4641G	2
4	Plastic Isolator	006-4641I	2
5	1/2X4 1/2" Carriage Bolt		2
6	Moisture Cable	006-4640G2	1
1-5	Moisture Pad Assembly	030-4643	2

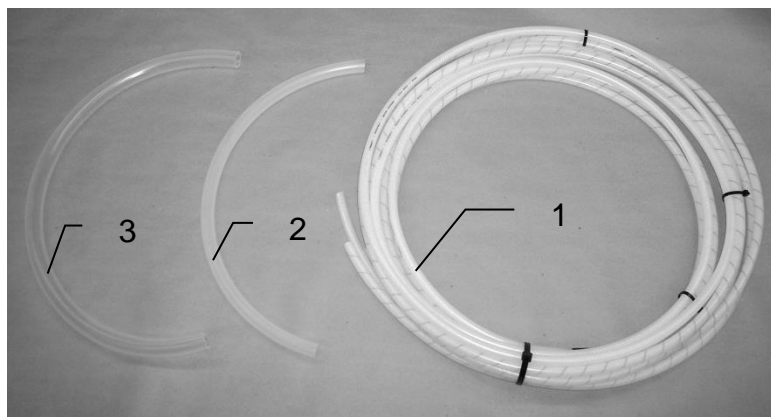

<u>Ref #</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	Triple Weld (pumps to tips)	002-9016	15ft
		002-9016B	15ft
		002-9016G	15ft
	Hose assembly	030-9016RB	1
2	1/2 Hose (tank to filter)	002-9001	6ft
3	3/4 Hose Drain Fill Line	002-9002	10ft

PARTS BREAKDOWN FOR CONTROL BOX AND WIRING HARNESES




<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Power & communication tractor	006-5650T	1
2	Pump controller harness	006-5650FC	1
3	Power & communication baler	006-5650RB2	1
4	Pump controller	006-5672	1
5	Precision Information Processor (PIP)	006-5671RB	1
6	Terminating resistor	006-5660Z	1
7	Ram mount	001-2012H	1
8	Display	006-5670	1
9	Bale rate timer	006-7400	1
10	Bale rate timer bracket	001-4648RB	1
11	Bale rate timer sensor extension	006-7400EXT	1
NP	Key switch wire	006-5650K	1
NP	Dust plug kit	006-5651PLUGS	1
NP	Not pictured		

For AGCO part cross-reference visit: www.harvesttec.com/system.html



HARVEST TEC MODEL 547 INSTALLATION KIT FOR CASE IH AND NEW HOLLAND RB, RBX, AND BR ROUND BALERS

Harvest Tec Model 447-SO Installation Kit

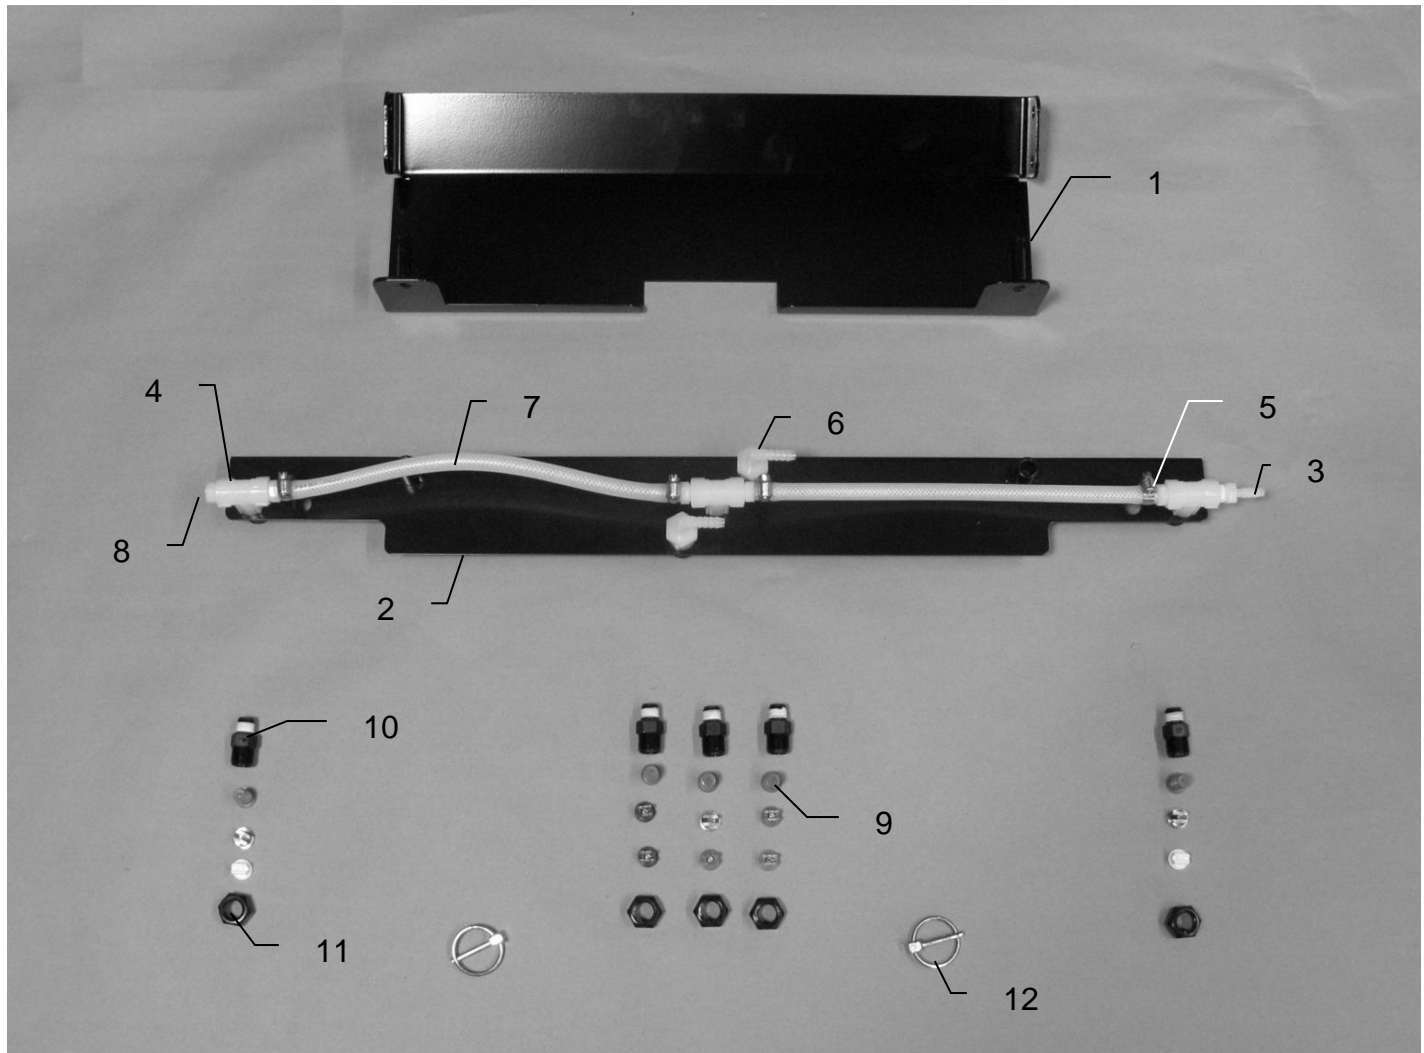

<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Shield bracket	001-4810BRH	1	NP	Tip – Low Output	004-650033-SS	3
2	Spray shield	001-4810B	1	NP	Tip – Low Output	004-XR110015VS	1
3	Straight fitting	003-A1414	5	NP	Tip – Low Output	004-XR11004VS	1
4	Tee	003-TT14	3	NP	Tip – High Output	004-650050-PT	2
5	Hose clamp	003-9002	7	NP	Tip – High Output	004-XR11001VS	1
6	Elbow	003-EL1414F	2	NP	Tip – High Output	004-XR11003VS	1
7	Hose	002-9016	3 ft	NP	Tip – High Output	004-XR11006VS	1
8	Plug	003-F14	1				
9	Tip strainer	004-4213-200	5	NP	Not Pictured		
10	Nozzle body	004-4722	5				
11	Nozzle cap	004-4723	5				
12	Lynch pin	008-4576	2				



Harvest Tec Model 4503B Installation Kit

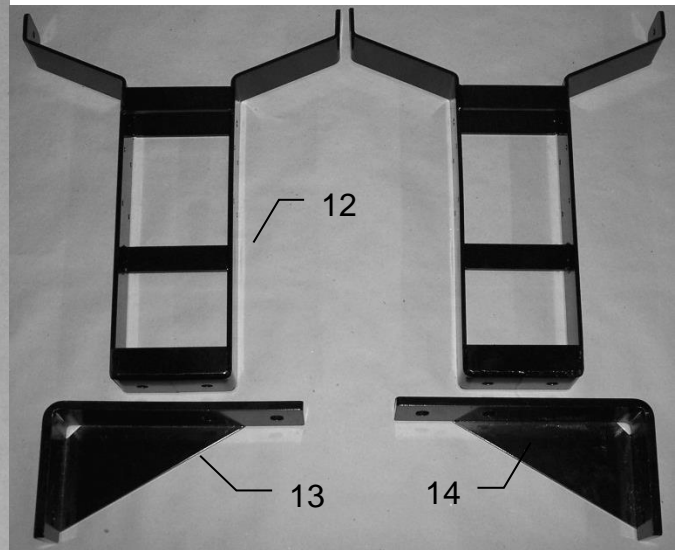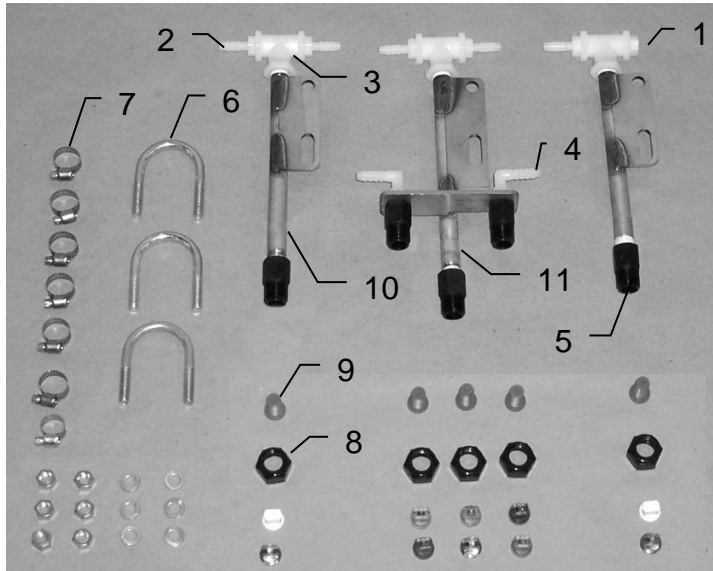

<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Plug	003-F14	1	Tip	004-650033-SS	3
2	Straight fitting	003-A1414	5	Tip	004-XR110015VS	1
3	Tee	003-TT14	3	Tip	004-XR11004VS	1
4	Elbow	003-EL1414	2	Tip	004-650050-PT	2
5	Nozzle body	004-4721	5	Tip	004-XR11001VS	1
6	U bolt	001-4714UBS	3	Tip	004-XR11003VS	1
7	Hose clamp	003-9002	7	Tip	004-XR11006VS	1
8	Nozzle cap	004-4723	5			
9	Tip strainer with check	004-4213-200	5			
10	Nozzle tube	001-4714P	2			
11	Nozzle tube auto	001-4714AP	1			
12	Saddle legs	001-4703B	2			
13	Left mtg bracket	001-4703EL	1			
14	Right mtg bracket	001-4703ER	1			
NP	PIP mount	001-4703BPM	2			
NP	45 degree elbow	003-SE4514	5			
NP	Jack extension	001-4703EXT	1			

For AGCO part cross-reference visit: www.harvesttec.com/system.html



Harvest Tec Model 4504B Installation Kit

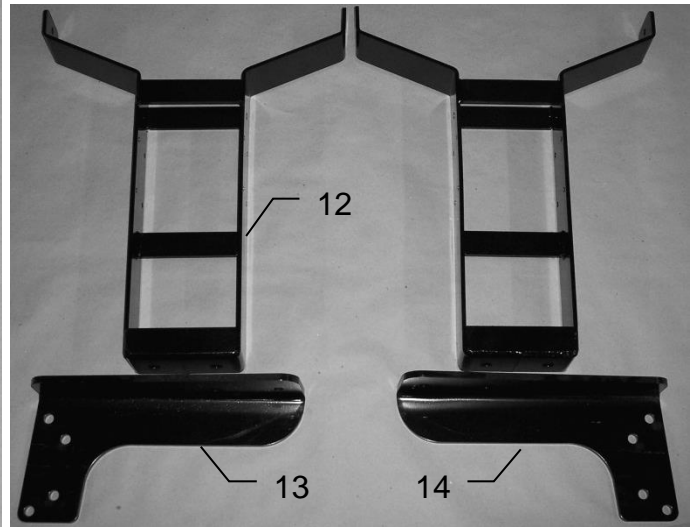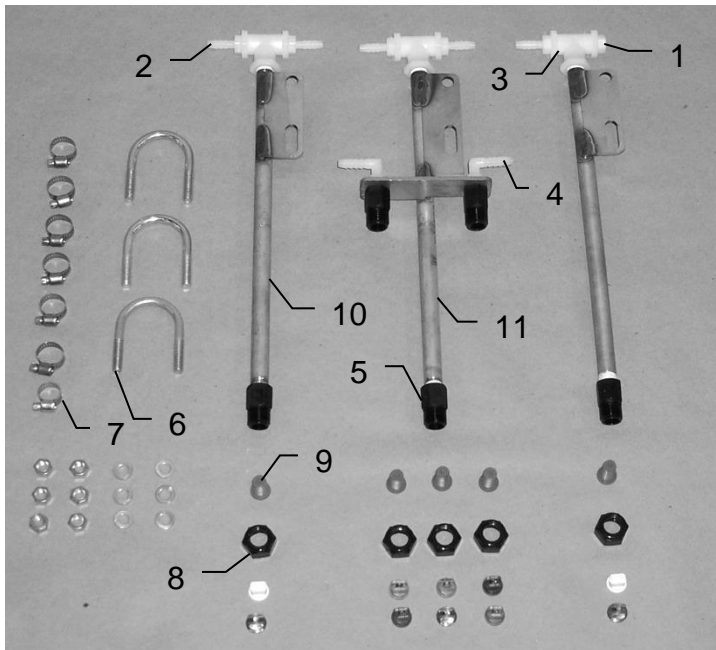

<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Plug	003-F14	1	Tip	004-650033-SS	3
2	Straight fitting	003-A1414	5	Tip	004-XR110015VS	1
3	Tee	003-TT14	3	Tip	004-XR11004VS	1
4	Elbow	003-EL1414	2	Tip	004-650050-PT	2
5	Nozzle body	004-4721	5	Tip	004-XR11001VS	1
6	U bolt	001-4714UBS	3	Tip	004-XR11003VS	1
7	Hose clamp	003-9002	7	Tip	004-XR11006VS	1
8	Nozzle cap	004-4723	5			
9	Tip strainer with check	004-4213-200	5			
10	Nozzle tube	001-4714	2			
11	Nozzle tube auto	001-4714A	1			
12	Saddle leg	001-4703B	2			
13	Left mtg bracket	001-4703DL	1			
14	Right mtg bracket	001-4703DR	1			
NP	PIP mount	001-4703BPM	2			

For AGCO part cross-reference visit: www.harvesttec.com/system.html


Harvest Tec Model 4505B Installation Kit

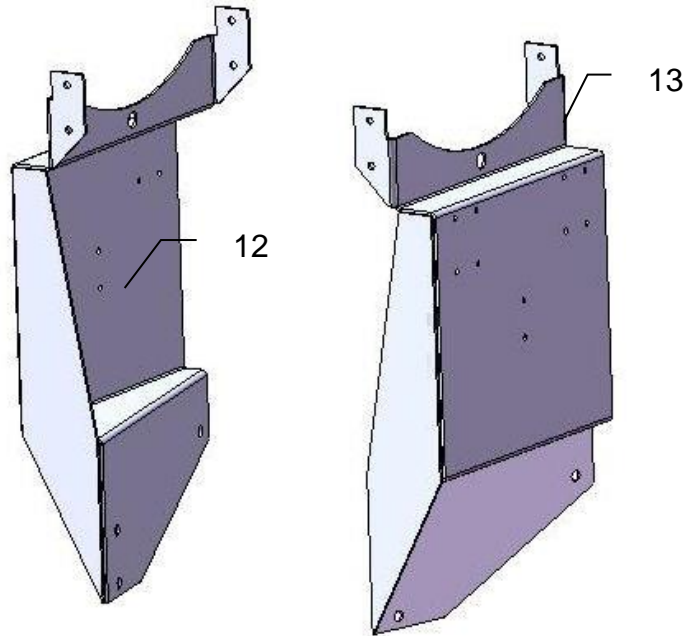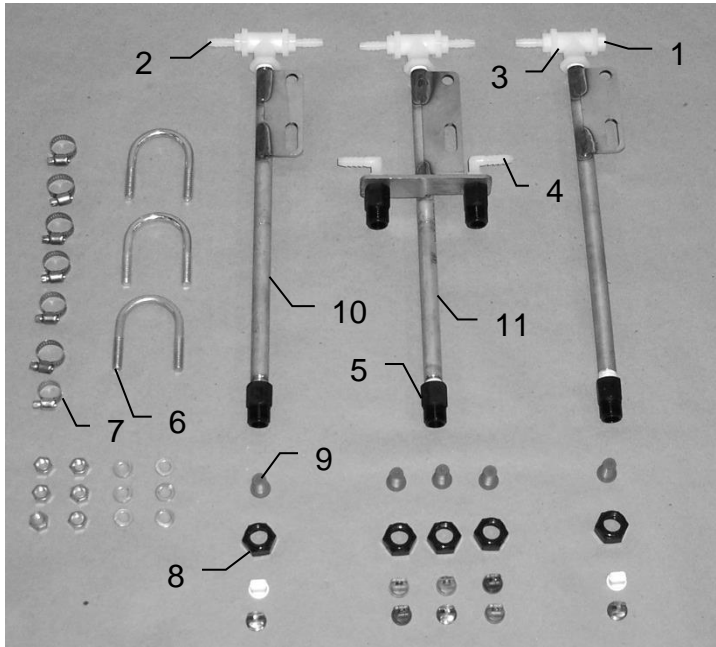

<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Plug	003-F14	1	Tip	004-650033-SS	3
2	Straight fitting	003-A1414	5	Tip	004-XR110015VS	1
3	Tee	003-TT14	3	Tip	004-XR11004VS	1
4	Elbow	003-EL1414	2	Tip	004-650050-PT	2
5	Nozzle body	004-4721	5	Tip	004-XR11001VS	1
6	U bolt	001-4714UBS	3	Tip	004-XR11003VS	1
7	Hose clamp	003-9002	7	Tip	004-XR11006VS	1
8	Nozzle cap	004-4723	5			
9	Tip strainer with check	004-4213-200	5			
10	Nozzle tube	001-4714	2			
11	Nozzle tube auto	001-4714A	1			
12	Left saddle leg	001-4703FL	1			
13	Right saddle leg	001-4703FR	1			

For AGCO part cross-reference visit: www.harvesttec.com/system.html


Harvest Tec Model 4508B Installation Kit

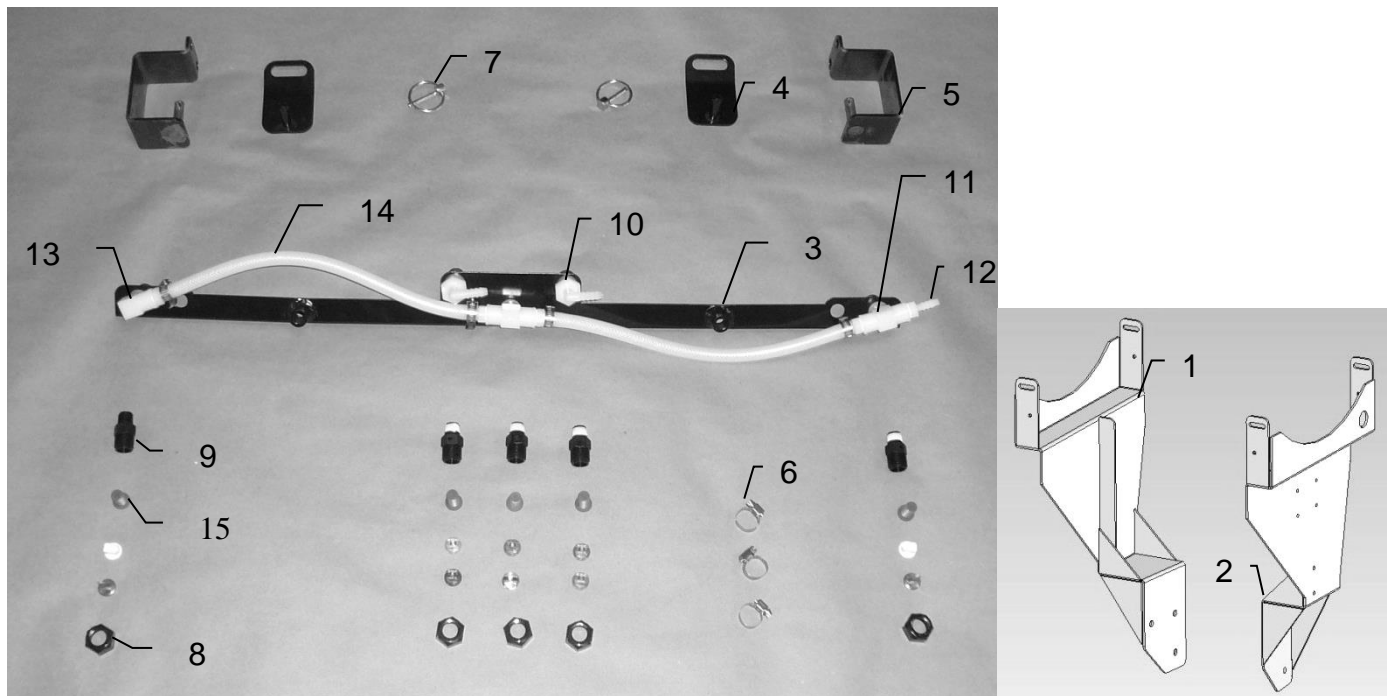


<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Left leg	001-4703L	1	Tip	004-650033-SS	3
2	Right leg	001-4703K	1	Tip	004-XR110015VS	1
3	Spray shield	001-4703GR	1	Tip	004-XR11004VS	1
4	Shield Holder	001-4703JB	2	Tip	004-650050-PT	2
5	Shield Holder	001-4703JC	2	Tip	004-XR11001VS	1
6	Hose clamp	003-9002	7	Tip	004-XR11003VS	1
7	Lynch pin	008-4576	2	Tip	004-XR11006VS	1
8	Nozzle Cap	004-4723	5			
9	Nozzle body	004-4722	5			
10	Elbow	003-EL1414F	2			
11	Tee	003-TT14SQ	2			
12	Straight fitting	003-A1414	5			
13	Elbow	003-SE14F	1			
14	Hose	002-9016	2			
15	Tip strainer	004-4213-200	5			

For AGCO part cross-reference visit: www.harvesttec.com/system.html

Harvest Tec model 4517B installation kit FOR JOHN DEERE 8 & 9 SERIES ROUND BALERS


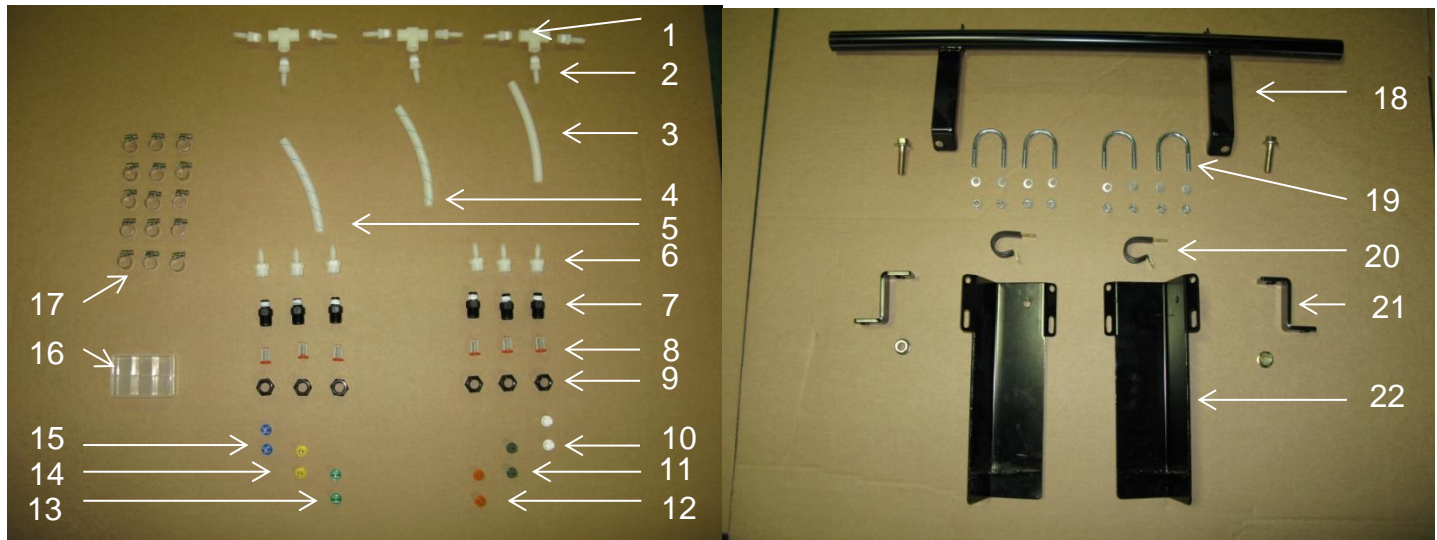


<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>	<u>Ref</u>	<u>Description</u>	<u>Part #</u>	<u>Qty</u>
1	Tee	003-TT14SQ	3	13	Tip-green	004-XR110015VS	2
2	Fitting	003-A1414	9	14	Tip-yellow	004-XR11002VS	2
3	Hose-White	002-9016	4 ft	15	Tip-blue	004-XR11003VS	2
4	Hose-Green Stripe	002-9016G	4 ft	16	Mini Plano Box	008-9001	1
5	Hose-Blue Stripe	002-9016B	4 ft	17	Hose Clamps	003-9002	15
6	Fitting	003-A1414F	6	18	Nozzle Holder	001-4703R	1
7	Fitting	003-4722	6	19	5/16" U Bolt	001-4714UBS	4
8	Strainer	004-4213-200	6	20	Jiffy Clips	008-9009	2
9	Fitting	004-4723	6	21	Spacer	001-4703NS	2
10	Tip-white	004-650050-PT	2	22	Nozzle Mount	001-4714J	2
11	Tip-olive	004-800067-PT	2	23	Saddle Leg	001-4703B	2
12	Tip-orange	004-XR11001VS	2	24	Right Mtg Bracket	001-4703DR	1
				25	Left Mtg Bracket	001-4703DL	1

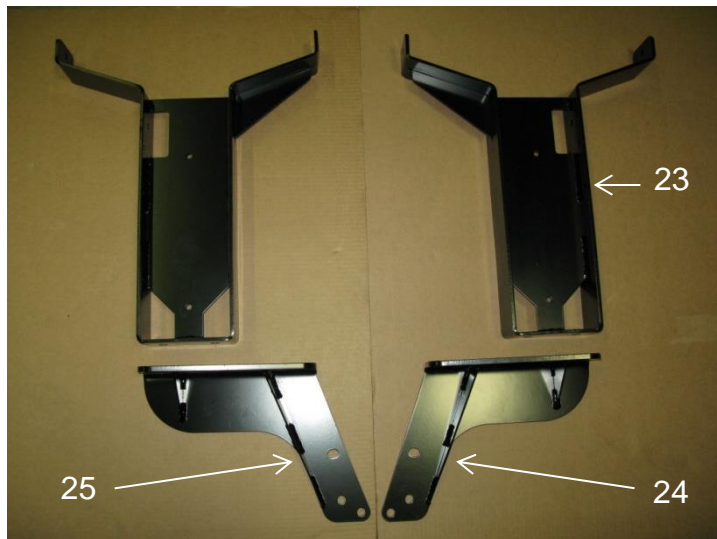

For AGCO part cross-reference visit: www.harvesttec.com/system.html

Harvest Tec Model 4524B Installation Kit

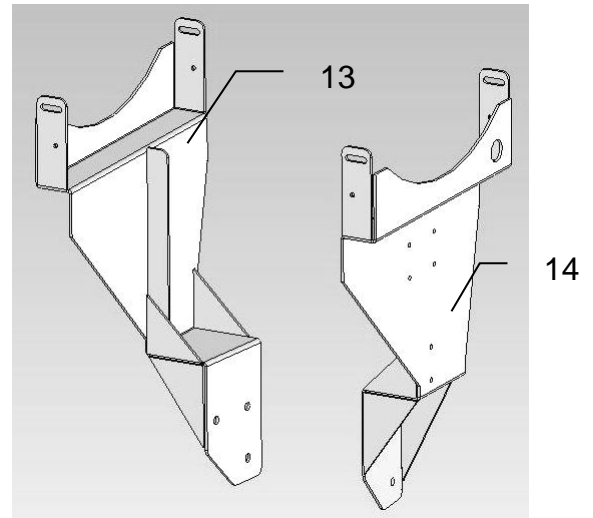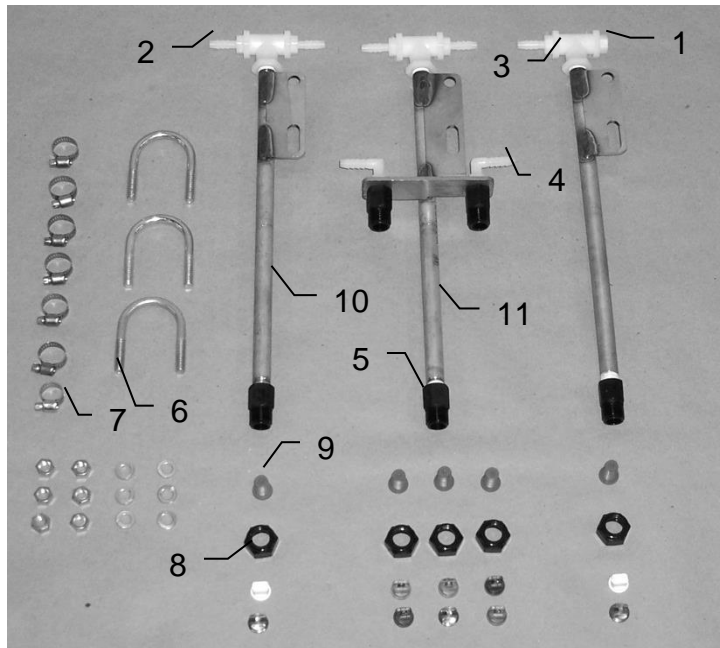

<u>Ref</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>	<u>Description</u>	<u>Part#</u>	<u>Qty</u>
1	Plug	003-F14	1	Tip	004-650033-SS	3
2	Straight fitting	003-A1414	5	Tip	004-XR110015VS	1
3	Tee	003-TT14	3	Tip	004-XR11004VS	1
4	Elbow	003-EL1414	2	Tip	004-650050-PT	2
5	Nozzle body	004-4721	5	Tip	004-XR11001VS	1
6	U bolt	001-4714UBS	3	Tip	004-XR11003VS	1
7	Hose clamp	003-9002	7	Tip	004-XR11006VS	1
8	Nozzle cap	004-4723	5			
9	Tip strainer with check	004-4213-200	5			
10	Nozzle tube	001-4714	2			
11	Nozzle tube auto	001-4714A	1			
12	Nozzle holder	001-4703R	1			
13	Left leg	001-4703L	1			
14	Right leg	001-4703K	1			

For AGCO part cross-reference visit: www.harvesttec.com/system.html

Selecting Tips-Reference Guide

The applicator is sent from the factory with High output tips installed. The tips used are determined by how many ton per hour you are baling at. You can see this on either the automatic or manual screen.

1 – 7 Tons of hay per hour

- Too low for system to apply at. Increase baling speed or rake more hay together. System will show over application when at these tonnages.

8 – 27 Tons of hay per hour (32 – 440 lbs of hay preservative per hour)

- Use low output tips
 - For most balers
 - Pump 1 = Qty 3 - (650033-SS) Silver
 - Pump 2 = Qty 1 - (XR110015VS) Green
 - Pump 3 = Qty 1 - (XR11004VS) Red
 - For John Deere 8 and 9 Series balers (2013 and newer)
 - Pump 1 = Qty 2 – (650050-PT) White
 - Pump 2 = Qty 2 – (800067-PT) Olive
 - Pump 3 = Qty 2 – (XR11002VS) Yellow

21 – 40 Tons of hay per hour (84 – 632 lbs or hay preservative per hour)

- Use high output tips
 - For most balers
 - Pump 1 = Qty 2 - (650050-PT) White and Qty 1 (XR11001VS) Orange in the center
 - Pump 2 = Qty 1 - (XR11003VS) Blue
 - Pump 3 = Qty 1 - (XR11006VS) Gray
 - For John Deere 8 and 9 Series balers (2013 and newer)
 - Pump 1 = Qty 2 – (XR11001VS) Orange
 - Pump 2 = Qty 2 – (XR110015VS) Green
 - Pump 3 = Qty 2 – (XR11003VS) Blue

For AGCO part cross-reference visit: www.harvesttec.com/system.html

NOTES

HARVEST TEC, LLC. WARRANTY AND LIABILITY AGREEMENT

Harvest Tec, LLC. will repair or replace components that are found to be defective within 12 months from the date of manufacture. Under no circumstances does this warranty cover any components which in the opinion of Harvest Tec, LLC. have been subjected to negligent use, misuse, alteration, accident, or if repairs have been made with parts other than those manufactured and obtainable from Harvest Tec, LLC.

Our obligation under this warranty is limited to repairing or replacing free of charge to the original purchaser any part that in our judgment shows evidence of defective or improper workmanship, provided the part is returned to Harvest Tec, LLC. within 30 days of the failure. Parts must be returned through the selling dealer and distributor, transportation charges prepaid.

This warranty shall not be interpreted to render Harvest Tec, LLC. liable for injury or damages of any kind, direct, consequential, or contingent, to persons or property. Furthermore, this warranty does not extend to loss of crop, losses caused by delays or any expense prospective profits or for any other reason. Harvest Tec, LLC. shall not be liable for any recovery greater in amount than the cost or repair of defects in workmanship.

There are no warranties, either expressed or implied, of merchantability or fitness for particular purpose intended or fitness for any other reason.

This warranty cannot guarantee that existing conditions beyond the control of Harvest Tec, LLC. will not affect our ability to obtain materials or manufacture necessary replacement parts.

Harvest Tec, LLC. reserves the right to make design changes, improve design, or change specifications, at any time without any contingent obligation to purchasers of machines and parts previously sold.

Revised 5/22

For Technical assistance:

**HARVEST TEC, LLC.
P.O. BOX 63
2821 HARVEY STREET
HUDSON, WI 54016
PHONE: 715-386-9100
1-800-635-7468
FAX: 715-381-1792
Email: info@harvesttec.com**

